

ZTE F858

HSDPA Multi band 3G Mobile Phone

User Manual

PC Software Requirements

Join Me PC Software included supports Microsoft Vista (only 32 bit), Windows 2000 with Service Pack 4 or Windows XP with Service Pack 2 only. 64 Bit systems are NOT supported.

Warnings and Safety Notices

Please read all the safety notices before using this device

Copyright © 2007 ZTE Corporation All rights reserved.

1st Edition November 2007

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation operates a policy of continuous development. ZTE Corporation reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

The user should refer to the enclosed warranty card for full warranty and service information.

Contents

RF Safety Information	6
General Safety Information	7
Support Information	9
Warranty Information	9
Key Layout	10
1 Getting Started	13
1.1 Install the USIM Card	13
1.2 Insert the Battery	14
1.3 Switch the Phone on and Connect the Charger.....	15
1.4 Charging and Battery life.....	16
1.5 Basic Navigation	17
1.6 Enter your Contacts.....	19
1.7 Edit your Contacts to Change Ringtones and Groups	21
1.8 Set Speed Dials.....	22
1.9 Make a Voice Call	23
1.10 Send an SMS (Text Message).....	25
1.11 Notes on Text modes and Predictive Text.....	26
1.12 Emergency Calls	28
1.13 Personalise your Phone	29
1.14 Using File Manager.....	34
1.15 Make a Video Call	38
1.16 Receive a Video Call	39

1.17	Set Alarms and Appointments	40
1.18	Send an E-mail	42
1.19	Take Pictures and Videos.....	43
1.20	Send a Multimedia Message (MMS)	45
1.21	Receive a Multimedia Message (MMS).....	46
1.22	Access the range of Telstra Services using Telstra My Place	46
1.23	Download Pictures, Ringtones, Games and more	47
1.24	Use your Phone as a Music Player (MP3 Player).....	48
1.25	Using the T-Flash card	50
1.26	Synchronize with a network server (SyncML).....	52
2	Advanced Operation	53
2.1	Use Join Me to Connect your Phone to your PC	53
2.2	Installing Join Me	54
2.3	Use Join Me to Copy your Pictures to your PC.....	55
2.4	Use Join Me to Copy Music Files from your PC to your Phone	57
2.5	Enter your Contacts using Join Me.....	59
2.6	Import your Contacts from Microsoft Outlook	61
2.7	Use Join Me to Connect your PC to the Internet	62
2.8	Send a Fax from your PC.....	63
2.9	Connect to a Bluetooth Device.....	64
2.10	Dial Up Networking via USB or Bluetooth.....	68
2.11	Other Facilities	70
2.12	Advanced Message Settings.....	74
2.13	Advanced Handset Settings	76
2.14	Advanced Call Settings	78
3	Technical Information and Help.....	80

3.1	Troubleshooting and FAQ's	80
3.2	Glossary of Terms	82
3.3	Technical Parameters.....	83
4	Environmental Statement	84
5	Menu Listing	86

RF Safety Information

The handset has an internal antenna located under the bottom of the keypad. For optimum performance with minimum power consumption do not cover the antenna area with your hand. Hold the handset between thumb and finger on the main hinge section. Covering the antenna affects call quality, may cause the handset to operate at higher power level than needed, and may shorten talk and idle times.

Radio Frequency Energy

Your handset is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves). The transmit power level is optimized for best performance and automatically reduces when there is good quality reception. Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low. Under poor network conditions the phone will transmit at a higher power, may get hot and will have a significantly shorter battery life.

Declaration of Conformity

We declare under our sole responsibility that the product(s) detailed in this manual, and in combination with our accessories, conform with the essential requirements of The Radio Communications Standard (Electro-magnetic Radiation Human Exposure) 2003 and the Australian Communications and Media Authority Section 376 of the Telecommunications Act 1997.

General Safety Information

The handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and pay attention to the following points:

- Handle the handset with care. Do not drop or throw the handset down roughly.
- Do not immerse in any liquid. The handset contains a liquid detection sticker and the warranty will be voided by any liquid damage.
- Do not place the handset near computer disks, credit cards, and other magnetic media. The information contained on disks or cards may be erased or damaged.
- Do not leave the handset or battery in direct sunlight or near other heat sources where the temperature could exceed 45 °C.
- Keep the handset, battery, charger and any other accessories away from children.
- In the unlikely event of a battery leak avoid contact with your eyes or skin. In the event of contact please flush thoroughly with water and consult a doctor.
- Observe and obey warning signs at petrol stations, airports and hospitals.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected by the handset.
- Take care not to allow metal objects such as coins or keys to come into contact with the battery.
- Do not dispose of batteries in a fire.
- Do not throw used batteries into household rubbish, return them to a recycling point. (see Chapter 4)
- Do not connect the handset to any other chargers or cigarette lighter chargers.
- Only use the supplied charger.
- Be careful not to pierce the battery with sharp objects and do not use damaged batteries.

- Do not disassemble or modify the battery.
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal condition is detected during use, charge, or storage.
- Do not put the battery in your mouth.
- Only use original replacement batteries.
- Do not attempt to dismantle the handset or any of its accessories.
- Do not place the handset close to the edge of a table in case it moves when set on vibrate mode.
- Do not put the handset into a microwave oven, dryer, or high-pressure container.
- Do not use your handset while driving or operating other machinery.
- Do not use the handset where blasting is in progress.
- Switch your phone off when boarding aircraft.
- Do not leave your handset at the bottom of a bag where it may be damaged by sharp objects.
- Do not leave the handset discharged or disconnected for a long time, otherwise your personal data may be lost.
- Remember to make backup copies of all important data on your handset.
- Take care when your phone is in your pocket. Sitting down may damage the handset.
- It is normal for the handset to become warm while the battery is being charged.
- Under poor network conditions battery life is considerably reduced.
- When the battery is thrown away cover the terminals with insulating tape.
- Please recycle the packaging and all parts as stated in Chapter 4.
- Emergency service coverage is dependant on network availability and battery status.

Support Information

- For Warranty Service ONLY, in the event of a faulty handset, please ring 1800 670 796.
- All calls for PIN number enquiries, Network problems, Telstra Next G Services, BigPond account information, Web Access, Account and Billing Information, USIM card registration and general enquiries should be directed to Telstra on 125 111.

Warranty Information

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

Key Layout





Notes

- The handset is available in various colours. For illustration purposes only the above images are shown in black.

- There is no key lock available. This is common to clam shell designs because the keys are protected by closing the flip.
- Long press (press and hold) the # key to engage meeting mode (silent with vibrate).


Display Icons

	Signal Strength of the GPRS Network		Battery Level Indicator
	Signal Strength of the 3G Network		Missed Call
	New SMS or MMS Message		Missed Video Call
	SMS or MMS Memory is Full		Call Forward is Active
	New E-mail		Silent Mode
	New Wap Push Message		Vibrate mode enabled
	Headset and Vibrate Mode		Headset Mode
	E-mail Memory is Full		GPRS Attach
	Wap Push Message Memory is Full		PDP Context Established (Data)
	Roaming		Signal Strength of the EDGE Network
	Alarm is set		Bluetooth ON

1 Getting Started


1.1 Install the USIM Card

The **USIM card** (Universal Subscriber Interface Module) is the small plastic chip with gold contacts supplied by Telstra. This contains your phone number and acts as a store for your contacts. It can be moved between different phones if required. Insert this with the gold contacts facing down and the bevelled edge on the left hand. Slide it into the carrier as shown below:

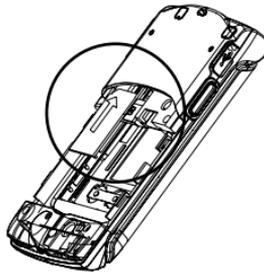


1.2 Insert the Battery

Insert the battery carefully with the contacts located against the gold springs. The battery will only fit one way.

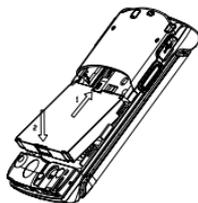

Close the case by locating the plastic cover into the grooves and *sliding* the cover up to close it. Do NOT force the cover down by pressing on it. This will damage the cover.

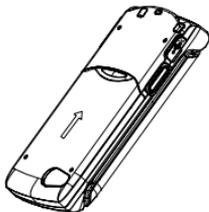

Slide the cover up gently

1.3 Switch the Phone on and Connect the Charger


Press and hold the  key for two seconds to switch your phone on. The phone will take approx 30 seconds to start up. The start up screen below is referred to throughout the manual as the **Home Screen**:



Charge your Phone

Insert the charger lead *carefully* with the arrow facing the top of the phone. The lead only fits one way. Do **NOT** use excessive force. Check it is the right way round before insertion.

You can also charge your phone by connecting it to your PC using the **USB data lead** supplied. Please see the Advanced Section for more details on PC applications.

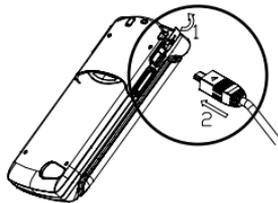

1.4 Charging and Battery life


- Only use the charger supplied.
- Normal charge time is 2-3 hours.
- When not using the phone for a long period remove the battery and store it in a cool dry place.
- Do not leave the phone connected to the charger for more than 24 hrs.
- If the battery is not fully charged after 8 hours please stop charging.
- Charge the battery between 0°C~50°C. If the temperature of the handset is too high, switch it off and let it cool.
- Battery life can be maximized by regularly allowing the phone to fully discharge before recharging the battery.
- Charge the battery promptly when flat.
- Under poor network conditions (less than 2 bars) it is normal for the battery to only last 1 day.
- To maximize battery life turn off Bluetooth and reduce the back lighting to 10 seconds (see Section 1.13 - 'Personalise your Phone').
- You can charge your phone in the ON or OFF state. When the phone is OFF you will see the Charging Battery animation. When your phone is ON the battery indicator will animate until charging is complete.
- Remember to switch your phone back on after charging in the OFF state by long pressing the  key.

1.5 Basic Navigation

From the **Home Screen** press the **left select Key** to access the **Main Menu**:



Home Screen

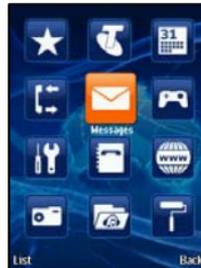

Main Menu

The icons are described underneath each icon as it is highlighted.

Arrow Keys

Use the **Arrow Keys** to move around the **Main Menu**, to move the cursor and to access Shortcuts.

Up (Access the ticketape information)

Left (Navigate Left through icons)



Right (Navigate Right through icons)

Down (Shortcut to Contacts)

Select Keys

The two keys at the top of the keypad are called the **Select Keys**.



The left and right **Select Keys** are used to choose the options from the bottom of the screen. In the above example the **Left Select Key** opens the **Menu** and the **Right Select Key** opens **Options** for the Home Screen.

Back and Exit Keys

Press  key to go back one step or the  key to **Exit** to the **Main Menu**.

1.6 Enter your Contacts

There are several methods available to enter contacts into your phone. The Getting Started Section deals with adding your contacts manually and copying contacts from a previous SIM card. See the Advanced Section for adding contacts from your PC and importing contacts from Microsoft Outlook. All contacts can be stored in **Groups** for easy management.

Adding Your Contacts Manually

- At the Home Screen enter the phone number on the keypad then press the **Left Select Key** to Save.
- Press the **OK Key** to Create New Contact.
- Add the persons name using the abc keys (see notes on entering text in section 1.11).
- Press the **OK Key** to Save.

Copy Contacts from a previous SIM Card

- Insert your old SIM card. Switch the phone on and press the **Down Arrow Key** to enter **Contacts**.
- Press the **Right Arrow key** once for USIM to show the list of Contacts from your old SIM card.
- Press **Options, More, Copy all to phone**, press **OK** to Select and then press **Yes** to confirm.

Add a contact from a received call number

If someone calls you and you wish to save their number as a new contact, perform the following:

- Press the  key to bring up your Call List.
- The last call received will be at the top of the list.
- Press the **Right Select Key** to **Save** the number.
- Enter the contact name and any other details and press the **OK Key** to **Save**.

Add a contact from a received SMS (Text Message)

You can save a Contact from a received SMS:

- Press **OK Key** (or other key if you have changed it) to access your SMS Menu and go to your Inbox.
- View the required message and press **Options**. Press **Use highlight object** to save the number.
- Choose **New Contact** to create a new contact from the received SMS number.

Searching Contacts

You can search your contacts by pressing the letter keys that correspond to your contact name. From the contacts list press any letter key to bring up the contacts associated with that letter.

1.7 Edit your Contacts to Change Ringtones and Groups

Once you have added some contacts you can edit them to change the Group and to set a personalised Ring Tone.

- Contacts are normally stored in the default Group, Unclassified.
- You can move your contacts into other Groups: Mates, Family, Friends, Work, and VIP.
- Regardless of Group, all your contacts are displayed under Handset.
- From the Home Screen go to your Contacts list by pressing the **Menu Key—Contacts** or just press the **Down Arrow Key**.
- Use the arrow keys to search and press **OK** to **View** the required Contact.
- Press **OK key** to Edit the Contact.
- When you are in Edit mode you can assign a specific Group and change the Ringtone if desired.
- Use the **Down Arrow key** to navigate through the menu.
- Use the **Right Select Key** to Modify the incoming ringtone.
- Use the **Left or Right Arrow keys** to change Groups.
- Changing the ringtone to a personalised tune will let you recognise key callers instantly by their unique tune.

1.8 Set Speed Dials

Once you have entered some contacts you can assign speed dial keys to your chosen contacts:

- Press **Down Arrow Key** (or other key if you have changed it) to enter the **Contacts** menu.
- Use the Arrow Keys to scroll to the contact you wish to assign a Speed Dial Number.
- Press the **Left Select Key** for **Options**.
- Press **3** or scroll down to item 3 for Set Speed Dial.
- Assign your chosen contact to the next available number (1, 2 and 3 are preset and cannot be changed).
- Press the **OK Key** to **Setup** the speed dial or press **OK Key** again to cancel.
- Press the  key to exit when finished or the back key to choose another contact.

Make a call using Speed Dial

- From the Home Screen press and hold the required Speed Dial Key to make a call to that contact.
- E.g. A long press on the 1 key will automatically dial your voicemail number.

1.9 Make a Voice Call

Dial the number manually

- If required press the * key twice for the International Prefix '+’.
- Enter the number on the keypad and press the  key to make the call.
- When the call is connected you can press the **OK Key** for **Handsfree** mode.
- Press the  key to end the call.

Choose a number from your Contacts list

- Press **Down Arrow Key** (or other key if you have changed it) for the **Contacts** menu.
- Use the **Up and Down Arrow Keys** to scroll to your chosen contact.
- Press the  key to make the call.
- When the call is connected you can press the **OK Key** for **Handsfree** mode.
- Press the  key to end the call.

Tip – Call the number received in an SMS or E-Mail message

If you receive an SMS or E-mail message with an embedded number you can easily call that number. Use the arrow keys to highlight the number then simply press the Call key .

Choose a number from your recent call list

- Press the  key to bring up your call list. Press again for Last Number Redial.
- Use the Up and Down Arrow Keys to scroll to the desired number.
- Press the  key to make the call.
- When the call is connected you can press the **OK Key** for **Handsfree** mode.
- Press the  key to end the call.

Notes

- During a call you can change the earpiece volume using the side Volume keys.
- The microphone is next to the  **key**. Be careful not to block it with your hands.
- Press the **Left Select Key** for further options during a voice call. Use the **Back key** to return to the call menu.
- **Hold**: Puts the current call on hold. You can dial a third party. Press hold again to switch your two calls.
- **End call**: End a call.
- **Record**: Record the current call. The audio file will be saved to the My Audios folder.
- **DTMF Off/On**: Enable or disable sending DTMF tones. **Default is ON**.
- **New text message**: Switch to SMS interface during a call.
- **Contacts**: Switch to Contacts interface during a call.

1.10 Send an SMS (Text Message)

From the **Home Screen** select the **Messaging icon** and press the **OK Key** to open the Messages Menu:

- Press the **OK Key** to select New Message.
- Press the **OK Key** to select Text Message.
- Press the **OK Key** to select from your Contacts list or enter your number manually.
- Select the chosen contact and press the **OK Key** twice to enter your contact.
- Press the **Down Arrow key** twice to move the cursor into the text field.
- The default text mode is Predictive Text indicated by the eZiEng symbol (see 1.11 for more details).
- Enter your text by pressing the corresponding keys once for each letter you require eg 43556 for hello.
- If the word is wrong press the * key to toggle between available words
- Press **Options** to access **My Words** to add your own words to the dictionary (see 1.11).
- To change into conventional abc text mode press the # key to toggle between **eZiEng**, **123**, **ABC** and **abc** modes.
- When completed press the **Right Select Key** to **Send** your message.

1.11 Notes on Text modes and Predictive Text

- Your current text mode is indicated by **eZiEng**, **123**, **ABC** or **abc** displayed directly beneath the battery symbol.
- Use the **# key** to switch between different text modes **eZiEng** (predictive text), **123**, **ABC** and **abc**.
- In **ABC** or **abc** mode press the key with the required letter once for the first letter, twice for the second letter etc.
- To insert a space press the **0 key**. To delete letters press the **Clear key**.
- If the next letter is on the same key, wait until the cursor appears or press the **Right arrow key** to move the cursor on.
- Press the **1 key** for common punctuation marks in **ABC** or **abc** mode.
- Press the *** key** for special characters.
- **Predictive text (eZiEng)** is based on a built-in dictionary and generates words from the combination of letters pressed.
- In **eZiEng** mode press the letter keys once for each letter. For example to write “set”, press 738.
- In **eZiEng** mode when you finish writing a word and it is correct press **OK** to confirm. If the word is not correct use the *** key** to toggle between different available words and press **OK** to confirm. Press **Options for My Words** to add your own words to the dictionary.
- In text input modes (eg SMS, MMS and E-Mail) you can add your own words to the built-in **Dictionary** which is called **My Words**. Press the **Options** key to access **My Words**.

My Words

- From the text entry mode press the **Options** key and press **OK** for **My Words**.
- (The first time you use **My Words** press **OK** to add a new word).
- Press **Right Select Key** to **Add** a new word then press **Ok** to **Save** it.
- In **My Words** you can press the **Options** key to **Edit**, **Delete** or **Delete all** words.

Unicode Characters and SMS Message Length



The underlined characters in the above chart are Unicode Characters. This means that they are not part of the standard SMS character set and they require 2 SMS characters to transmit them. Normal SMS message length is 160 characters. If you exceed this the message will be sent by 2 SMS Messages. If you use any of the underlined characters in your message the message length is limited to 70 characters. If you exceed 70 characters then the message will be sent using 2 SMS messages.

1.12 Emergency Calls

To make an emergency call during normal use

- 1 Ensure that your handset is switched on and in service.
- 2 Press the  key repeatedly to clear the display and return to the **Home Screen**.
- 3 Enter the emergency number for your present location using the keypad, (eg 000).
- 4 Press  key to call the number. Follow instructions received and do not end the call until told to do so.

To make an emergency call without a USIM Card

When the (U)SIM card is not inserted enter the emergency number and press  or  to make the call.

Notes

- Tell the operator which service you require. Give your position and remain stationary to get the best coverage.
- Due to the nature of the cellular system the connection of emergency calls cannot be guaranteed.
- Never rely solely on any wireless device for essential communications like medical emergencies.

1.13 Personalise your Phone

There are many ways to change the look and feel of your handset such as changing the theme, setting up shortcuts, changing the background screen (wallpaper) and choosing your own ring tone etc.

Themes let you change the look of your screen display including the colour scheme, icons, background image & menu layouts. You can choose from 4 existing themes.

Shortcuts let you access your favourite actions directly from the home screen - fast access to services and content you use often. You can assign up to 12 actions to the Shortcuts menu.

Advanced options such as loading your own music and picture files from a PC are dealt with in the Advanced section of the manual. Advanced users will be able to explore the menus and set their preferred options as all the menus are intuitive and self explanatory.

Change the Theme

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Change Theme**, press the **OK Key**.
- Choose a theme from the available list and press **OK Key** to confirm.
- You will be asked to confirm that you wish to change your wallpaper setting. Press the **Left Select Key** to confirm your choice.
- You will be taken back to the Home Screen with your new theme selected.

Add a Shortcut

- From the Home Screen press the **Right Select Key** to select **Options**.
- Select **Shortcuts** and press the **OK Key**.
- Select an empty <Add Shortcut> slot and press the **OK Key**.
- Select your favourite function from the list provided.
- Press the **OK Key** to assign this function to this shortcut.
- Your updated Shortcuts menu is displayed.

Delete a Shortcut

- From the Home Screen press the **Right Select Key** to select **Options**.
- Select **Shortcuts** and press the **OK Key**.
- Select the Shortcut and press the **Left Select Key** to access the **Options** menu.
- Select the **Remove Shortcut** option from the menu.
- Press the **Left Select Key** to confirm the choice.
- Your updated Shortcuts menu is displayed.

Change the Background Screen (Wallpaper)

- From the Home Screen press the **Right Select Key** for **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press **OK Key** to select **Wallpaper**. This opens the **File Manager** application.
- Press the right arrow key to access the **T-Flash** folder or press **OK** to open the **Photos** folder. Select from the available **Wallpapers** or **My Pictures** folders.
- Press **OK** to open the required folder, choose a picture and press **Set** to confirm.

Change your Ringtone

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press the **Right Arrow key** twice to get to **Profiles**.
- Press the **Right Select Key** to **Edit** your current profile.
- Press the **OK Key** to modify the Ringtone.
- Browse to **Audios, Ring** to see the available built in tones.
- In the advanced section you can download and choose your own music files as the ringtone.

Switch on Vibrate Mode - Long press the # Key to enable Meeting Mode

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press the **Right Arrow key** twice to get to **Profiles**.
- Press the **Right Select Key** to **Edit** the profile.
- Go to 4) **Ring Mode** and press the **OK Key** to modify.
- Select the required mode and press the **OK Key** to confirm.

Mute the Handset with a Single Key Press

- You can **mute** your handset and switch it to vibrate mode by pressing and holding the # key.
- Press and hold the **# key** to engage and disengage **mute**.

Switch the Key Tones off

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press the **Right Arrow Key** twice to get to **Profiles**.
- Press the **Right Select Key** to **Edit** the profile.
- Go to 6) and switch them off if you prefer to have silent keys.

Change the Screen Brightness

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Go to 4) for **Brightness**.
- Use the Up and Down arrows to set your desired level.

Change the Backlight Duration

Reducing the backlight duration to 10 seconds can improve battery life.

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Go to 3) for Backlight Duration.
- Set the desired time out for the backlight.

Disable or change the PIN Number

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press the **Right Arrow Key** three times for Security.
- Press **OK** to Select Activate Security Codes.
- Press **OK** to Select PIN code.
- Switch ON or OFF and enter the PIN number to confirm.
- To change the PIN Number select Change Security Codes.
- Press **OK** to update PIN code.

Notes on PIN Codes

- PIN Code is provided by Telstra.
- PIN2 Code is an additional PIN for your (U)SIM card and is not normally used.
- Handset Lock is an additional PIN code used when you switch on the phone.
- If you forget your Handset Lock code your handset will need to be repaired and you will lose your content. It cannot be reset after it is locked.

Open Flip to Answer

- From the Home Screen press the **Right Select Key** to select **Options**.
- Press the **Down Arrow** and select **Settings**, press the **OK Key**.
- Press the **Right Arrow key** four times to get to **Call** (Settings).
- Go to 8) **Open flip to answer**, Press **OK** and select **On** and press **OK** to save.

1.14 Using File Manager

All user files and downloaded content are stored in the File Manager section of the handset. Browse the folders to find all the user accessible files that are stored on the phone and on the T-Flash Card.

From the Home Screen press **Left Select Key** for the **Main Menu**, then go to Tools and press **OK**.

- Go to **File Manager** and press the **OK Key** to open the Phone File Manager menu.
- The Phone File Manager folder structure is:
 - **Photos**
 - Pictures Link to BigPond Photos
 - Wallpapers Contains background screens for the handset
 - My Pictures Default directory for pictures taken on the handset
 - **Audios**
 - Audios Link to BigPond Music
 - Ring Contains the pre-loaded Ring Tones
 - My Audios Storage for your own Audio files (MP3 etc)
 - BigpondMusic Link to BigPond Music
 - **Videos**
 - Videos Link to BigPond Videos
 - My Videos Default directory for videos you take on the handset

- **Others**

Downloaded Internet files, Bluetooth and MMS files

TFlash Card

Your handset is equipped with a Micro SD card slot to expand the phone's available memory up to 2GB. You can store images, videos, music files, voice data etc on your T-Flash card.

- From the **Home Screen** press the **Left Select Key** for the **Main Menu**. Go to **Tools** and press **OK**.
- Go to **File Manager** and press the **OK Key**.
- Press the **Right Arrow key** to navigate to the **TFlash card**.
- You can see all your folders and files that are stored on the card.
- Select a folder and press the **Left select key** for **Options**:
 - **New folder**: Create a new folder.
 - **Delete**: You can delete the selected folder.
 - **Delete all**: You can delete all the folders.
 - **Rename**: You can rename the selected folder.
 - **Folder information**: Show information about the selected folder.
 - **Space information**: Show the usage information of handset.

Note

You can create a shortcut to the File Manager and to the T-Flash card using the **Shortcut** menu function described in section 1.13.

Press **OK key [Select]** to open a folder and select a file. Press **Left select Key** for **Options**:

- **Send**: You can send the selected files via MMS, Email or Bluetooth
- **Set as ringtone/wallpaper**: You can set the selected audio file or picture as ringtone or wallpaper.
- **Add to playlist/slide**: You can add the selected audio file or picture to playlist or slide.
- **Move to**: Move the selected file to other folder.
- **Copy to** : Copy the selected file to other folder.
- **Rename**: You can rename the selected file.
- **Delete**: You can delete the selected folder.
- **Delete all**: You can delete all the folders.
- **Mark all files**: Mark all the files in the folder.
- **File information**: Show information about the selected folder.
- **Space information**: Show the usage information of handset.
- **New folder**: Create a new folder.


Press **OK key [Open]** to open the selected file.

Press the **Right select key [Mark]** to mark the selected file and press the **Right select Key [Unmark]** again to cancel the selection.

Note

When playing a video file you can change to landscape mode by pressing Full Screen.

1.15 Make a Video Call

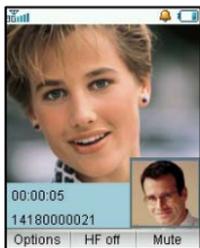

- You need good quality 3G coverage with at least 3 bars of signal to make and receive video calls.
- Enter the phone number using the keypad or from your Contacts list.
- Press  to make a video call.
- Press  to end the call.
- If the call is not successful you will be asked if you want to try a voice call instead.

Press the **Left Select Key** for the following options during a video call:

- **Hold/Cancel hold:** Sends a still picture instead of your own image and the voice is muted
- **Start recording video:** Records video from the other party (i.e. received video stream).
- **Block/Send my picture:** Block / Send your own image to the other party.
- **Use back/front camera:** Select the back/front camera.
- **Brightness:** Adjust the brightness.
- **Zoom:** Change the magnification of your own image.
- **Own picture off/on:** Hide or show your own picture on the local screen.
- **Exchange PIP:** Swap the Picture in Picture display the other way round.
- **New text message:** Send SMS during a video call.
- **Contacts:** Switch to Contacts interface.

1.16 Receive a Video Call




You will only be able to receive a video call when you have good 3G coverage. If you are browsing or playing video or audio files then the browser or media player will be suspended in the background while you answer the video call. When the call is finished you can resume your previous operation.

When you receive an incoming Video call

- You will receive an incoming video call notification.
- Press the **Video call key** to receive the video call.
- Press **End key** to end the video call.

1.17 Set Alarms and Appointments

Set Alarms

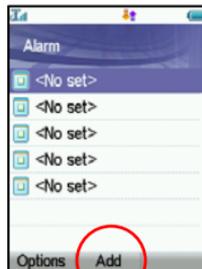

From the main menu select **Tools** then **Alarm** and press **OK**.

Configure your alarm as required by following the Alarm Setup Screen.

- Press **Add** to create a new alarm.
- Daily Alarm goes off every day.
- Workday Alarm goes off Mon – Fri only.
- Weekly Alarm will go off at the same time each week.
- Once Alarm will only go off once.
- Set your desired Ring Tone by choosing the **Edit** button.
- Workdays are Mon – Fri and can be changed by pressing the **Options** button in the Alarm screen above.
- If the Alarm time has passed you will not be able to save it.

Set Appointments through the Calendar

Access the calendar from **Tools**.



- From the **Home Screen** press the **Left Select Key** for the main menu.
- Go to **Tools** then scroll down to the **Calendar** menu. Press **OK** to open.
- Press the **Right Select Key** to Add.
- You can add a Meeting, Memo or Anniversary.
- The Memo function does not allow you to set an alarm.
- Follow the prompts on screen to configure your appointment reminder.
- Appointments are indicated by the red arrow and raised font shown on the actual day.
- Use **Options** to see the Week view and to change various settings.
- If the Alarm time has passed or is before the event time you cannot save the appointment.

1.18 Send an E-mail

- From the **Home Screen** press the **Messaging icon**
- Press the **Right Arrow Key** to get to the Email menu.
- Press **Select** to create a new E-mail.
- Enter the sender address e.g. username@domain.com
- Press the **down arrow key** to access the Copy To Field.
- Press the **down arrow key** to access the Title Field.
- Press the **down arrow key** to enter the Text Field.
- Press the **OK Key** to Insert attachments.
- When you are finished press the **Right Select Key** to **Send**.



Email Settings

- Under Settings you should configure your own Email parameters. See the Advanced Section on how to do this.
- The default Email client is connected through BigPond.
- You can configure other Mailboxes (e.g. Yahoo etc) to receive Emails from external addresses.
- See your E-mail provider for the POP Server details etc and see the Advanced Section for more information.
- We do not support SSL so some external E-Mail providers will not work.

1.19 Take Pictures and Videos

Your phone has two cameras which can take still and video pictures. The main camera faces out and the second camera faces in for video calling.

Take Still Pictures

- From the **Main Menu** select **Camera**
- You can choose the front or back camera under **Options**
- Use the Up and Down arrows to control the zoom* →
- Press the Options button to:
 - Change the Photo Size*
 - Change the Photo Quality
 - Change the Brightness
 - Change the Contrast
 - Apply an effect (black and white or sepia)
 - Change the camera shutter sound
 - Save to – Handset memory or T-Flash card (if fitted)
 - Use the front / back camera
 - Switch to Video Camera



* The default photo size is small to enable easy sending by MMS and Email. If you wish to view your pictures on a PC then change the picture size 1280 x 960 by going into Camera, Options, Photo Size. Zoom is not available on 1280 x 960 as the screen is already at maximum resolution.

Make Videos



From the Main Menu go down to **Multimedia** and press **OK** to select.

- Go down to option 2) for Video Camera. Press **OK** to Record your video.
- Press **Options** to change any of the following **Settings**:
 - The default length of the video is only 15 seconds. Change this if required.
 - Video Quality
 - Brightness
 - Contrast
 - Effect (normal, black and white or sepia)
 - Video sound
 - Video format, MP4 or 3GP
 - Save to – Handset memory or T-Flash card (if fitted)
 - Use the front / back camera
 - Switch to Camera (for still shots)

1.20 Send a Multimedia Message (MMS)

When you send a Multimedia Message you can attach a picture, music or video file.



- From the **Home Screen** press the **Messaging icon**.
- Press **OK** to create a new message.
- Press the **down arrow key** to access Multimedia message and press **OK** to Select.
- Enter the phone number or use **Contacts** to select a number.
- Enter text in the title field if required.
- Press the **down arrow** to enter the text field.
- When you are in the text field you can press the **OK Key** to Insert an Image, Audio or Video file.
- Browse to your Photos or Audio folder and select the file to be attached.
- When finished press the **Right Select Key** to **Send**.

1.21 Receive a Multimedia Message (MMS)

When you receive an MMS you get a standard message alert. Press **OK** to **View** the message. If required press **Retrieve** to download the message attachment. When the attachment has downloaded press the **left Select Key** for **Options**. Choose **Use Highlight Object** to **Save** the file.

1.22 Access the range of Telstra Services using Telstra My Place

My Place provides quick access to the range of Telstra Services available on your mobile phone. You can browse the internet with BigPond, find useful information with Yellow and enhance your phone by downloading ringtones, games, music and more.

Press the **Telstra My Place Key** or press the **Left Select Key** to enter the **Main Menu**, then scroll to the T-icon and select My Place to open Telstra My Place.

See your Telstra Next G User Guide and the Advanced Section for more details.



1.23 Download Pictures, Ringtones, Games and more

There are various ways to enhance your phone by downloading content from the internet. The BigPond Downloads section is free to look at so you can easily see what is on offer. The Downloads are regularly updated by Telstra.



- Press the **Telstra My Place Key** or from the **Home Screen**, press the **Left Select Key** to open the **Main Menu**, then select **My Place**.
- Scroll down to **Downloads** and press the **OK Key** to open it.
- After updating you can see the choices available to download content to your phone.
- You can choose Tones, Pictures, Games, Music Videos etc.

1.24 Use your Phone as a Music Player (MP3 Player)

Once you have downloaded music or imported it from your PC (see 2.4) you can play your own music on your phone.

Method 1, Using the BigPond Music Player




- Press the **Telstra My Place Key** or from the **Home Screen**, press the **Left Select Key** to open the **Main Menu**, then select **My Place**.
- Scroll down to **BigPond Music** and press the **OK Key** to open it.
- Press the **down arrow key** for My Music, press **Options** and choose **Scan for New Files**
- All your downloaded and imported music will be displayed in the list and you can create a playlist under Options.

- Method 2, Use File Manager
- From the Main Menu select **Tools**, press **OK key** and then open **File manager**.

- Go to the **Audios** directory, **My Audios** and open the desired music file.

Method 3, Create a new Playlist and use the front keys to operate your Music Player

When you have some music files stored on your phone you can create a playlist to play your songs in the preferred order, this also enables you to use the front keys to access your music files.

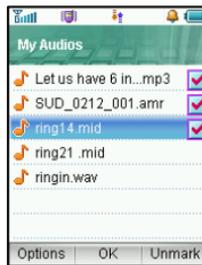


- Go to the Main Menu and choose **Multi-media**.
- Use the **Right Arrow key** to go to Favorites and select **Playlist**.
- Choose **Add** to create a new Playlist.
- Browse through the File Manager directory structure to get to your chosen files.
- Use the **Mark** button to select multiple tracks to create your playlist.
- Make sure you save the playlist and play it.
- Then close the phone you can use the **Play keys** on the front panel.

1.25 Using the T-Flash card

You can increase the memory of the phone by adding a T-Flash card and use it to copy files to and from your PC to your handset.

Insert T-Flash:

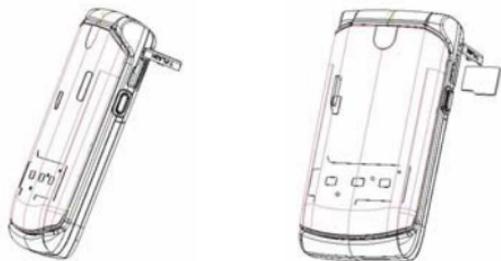

- Open the T-Flash port cover on the side of the phone.
- Handle the card by the edges and carefully insert the card with the label side up.
- Push the card until it clicks into position.

Remove T-Flash:

- Push the card so it clicks out.
- Gently remove the card from the slot.

Use a T-Flash card adapter to copy files:

You can use an external USB card adapter to access the T-Flash card using a PC.


- Insert the T-Flash card in the adapter and put the adapter in the USB equipment.
- Insert the USB equipment into the PC.
- Access the T-Flash on the PC and copy data between T-Flash and the PC.

Access the T-Flash card on the phone:

- From the Home Screen press the **Left Select Key** for the **Main Menu**,
- Select **Tools** then open **File Manager**.
- Press the **Right Arrow Key** to get to the **T-Flash Card** interface.
- Then you can view the contents of T-Flash card on the phone.

1.26 Synchronize with a network server (SyncML)

You can use **SyncML** to enhance your Personal Information Management by synchronizing the contacts and calendar information on your handset with those on a network server.

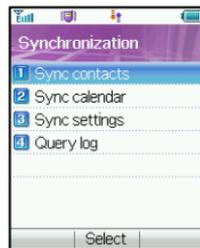

- From the **Main Menu**, go to **Tools**.
- Scroll down to select **SyncML**.
- Complete the **Sync settings** before synchronizing the contacts and calendar. You can select to use **Two-way fast sync** or **Two-way slow sync**.
- You can use **Query log** to view the SyncML info.
- SyncML requires network support and may require an additional subscription fee. Contact Telstra for more details.

2 Advanced Operation

2.1 Use Join Me to Connect your Phone to your PC

Join Me is a PC application that enables you to connect your phone to your PC. Once you have installed it you can connect your PC to the internet , copy music and picture files from your personal collection, send and receive faxes through your phone and use your PC to enter and back up your contacts.

Compatibility

- The software is only compatible with Windows XP Service Pack 2 and Windows 2000 SP 4 and Windows Vista but cannot be guaranteed to run on these systems*.
- It is **not** compatible with Windows ME, 98, 95 or with any 64 bit systems or MAC OS.
- The software may not run in all PC environments, or in conjunction with other software.
- Multi-boot systems are not supported.
- The software should be installed and run under the Administrator login.

Installation

- Please follow the installation steps carefully.
- If the installation fails please see the ReadMe file on the CD or consult our web site for more help. www.zte.com.au.

*Windows 2000, Vista and Windows XP are registered trademarks of the Microsoft Corporation.

2.2 Installing Join Me


Please install Join Me from the CD **before** connecting your phone to your PC.

- Insert the CD provided into your PC.
- The CD should auto-start after a few seconds.
- The installation shield will launch and guide you through the install set up.
- Please follow the prompts to install the software.
- When the installation is complete plug your handset into your PC using the USB lead supplied.
- The USB lead is unique and should not be used for other devices (It is not the same as digital camera leads).
- When you plug in the handset the PC will automatically install the drivers. If this fails consult our website for more help or access Windows Device Manager to update the drivers. See www.zte.com.au for instructions.
- If you have plugged your phone into your PC before installing the CD then the drivers will not be installed correctly.
- Unplug your phone, un-install then re-install Join Me.
- Plug your phone back in and see if the drivers install. See www.zte.com.au for full instructions.

2.3 Use Join Me to Copy your Pictures to your PC

If you have taken some photos on your phone you can transfer them onto your PC using Join Me:

- Make sure your phone is switched on and has completed initialization.
- Make sure your phone is connected to your PC, and Join Me has been installed.
- Double click the Join Me icon on the desktop.
- Select the phone type and press Connect.
- Press OK to download your Contacts and Messages (you can switch this off under Tools, Settings).
- Go to the Media tab as shown in the picture on the next page.
- Double click on My Phone in the bottom left hand corner.
- Double click on Photos to expand the folder structure.
- Double click on My Pictures to see your picture files on the right hand side.
- Drag* the required file from the file list and Drop* it into the required destination folder on the PC.
- The file will be copied to your destination folder (Desktop in the example below).
- You can only drop files into Folders.
- The default picture size is very small when viewed on the PC. See section 1.19 to change the image size.
- * Drag and Drop is a method of copying files. Click on the file, hold down the left mouse button, move the mouse pointer to your required destination and release the left mouse button to Drop the file to that location.

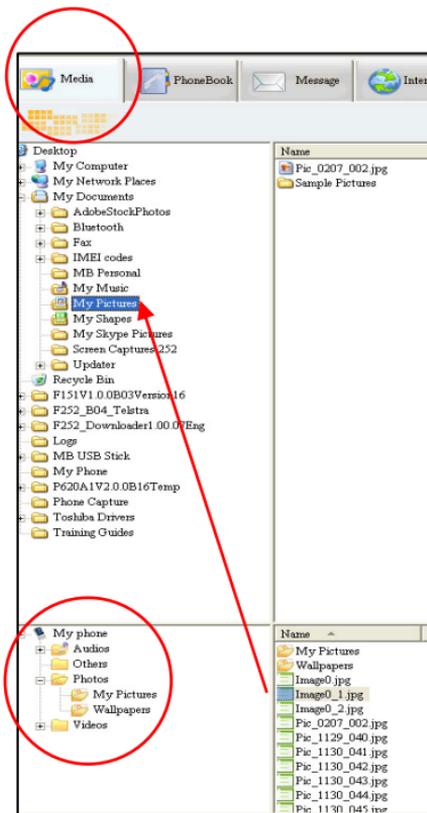


1. Open the Media Tab.
2. Open the My Pictures folder on My Phone .
3. Drag the picture from My Phone up to a folder on your PC.
4. Alternatively you can right click and use Copy and Paste from the menu.

2.4 Use Join Me to Copy Music Files from your PC to your Phone

If you have MP3 files on your PC you can transfer them onto your phone using Join Me.


- Make sure your phone is switched on and connected to your PC, and Join Me has been installed.
- Double click the Join Me icon on the desktop.
- Select the phone type and press Connect.
- Choose **OK** to download your Contacts and Messages (you can switch this off under Tools, Settings).
- Go to the Media tab as shown in the picture on the next page.
- Double click on My Phone in the bottom left hand corner.
- Double click on Audios to open up the Audios folders.
- Find the MP3 files on your PC by browsing through the Windows file structure in Join Me.
- Drag the required file from the top half (on your PC) and drop it into My Audios on the phone.
- The file will be copied to your destination folder (as shown below). You can only Drop files into Folders.
- You can also Right Click on the file to choose Copy, then go to your destination folder and Paste.
- MP3, WAV and MIDI Files are supported but MP3 is preferable due to smaller file size.
- You can use a program such as Free RIP (available free on the internet) to convert your CD's into MP3 files.

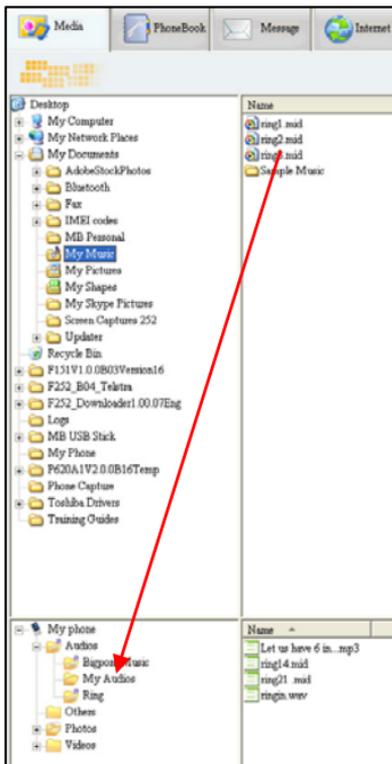

Copy your selected MP3 File from your PC to the My Audios folder on your handset.

2.5 Enter your Contacts using Join Me

You can use Join Me to enter new contacts into your phone.

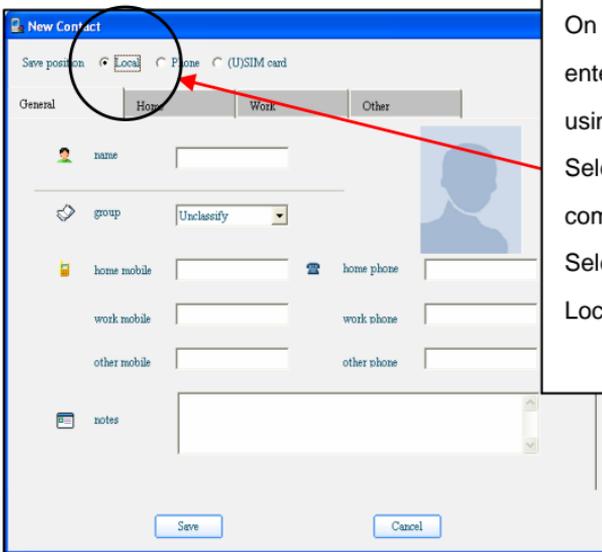

The screenshot shows the 'New Contact' dialog box with the following fields and options:

- Save position:** A dropdown menu with options 'Local', 'Phone', and '(U)SIM card'. This menu is circled in black, and a red arrow points from it to the text box on the right.
- General:** A tabbed interface with 'Home', 'Work', and 'Other' tabs.
- name:** A text input field.
- group:** A dropdown menu with 'Unclassify' selected.
- home mobile:** A text input field.
- work mobile:** A text input field.
- other mobile:** A text input field.
- home phone:** A text input field.
- work phone:** A text input field.
- other phone:** A text input field.
- notes:** A text area.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom.

On the phone book tab you can enter your contacts directly using the PC.

Select "New Contact" then complete the details.

Select the Save Position; Local, Phone or (U)SIM

Create a backup of your Phonebook on your PC

Select All by checking this box.

Drag and drop the complete list to Local

Folder	Name	Phone	
Local(0/1500)			
Unclassify(0)			
Family(0)			
Friends(0)			
Colleague(0)			
Mates(0)			
Society(0)			
VIP(0)			
Phone(162/400)			
Mates(0)			
Family(0)			
Friends(0)			
Work(0)			
VIP(0)			
Unclassify(160)			
(U)SIM card(146/150)			
	<input type="checkbox"/>	Alan Suther...	04...
	<input type="checkbox"/>	alex	02...
	<input type="checkbox"/>	alex def mo...	04...
	<input type="checkbox"/>	alex defraitis	03...
	<input type="checkbox"/>	Alison home	03...
	<input type="checkbox"/>	Alison Oz	+6...
	<input type="checkbox"/>	Amal	04...
	<input type="checkbox"/>	andrew hage	+6...
	<input type="checkbox"/>	Anna Home	96...
	<input type="checkbox"/>	Anna Mobile	04...
	<input type="checkbox"/>	Anne&Hint...	97...
	<input type="checkbox"/>	Annette	04...
	<input type="checkbox"/>	arthur	+6...
	<input type="checkbox"/>	Ashley	04...
	<input type="checkbox"/>	Audi Garage	94...
	<input type="checkbox"/>	Bank	14...
	<input type="checkbox"/>	Beth Young...	04...
	<input type="checkbox"/>	BigBlog	12...
	<input type="checkbox"/>	BigBlog	12...
	<input type="checkbox"/>	BigBlog	12...

2.6 Import your Contacts from Microsoft Outlook


- Launch Microsoft Outlook, have Join Me running and connect your handset.
- Note: at the end of the import process Outlook can shut down. Please save any information beforehand.
- Make sure you are on the Phonebook tab in Join Me. Right click on the Contacts area and select Import From Microsoft Outlook.
- The following fields are imported from Outlook to Join Me as below:

Outlook	Join Me
Full Name	Name
Mobile Telephone Number	Home mobile
Home Telephone Number	Home phone
Business Telephone Number	Work mobile
Company Main Telephone Number	Work phone
Other Telephone Number	Other mobile
Company Name	Company
Profession	Notes
Email Address	Email
Web Page	Web

2.7 Use Join Me to Connect your PC to the Internet

You can use your mobile phone as a dial up modem to connect your PC to the internet. The latest HSDPA wireless network technology achieves broadband speeds up to 3.6Mbps. Please see Telstra for a list of applicable data charges.

- Install and run the Join Me program as above and connect your phone.
- In Join Me go to Tools, Settings on the top menu bar.
- Select the Network Connection tab and check the dial number is *99#.
- The user name and password fields should be blank.
- Go to the Modem Setting tab. The default APN is telstra.internet. Only change this if instructed by Telstra or if you sign up for a data pack.
- Press OK to save the settings. Press Connect on the internet tab to go online.

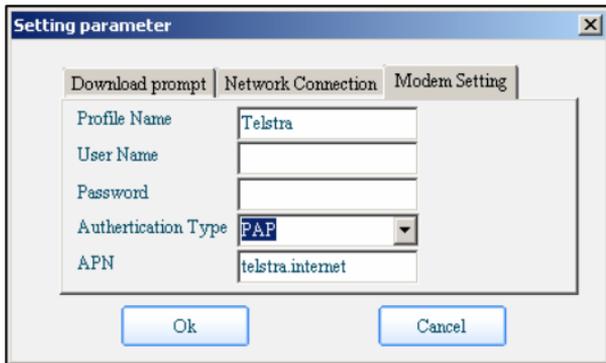

2.8 Send a Fax from your PC

You can use your PC and your mobile phone to send and receive faxes using the Microsoft Fax Console:

- Make sure your phone is switched on and plugged into your PC, and Join Me has been installed.
- On your PC go to the Start Menu and select the Control Panel.
- Choose Add or Remove Programs.
- Choose Add/Remove Windows Components.
- Click in the check box "Fax Services" and click Next (you may need your Windows CD to complete this).
- Launch the Windows Fax Wizard (Start, All Programs, Accessories, Communications, Fax, Fax Console).
- Step through the wizard adding your details and preferences.
- In the drop down box "Please Select the Fax Device" choose "ZTE T1 USB Modem".
- Complete the wizard settings as per your own preferences.
- To send a fax from Word choose the Print option and select Fax.
- Follow the steps in the wizard to complete the operation.
- Consult Microsoft Help (F1) for help or more information on the fax console.

2.9 Connect to a Bluetooth Device

Your mobile includes Bluetooth which can be used to connect your handset to wireless headsets and hands free car kits. You can also transfer files between your phone and other Bluetooth devices such as another phone or a laptop. Not all applications or devices can be supported as Bluetooth is an open forum and different manufacturers adopt different standards and implementation. As a guide we support Bluetooth 1.2 with Handsfree and Headset Profiles. We also support FTP for file transfer to a PC or to another device.

All manufacturers use different methods of implementation so it is best to consult your device manufacturer for compatibility and connection issues.

Please follow the process carefully as it can seem tricky to connect to a Bluetooth device first time around.

Once you have paired up and connected to a device the process becomes more automatic.

Connect to a Bluetooth Mobile or Laptop Device



- From the **Main Menu** select **Tools** then go down to **Bluetooth** and press the **OK Key**.
- Press **OK** for the **Bluetooth Manager** then press the **Left or Right Arrow Key** to switch Bluetooth on.
- Go down to Visible then press the **Left or Right Arrow Key** for **On**. Press **OK** to confirm.
- Go to **My Devices** and press **OK**. Press **Search** to look for Bluetooth devices nearby.
- Your chosen device must be switched on and in pairing mode.
- You should see the required device listed in the device list, Press **OK** to **Connect**.
- You will be asked to submit a password. Usually 0000 or 1234, consult your device for more information.
- If you are connecting to a PC or another mobile enter the same password when requested by that device.
- Once the password has been shared and accepted by both devices they are paired and connected.

Use Bluetooth to Transfer Files to a PC or another mobile device

- From the main menu go to **Tools** and press **OK key**.
- Press **7** directly to enter into **File Manager**.
- Browse through the folders to your chosen file.
- Press the **Left Select Key** for **Options**.
- Choose **Send** then select **Bluetooth** and press the **OK Key**.
- If no devices are shown press **Search**.
- Select the device you wish to send your file to.
- Enter a pass code (if requested) and use the same pass code on the other device (eg 0000).

Receiving Files from another device



- If another paired device tries to send a file to your phone this dialogue will appear.
- Press **Yes** to accept the incoming file transfer.

Connecting to a Bluetooth Car Kit or Personal Headset

Please follow the manufacturer's instructions carefully regarding getting your Bluetooth device into Pairing Mode.

You cannot connect your phone to the far end device unless Pairing Mode is enabled. Usually the device will flash rapidly to indicate pairing mode. After finding the device you need to share a password and press Connect.

- Make sure Bluetooth is on and in Show mode and the other device is in Pairing Mode.
- From your handset go to the Bluetooth menu and press the OK Key to open My Devices.
- Press the Right Select Key to Search.
- From the list of available devices move the cursor to the required device and press OK to Connect.
- Enter the pass code specified in the user guide of your far end device (Usually 0000 or 1234).
- The far end device will acknowledge the connection and your handset will report the Device has been added.
- In My Devices go to your new device and press the OK Key to Connect.
- The devices are now paired.
- When you get an incoming call this will be sent to your Bluetooth device automatically, press the call button to answer.
- Use the Call button to bring up last number redial. The phone will automatically dial out the last number.

2.10 Dial Up Networking via USB or Bluetooth

Dial Up Networking (DUN) is a method to connect your PC to the internet using the handset as a modem. Using Join Me to connect your PC to the internet has already been covered but there are alternative methods available:

Create a New Network Connection using the Windows Wizard

Launch the Windows New Connection Wizard (eg XP: Start, All Programs, Accessories, Communications, New Connection Wizard).

Choose Connect to the internet, Set up my connection manually, Connect using a dial up modem, in ISP Name add 'Telstra mobile', in Phone number you must add *99#, username and password should be blank, default connection can be unchecked and Shortcut to Desktop can be checked.

Make sure Join Me is installed, the drivers are functioning, the handset is connected to the PC using the USB lead supplied.

Double click the Telstra Mobile icon on your desktop and press Connect.

You can now browse the internet normally using the handset as your Dial Up Modem.

Dial Up Networking over Bluetooth

You can also use Bluetooth to connect the handset to your PC. Bluetooth can be considered as a wireless replacement for the USB connection and does not rely on the USB drivers or Join Me software. The Bluetooth connection can therefore be used with MAC computers if required.

Your Bluetooth enabled PC or MAC needs to have Bluetooth ON and working.

On your handset go to Settings, Handset, PC Connection. Set this to Bluetooth.

Go to Tools, Bluetooth and switch on Bluetooth.

In the Bluetooth Menu go to My Devices and press Search to find your PC or MAC.

Press OK to Connect and enter the same password, when prompted, on each device.

On the PC or MAC you will need to create a new Connection via Bluetooth. This varies depending on Bluetooth application software but you need to check the correct device is selected, the Dial Number is *99# and the Username and Passwords are blank. When the Bluetooth manager opens a connection to the handset you will need to accept the incoming connection by pressing Yes on the handset when prompted.

The PC or MAC is now connected to the internet via the handset.

2.11 Other Facilities

Stopwatch


The phone has a built in stopwatch accessible through the Tools menu.



- Press **OK Key** to start timing.
- Press **OK Key** to stop timing. The screen will show the event time.
- Press **OK Key** to continue timing.
- Press **Right Select Key** to reset.

Calculator

The phone provides a simple calculator accessible through the Tools menu

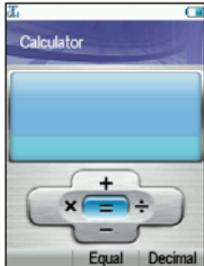

- Press 0–9 key to enter numbers, Decimal to enter the decimal point.
- Press Up/Down/Left/Right key to choose +, -, x, ÷.
- Press the **Clear key** to clear last digit and results.
- Press **OK Key** to Calculate. Press **End key** or **Back** to exit the calculator.

World Time

World Time is accessible under the Tools menu



- The world time function provides time information on major cities worldwide.
- You can scroll to the desired city by using the **Left/Right key**.
- Select your city then press the **OK Key** to save the selected city as your home time zone.
- Note changing time zones changes the current time setting.

Java Games




- You can download games from your service provider or other specialist portals.
- Your handset supports Java Midlet 2.0.
- You can also download files onto your PC and use Join Me to copy them over.
- Copy Games into the **Other** directory then select **Open** to install the game.
- Games are installed in the **Games & Apps** location on the handset.

Internet Browser



- You can access a generic browser through the main menu.
- The home page is Telstra BigPond.
- You can enter your own URL using the Go to option.
- You can view your internet History and connection records.
- You can create a new connection profile under Options, Connect Setting, Options.
- You can erase and set Cookies and other options under Options.

WAP Push Messages

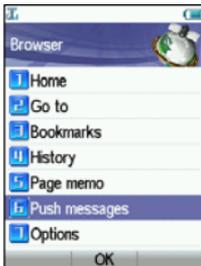

- WAP Push Messages are indicated by the  icon on the main display.
- Use the Browser to view your Push Messages.
- Push Messages are usually advertising or spam.
- They cost money in data charges to retrieve the messages.
- You can set Refuse to **receive** under Browser, Options, Push settings.

Voice Recorder



- Access the Voice Recorder function from the **Multimedia** directory.
- Press **OK Key** to Start recording your voice memo.
- Press **OK Key** to Pause recording.
- Press the **Right Select Key** to Stop recording.
- Press the **OK Key** to **Save**. The file will be saved to My Audios.
- Press **Right Select Key** to Discard the voice memo.
- Press **Left Select Key** to **Send** the memo via MMS, Email or Bluetooth.

Slide Show



- Access the Slide Show function from Multimedia, Favorites.
- Add pictures by pressing Add.
- Browse to My Pictures and Mark the pictures you want.
- **Press OK to finish.**
- Use **Options** to create New slide, Rename, Delete, Delete all, and View the image info.

Streaming URL

Streaming URL are links to audio or video streaming content over the internet. The content is only available while you are connected to the server and depends on your network provider.

2.12 Advanced Message Settings

You can configure your SMS, MMS and Email Settings.

From the Main Menu go to Messages, Settings.

Multimedia Message Settings

- Retrieval Settings: Manual, Automatic or Manual when roaming.
- Delivery mode: You can set immediate delivery or defer it for a specified period of time.
- Time per page: Set MMS time per page.
- Delivery reports: You receive a confirmation from the network when the message is delivered to the recipient.
- Validity: Messages are saved on the network for this period or until the message is delivered.
- Anonymous msg: You can choose to accept or refuse anonymous messages.
- APN: Access Point Name. Preset by your network provider.*
- Server Address: Set the server address for MMS.*
- Proxy server Address: Set the proxy server address. Preset by your network provider.*
- Proxy server port: Set the proxy server port. Preset by your network provider.*
- *Changing these settings will affect your browsing and client software.

Text Message Settings

- SMS centre number: The default is +61418706700.
- Expired Time: Select the period over which the message centre will attempt to deliver the message.
- Status report: The network informs you when your message has been delivered.
- Cell Name Display, On or Off.

BigPond E-mail

- From the Main Menu go to Messages then press the **Right Arrow key** to go to the Email tab.
- Go to 7) for **Settings**, press the **OK Key**.
- Press **OK key** again for Mailbox Settings.
- Press the **Right Select key** to **Edit** the BigPond settings
- Add your username, password, full Email address, Display Name etc. for your BigPond Account.
- To create your own mail box settings use **Add** from the Mailbox Settings Menu.
- See the table on the next page for some common examples.
- Consult your Email service provider for more details.

Other Email Providers

We support POP3 , IMAP4 and SMTP email clients. We do not support SSL. Contact your alternative E-mail provider for more details on how to configure your POP service.

2.13 Advanced Handset Settings

From the Main Menu go to Settings then press the Right Arrow Key for Handset Settings.

Network

- Preferred mode: You can lock your handset to GSM or UMTS (3G) Networks
- Preferred Band: You can lock the handset to certain bands, U = UMTS, G = GSM
- Preferred selection*: You can specify which network to register with from a list of available networks. Preferred Selection will override the Preferred Mode setting.

* If you make a Manual Network Selection this will override the automatic settings in Preferred Mode and the handset will stay on your chosen network and related band. ie If you choose Telstra GSM the Preferred Mode will switch to GSM and remain in GSM-only mode, select 3G network, Preferred Mode will be 3G Only. Further searches performed under the Preferred Selection>Manual mode will only detect networks from respective band (GSM or 3G only depending on selected network). To return back to normal mode set Preferred Mode and Preferred band to Automatic.

Restore default settings

- If your handset is not working as normal you can restore the handset to its default factory settings. The Handset Lock Code is 0000. User content will not be erased.

Network time

- The Time and Date automatically updates from the Network. Switch this off if not required or if your time zone is not updated correctly (eg Interstate border areas).

CTM Set

CTM (Cellular Text Telephone Modem) is a text based communications protocol to offer support to hearing and speech impaired people. Hearing or speech impaired persons can communicate using a teletype (TTY) terminal connected to the mobile phone via a CTM Modem. The TTY signals are sent alongside speech so it is possible to configure the system to enable speaking and hearing as well as typing or receiving text to the TTY device. See below for the options available:

- **Full:** Text entered on the terminal is sent to the other party. Received text from the other party is displayed on the terminal.
- **Talk&Read:** Received text is displayed on the terminal and you can speak to other party.
- **Write&Hear:** Text entered on the terminal is sent to the other party and you can hear the incoming speech from the other party.
- **Off:** All CTM is disabled and you can use the phone as normal.

Screen Lock

- If **Screen Lock** configuration is **ON**, you can not use the **Play keys** on the front panel. You can unlock it by long pressing **camera key** at right side of handset.

2.14 Advanced Call Settings

From the Main Menu go to Settings then press the Right Arrow Key 4 times for Call Settings.

VideoPhone Setting

- The following fields are preset by Telstra.
- The VIG Number is +61418707888.
- The UUS Type is Email.
- The UUS String is blank.
- Contact Telstra for more details.

Voice Mail

- Your Voice mail number is preset to +61101. You can access your Voicemail by using the Speed dial 1 key.
- From the Home Screen long press the 1 key to access your Voice mail.

Video Mail

- Your Video mail number is preset to +61101. You can access your Video mail by using the Speed dial 2 key.

Call Divert

This service enables you to divert incoming calls to other numbers. Use the menus to choose which diverts you want activated and to check the status of your diverts.

Call Waiting

This service lets you know if you receive another incoming call while you are on the phone. When active (default) and you are on the phone you will hear some pips when you get another incoming call. Press the  button to switch between calls.

Call Barring

To activate call barring you need the barring password from Telstra. This is usually provided with your USIM card documentation and is often 1234 but this needs to be enabled on your account. Contact Telstra for more information.

- Bar all outgoing calls: Calls cannot be made.
- Bar outgoing calls (international): International calls cannot be made.
- Dial barring (International No. not to home ph)except home number: When abroad, calls can only be made to numbers within the current country.
- Bar all incoming calls: Calls cannot be received.
- Bar incoming calls when international roaming: Calls cannot be received when you are overseas.
- Cancel all call barring: Cancel all the previous call barring settings.
- Change password: Change the barring password. It is needed when you activate or erase call barring.

Send my number

This function allows you to send or hide your number when making calls. You can choose to switch it on or off.

3 Technical Information and Help

3.1 Troubleshooting and FAQ's

Please check the manual thoroughly before contacting your service provider and read the issues below:

Symptom	Resolution
Enter PIN	Input the correct PIN number as supplied by Telstra.
Insert USIM	Check you have inserted a valid USIM card. See Installing the USIM Card
Enter password or Unlock Code	Enter the unlock code. Default is 0000.
(No) key tone when pressing keys	Check the key tone settings in your current profile. See section 1.13
No incoming ring tone	Check the ring tone and ringing volume settings in the profile. Check the handset is not muted (Long press the # Key)
No alarm tone	Check the profile setting (silent) and the alarm ring setting
A phone number cannot be dialled	Check whether any call restrictions are set. See Advanced Call Settings
Short message cannot be sent	Check the SMS centre setting in the SMS-Settings menu. Restore Defaults

How do I switch off Predictive Text ?	In any text entry mode press the # key to toggle between different modes.
The battery discharges quickly	Your network coverage may be poor. Check your signal bars. With only 1 or 2 bars your signal strength is poor. Battery life of only 1 day is normal under these conditions. Switch off Bluetooth to help save power. Try changing network to GSM (2.12)
How do I enter text in an SMS ?	From the phone number field press the down arrow twice to move into the text area. Use predictive text to complete words, press the * key to toggle different words, press OK when correct. Use abc mode to manually type words that are not included.
How do I change the Ringtone ?	See Section 1.13 Edit the current profile and select a new tune from the Audios directory.
How do I create a Playlist from the T-Flash card ?	<ol style="list-style-type: none"> 1. Through File Manager check the files stored on the T-Flash memory first. 2. From the BigPond music player application you can scan your files and create a playlist from the available list. T-Flash must be FAT16 Format.
How do I transfer pictures via Bluetooth to a photo printer (eg Kodak) ?	This is not supported. Your handset requires a security password to be enabled and the Kodak printers cannot provide a password. This is due to different Bluetooth profiles. Copy your photos using Join Me or a T-Flash card

3.2 Glossary of Terms

2G or GSM Second Generation wireless communication system.

3G Third Generation wireless communication system. 3G offers video services and high speed packet-data service.

APN Access Point Number. This is the gateway to Internet Services

Avatar is a small bit-map cartoon style picture

Bluetooth is a wireless standard to allow devices to connect and share information without using any cables

HSDPA High Speed Digital Packet Access. Wireless data rates up to 14.4Mbps

MMS Multimedia Message Service. Send videos, pictures, audio files and text to phones and e-mail addresses.

Next G Also called 3.5G. Next G offers enhanced data rates and features using HSDPA technology

Pairing Mode is a Bluetooth facility to connect two devices together

Roaming Use of your phone overseas.

USIM Universal Subscriber Identity Module provided by Telstra. Can be used to copy Contacts between handsets.

UMTS Universal Mobile Telecommunications Standard

Video Call Allows users to communicate by video instead of normal voice calling. Only available on 3G.

Voice/Video Mail An answering service that automatically answers your calls when you are not available.

3.3 Technical Parameters

Handset Standards	WCDMA 850MHz, 2100 MHz with HSDPA data 900MHz GSM, 1800 MHz GSM and 1900 MHz GSM with UMTS
Dimensions WxLxH	Approx 98.5 x 50 x 18mm
Weight	Approx 105g (Including standard battery)
Features	UIONE, MP4 video, MP3 audio, 2.0/0.3MPixel camera, Video Phone, USB, MIDP 2.0 JAVA, 225MHz Processor, 2.2/1.2" LCD 262K Colour Screen, MMS Video and Picture, E-mail, Calendar, Speakerphone, Voice Recorder, Bluetooth, TFlash up to 2GB (FAT16 only), CTM
Battery	830mA hours, Lithium ion (Li-ion)
Continuous idle time*	Up to 200 hours
Continuous talk time*	180 minutes on GSM network, 180 minutes on WCDMA network, Video call >70 minutes
Charge time	Approximately 3 hours
Battery Life	Approximately 400 charge cycles.

*The phone's talk and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

4 Environmental Statement

Your ZTE handset is made using the latest manufacturing techniques and environmental standards to reduce waste and hazards to the environment. However at the end of life of the equipment the manufacturer recommends that you return the handset and accessories to your nearest re-cycling depot or send it to our recycling agent below. Valuable materials such as gold, silver, and copper can be recovered from the handset. Any toxic materials will be prevented from entering the environment and the waste materials will be recycled.

At the end of life of the equipment please send your handset, batteries and charger to:

MRI (Australia) Pty Ltd

20-24 Dennis St

Campbellfield

VIC 3061

www.mri.com.au

or

MRI Sydney

1 – 4 Bentley Street

Wetherill Park

NSW 2164

MRI Australia recycles every part of the equipment and diverts over 90% of the materials from landfill for re-use.

Character Chart

Key	Corresponding Characters
1	1 and some common punctuation characters eg . , ? ! @ '
2	ABCabc2
3	DEFdef3
4	GHIghi4
5	JKLjkl5
6	MNOmno6
7	PQRSpqrs7
8	TUVtuv8
9	WXYZwxyz9
0	Space 0
* key	Press * key for character set. Press twice for International Prefix "+"
# key	Toggle different text modes. Long press to activate Silent Mode
Up/Down key	Move the cursor up/down. Move along Tabs
Left/Right key	Move the cursor left/right. Toggle various options
End key	Exit

5 Menu Listing

<p>1) Tools </p> <ol style="list-style-type: none"> 1. Alarm 2. Stopwatch 3. Calculator 4. World Time 5. Bluetooth 6. SyncML 7. File manager 8. Calendar 	<p>2) Messages </p> <ol style="list-style-type: none"> 1. New Message 2. Inbox (0/0) 3. Outbox (0) 4. Drafts (0) 5. Sent (0) 6. User folders 7. (U)SIM Inbox 8. Settings 9. Memory info. 	<p>2) Messages </p> <p>B. Email</p> <ol style="list-style-type: none"> 1. New Email 2. Inbox (0/0) 3. Outbox (0) 4. Drafts (0) 5. Sent (0) 6. User folders 7. Settings 8. Memory info. 	<p>3) Games </p> <p>A. Applications</p> <p>Download applications</p> <p>Downloads</p> <p>BigPond Music Player</p> <p>RMC</p> <p>B. Settings</p> <ol style="list-style-type: none"> 1. Bookmarks 2. Proxy settings 3. Regulate volume
<p>4) Contacts </p> <p>Handset</p> <p>USIM</p> <p>Mates</p> <p>Family</p> <p>Friends, Work, VIP</p> <p>Unclassified</p>	<p>5) My Place </p> <ol style="list-style-type: none"> 1. BigPond 2. FOXTEL 3. Yellow search 4. BigPond music 5. My Email 6. Call 1234 info 7. BigBlogs&Photos 8. Whereis Maps 9. Downloads 	<p>6) Recent Calls </p> <p>A. Call log</p> <ol style="list-style-type: none"> 1. All calls 2. Missed calls 3. Received calls 4. Dialed calls <p>B. Calls Info.</p> <ol style="list-style-type: none"> 1. Call duration 	

		10. My Account		
<p>7) Settings </p> <p>A. Screen</p> <ol style="list-style-type: none"> 1. Wallpaper 2. Clear wallpaper 3. Backlight duration 4. Brightness 5. Greeting <p>B. Handset</p> <ol style="list-style-type: none"> 1. Time and date 2. Network 3. Own phone number 4. Connection 5. Access point 6. Restore defaults 7. Network time 8. PC Connection 9. CTM Set 10. Screen Lock 	<p>7) Settings </p> <p>C. Profiles</p> <ol style="list-style-type: none"> 1. General 2. Meeting 3. Outdoor 4. Silent <p>D. Security</p> <ol style="list-style-type: none"> 1. Activate security codes 2. Change security codes 3. Fixed dial numbers 4. FDN list <p>E. Call</p> <ol style="list-style-type: none"> 1. Videophone setting 2. Voice mail 3. Video mail 4. Call divert 5. Call Waiting 6. Call barring 7. Send my number 8. Open flip to answer 	<p>8) Multimedia </p> <p>A. Digi.Eq</p> <ol style="list-style-type: none"> 1. Camera 2. Video camera 3. Media Player 4. Voice recorder <p>B. Favourites</p> <ol style="list-style-type: none"> 1. Play list 2. Slide show 3. Streaming URL <p>9) Internet </p> <ol style="list-style-type: none"> 1. Home 2. Go to 3. Bookmarks 4. History 5. Page Memo 6. Push messages 7. Options 	<p>10) Shortcuts </p> <ol style="list-style-type: none"> 1. My Pictures 2. Games&Apps <p>12) Themes </p> <ol style="list-style-type: none"> 1. Australia 2. Daylight 3. Entertainment 4. Sports 	

Index

Advanced Call Settings	77	Change PIN Numbers	33	Home Screen	17
Advanced Message		Change Ringtones	21	Java Games	70
Settings	73	Character Chart	84	Join Me	52, 53
Advanced Operation	52	Charger	15	Key Tones	32
Appointments	39	Charging	16	Last Number Redial	24
Background	30	Contacts	19, 20, 21	Make Videos	43
Backlight Duration	32	CTM Set	76	Menu Listing	85
Battery	14, 16	Dial Up Networking		Microsoft Outlook	60
BigPond	46	(DUN)	67	MP3 Player	47
BigPond Music Player	47	Dictionary	26	Multimedia Message	44
Bluetooth	63, 64, 65	Download Music	46	Multimedia Message	
Bluetooth Car Kit	66	DTMF	24	Settings	73
Browse the Internet	45	E-Mail	41	Music Player	47
Browser	71	Emergency Calls	28	Mute	31
Calculator	69	En 25		My Words	27
Calendar	40	Environmental	83	Network time	75
Call	23	FAQ's	79	PC	53, 54, 56, 61
Call Barring	78	File Manager	34	PIN Codes	33
Call Divert	77	Games	46	Playlist	48, 80
Call Waiting	78	Glossary	81	Predictive Text	26
CD	53	Groups	21	Preferred mode	75

Preferred selection	75	Silent Mode	31	USB	15
Push Messages	71	Slide Show	72	USIM card.....	13
Restore default settings	75	SMS	25	Using the T-Flash card	49
RF Energy.....	6	SMS centre number...	74	Vibrate Mode.....	31
RF Safety Information ...	6	SMS Message Length	27	Video Call	37
Ringtone	31	Speed Dial.....	22	Video Mail	77
Ringtones.....	46	Stopwatch.....	69	Voice Mail	77
Safety Information.....	7	Streaming URL.....	72	Voice Recorder	72
Screen Brightness.....	32	SyncML	51	Wallpaper.....	30
Screen Lock	76	Take Pictures.....	42	WAP.....	71
Select Keys	18	Technical Parameters	82	Warranty	9
Send a Fax.....	62	Text Message Settings	74	Workdays.....	39
Send my number.....	78	TFlash Card.....	35	World Time.....	70
Set Alarms.....	39	Themes	29		
Shortcut	30	Troubleshooting.....	79		