



Service Manual

Service Manual


KF390



Model : KF390



7. CIRCUIT DIAGRAM

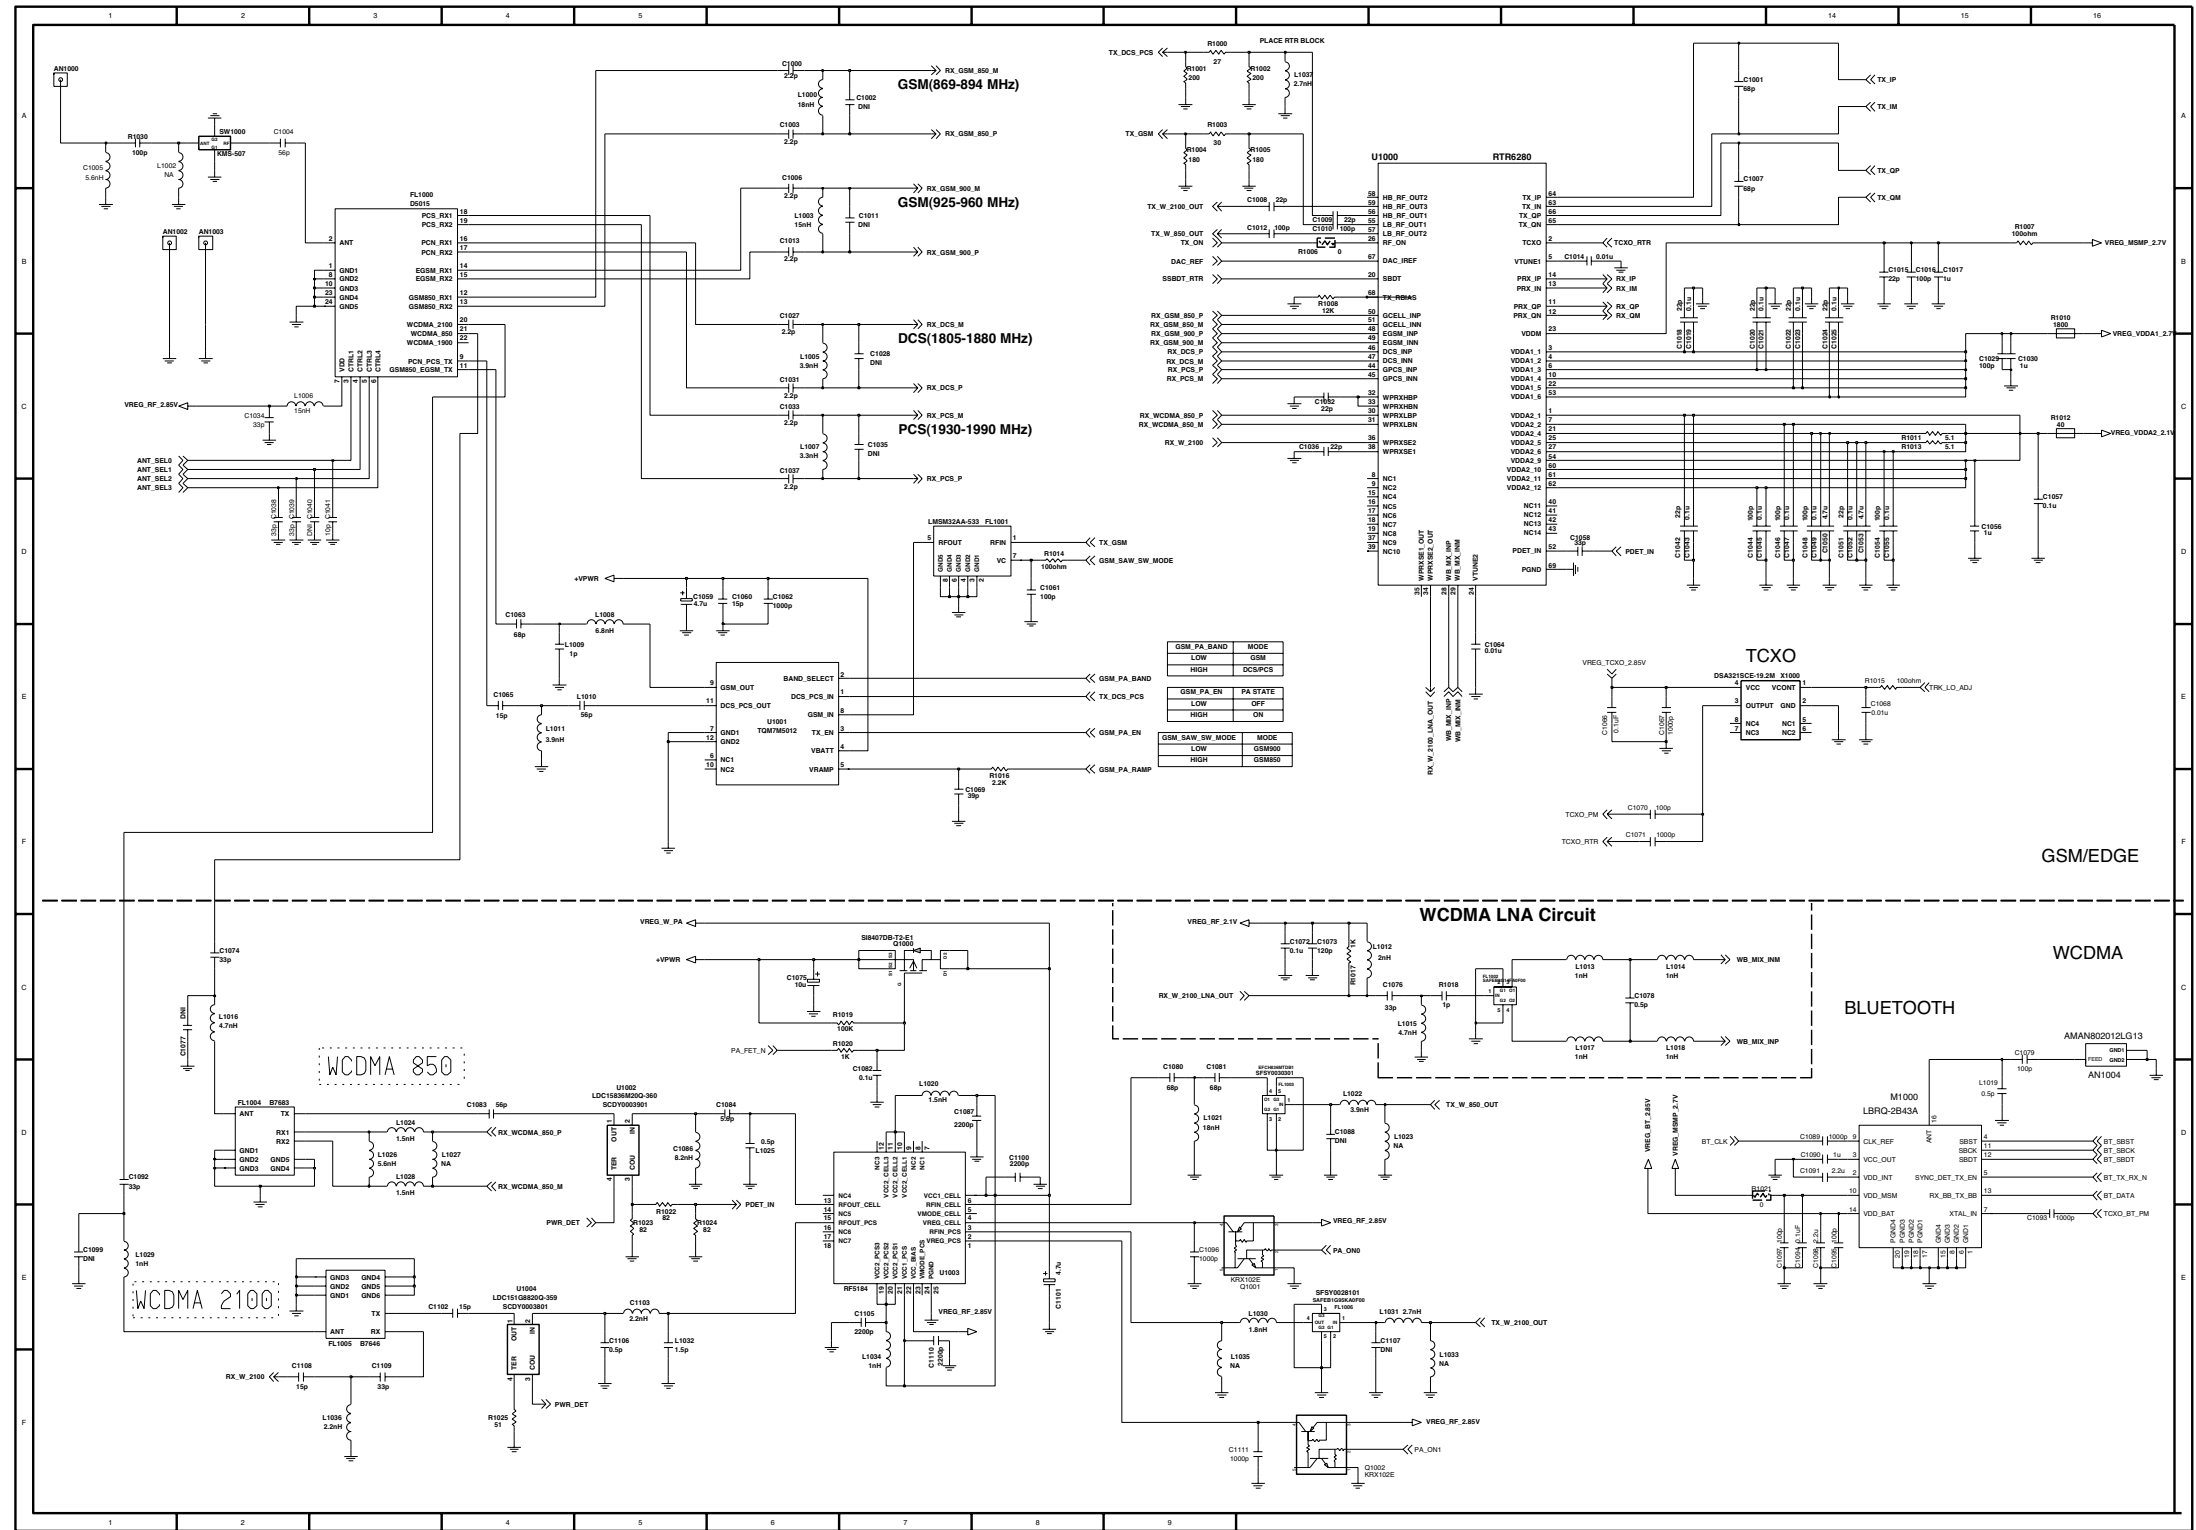


LG(42)-A-5505-10.01

LGMC

LG Electronics Inc.


7. CIRCUIT DIAGRAM

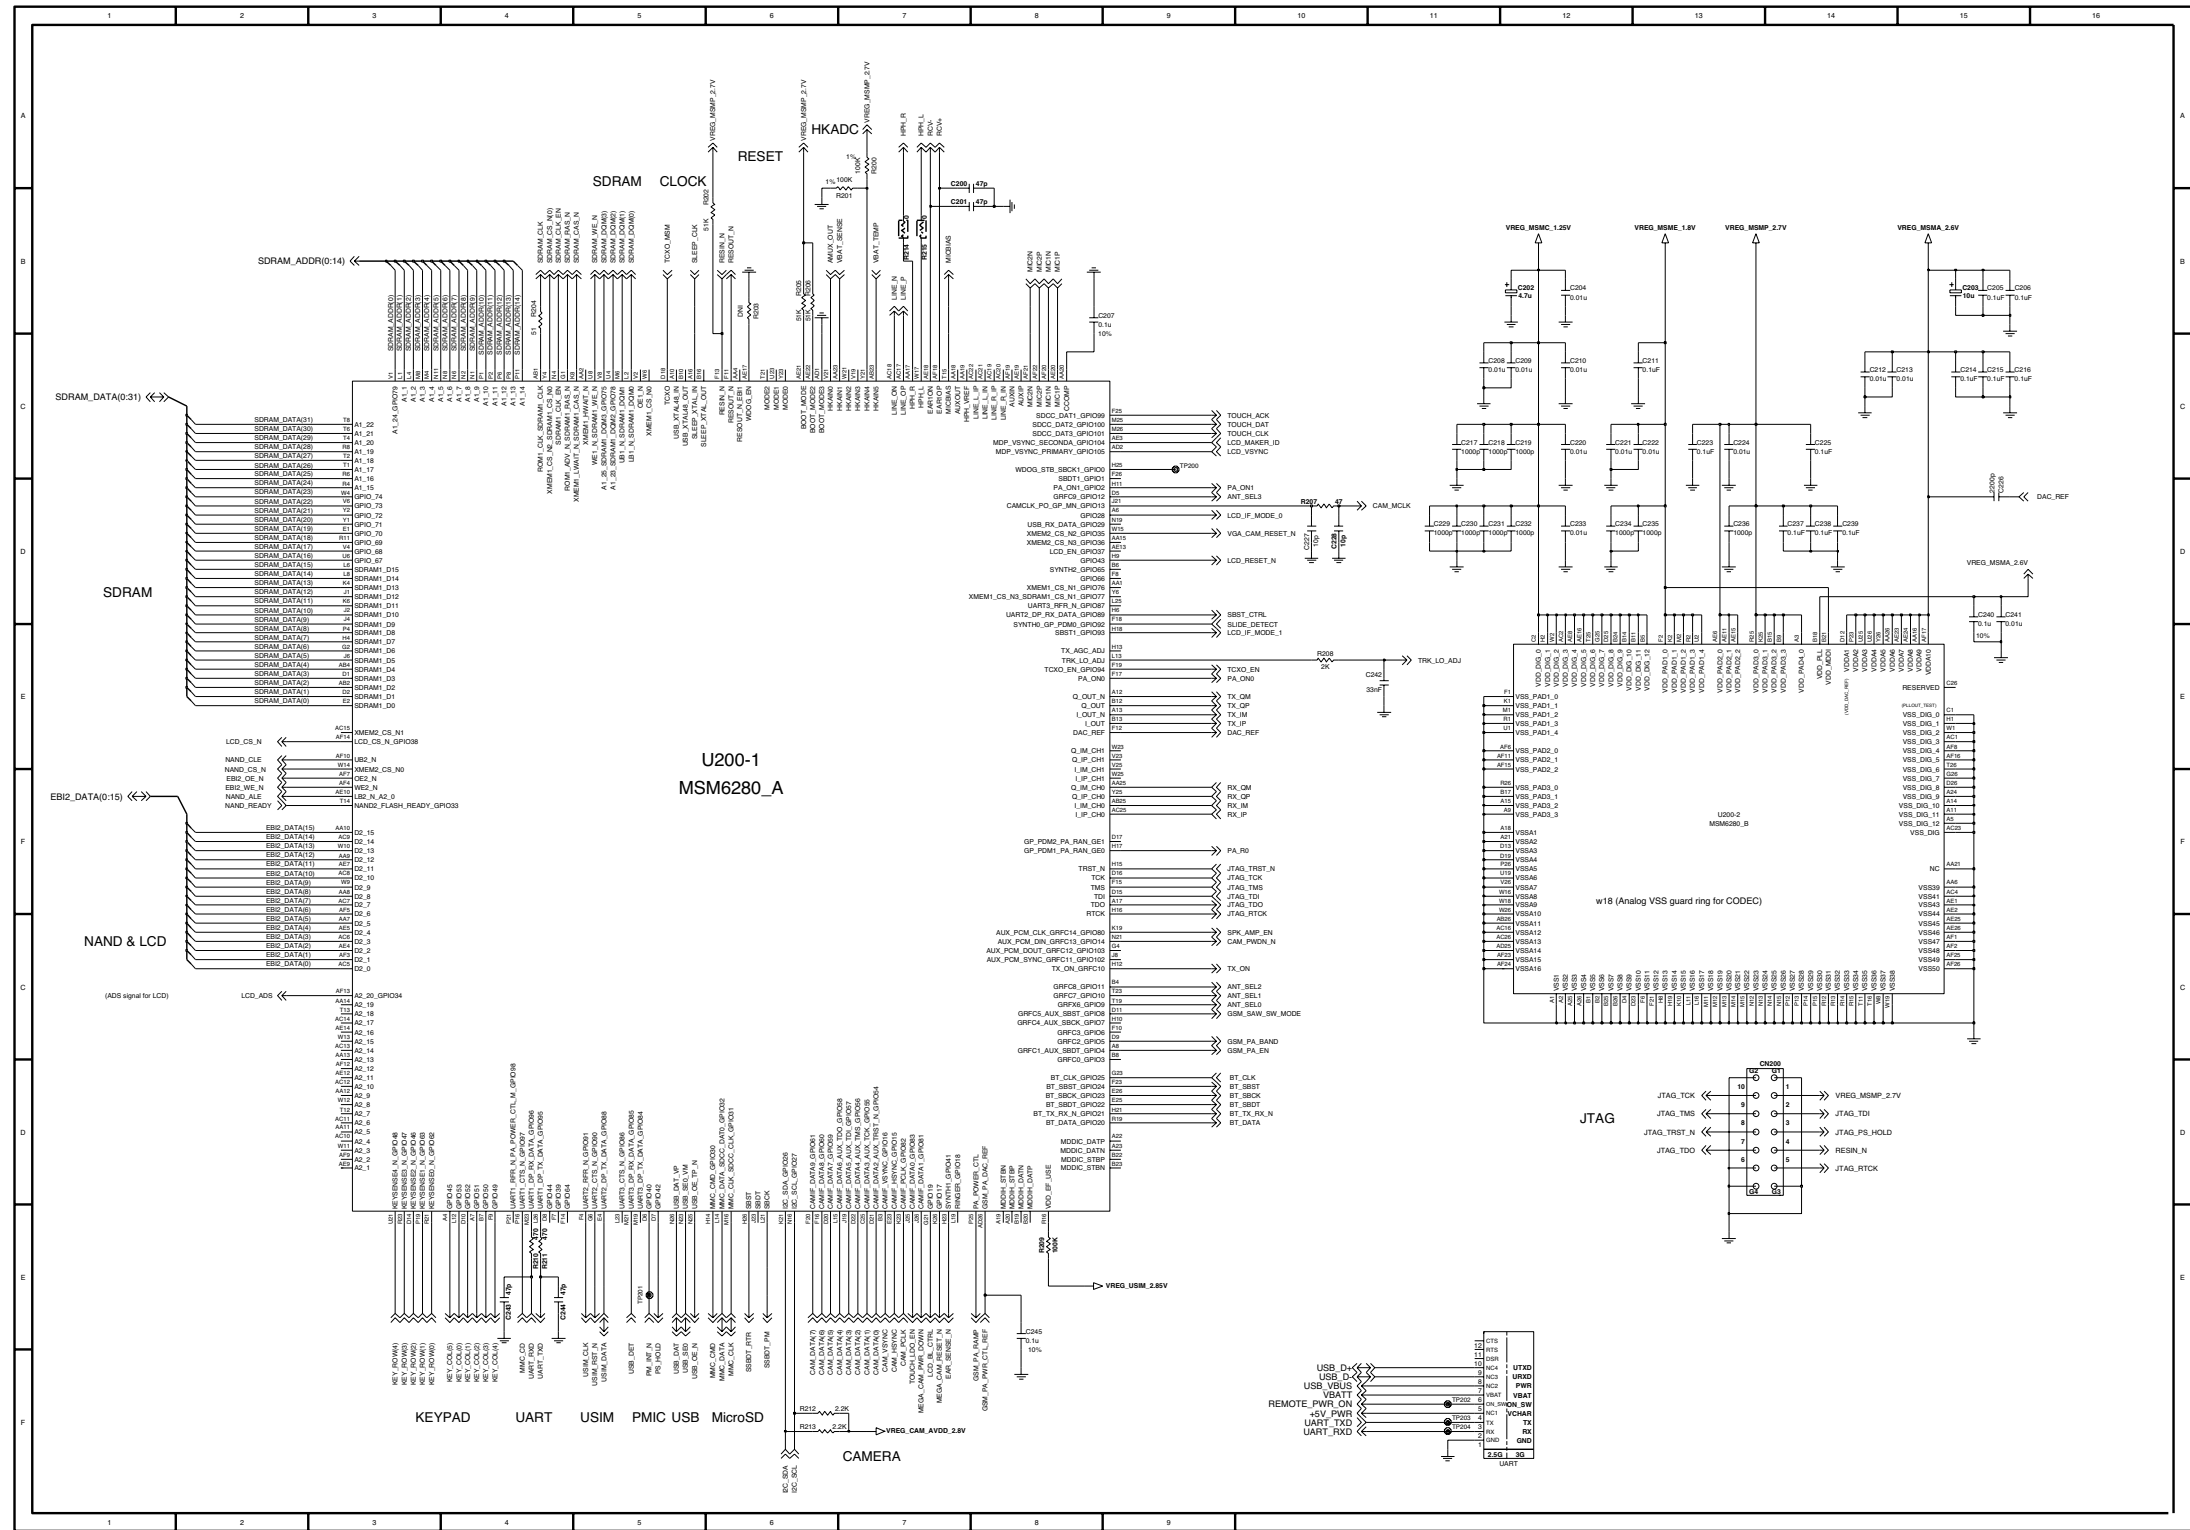

LG(42)-A-5505-1001

LG Electronics Inc.

7. CIRCUIT DIAGRAM

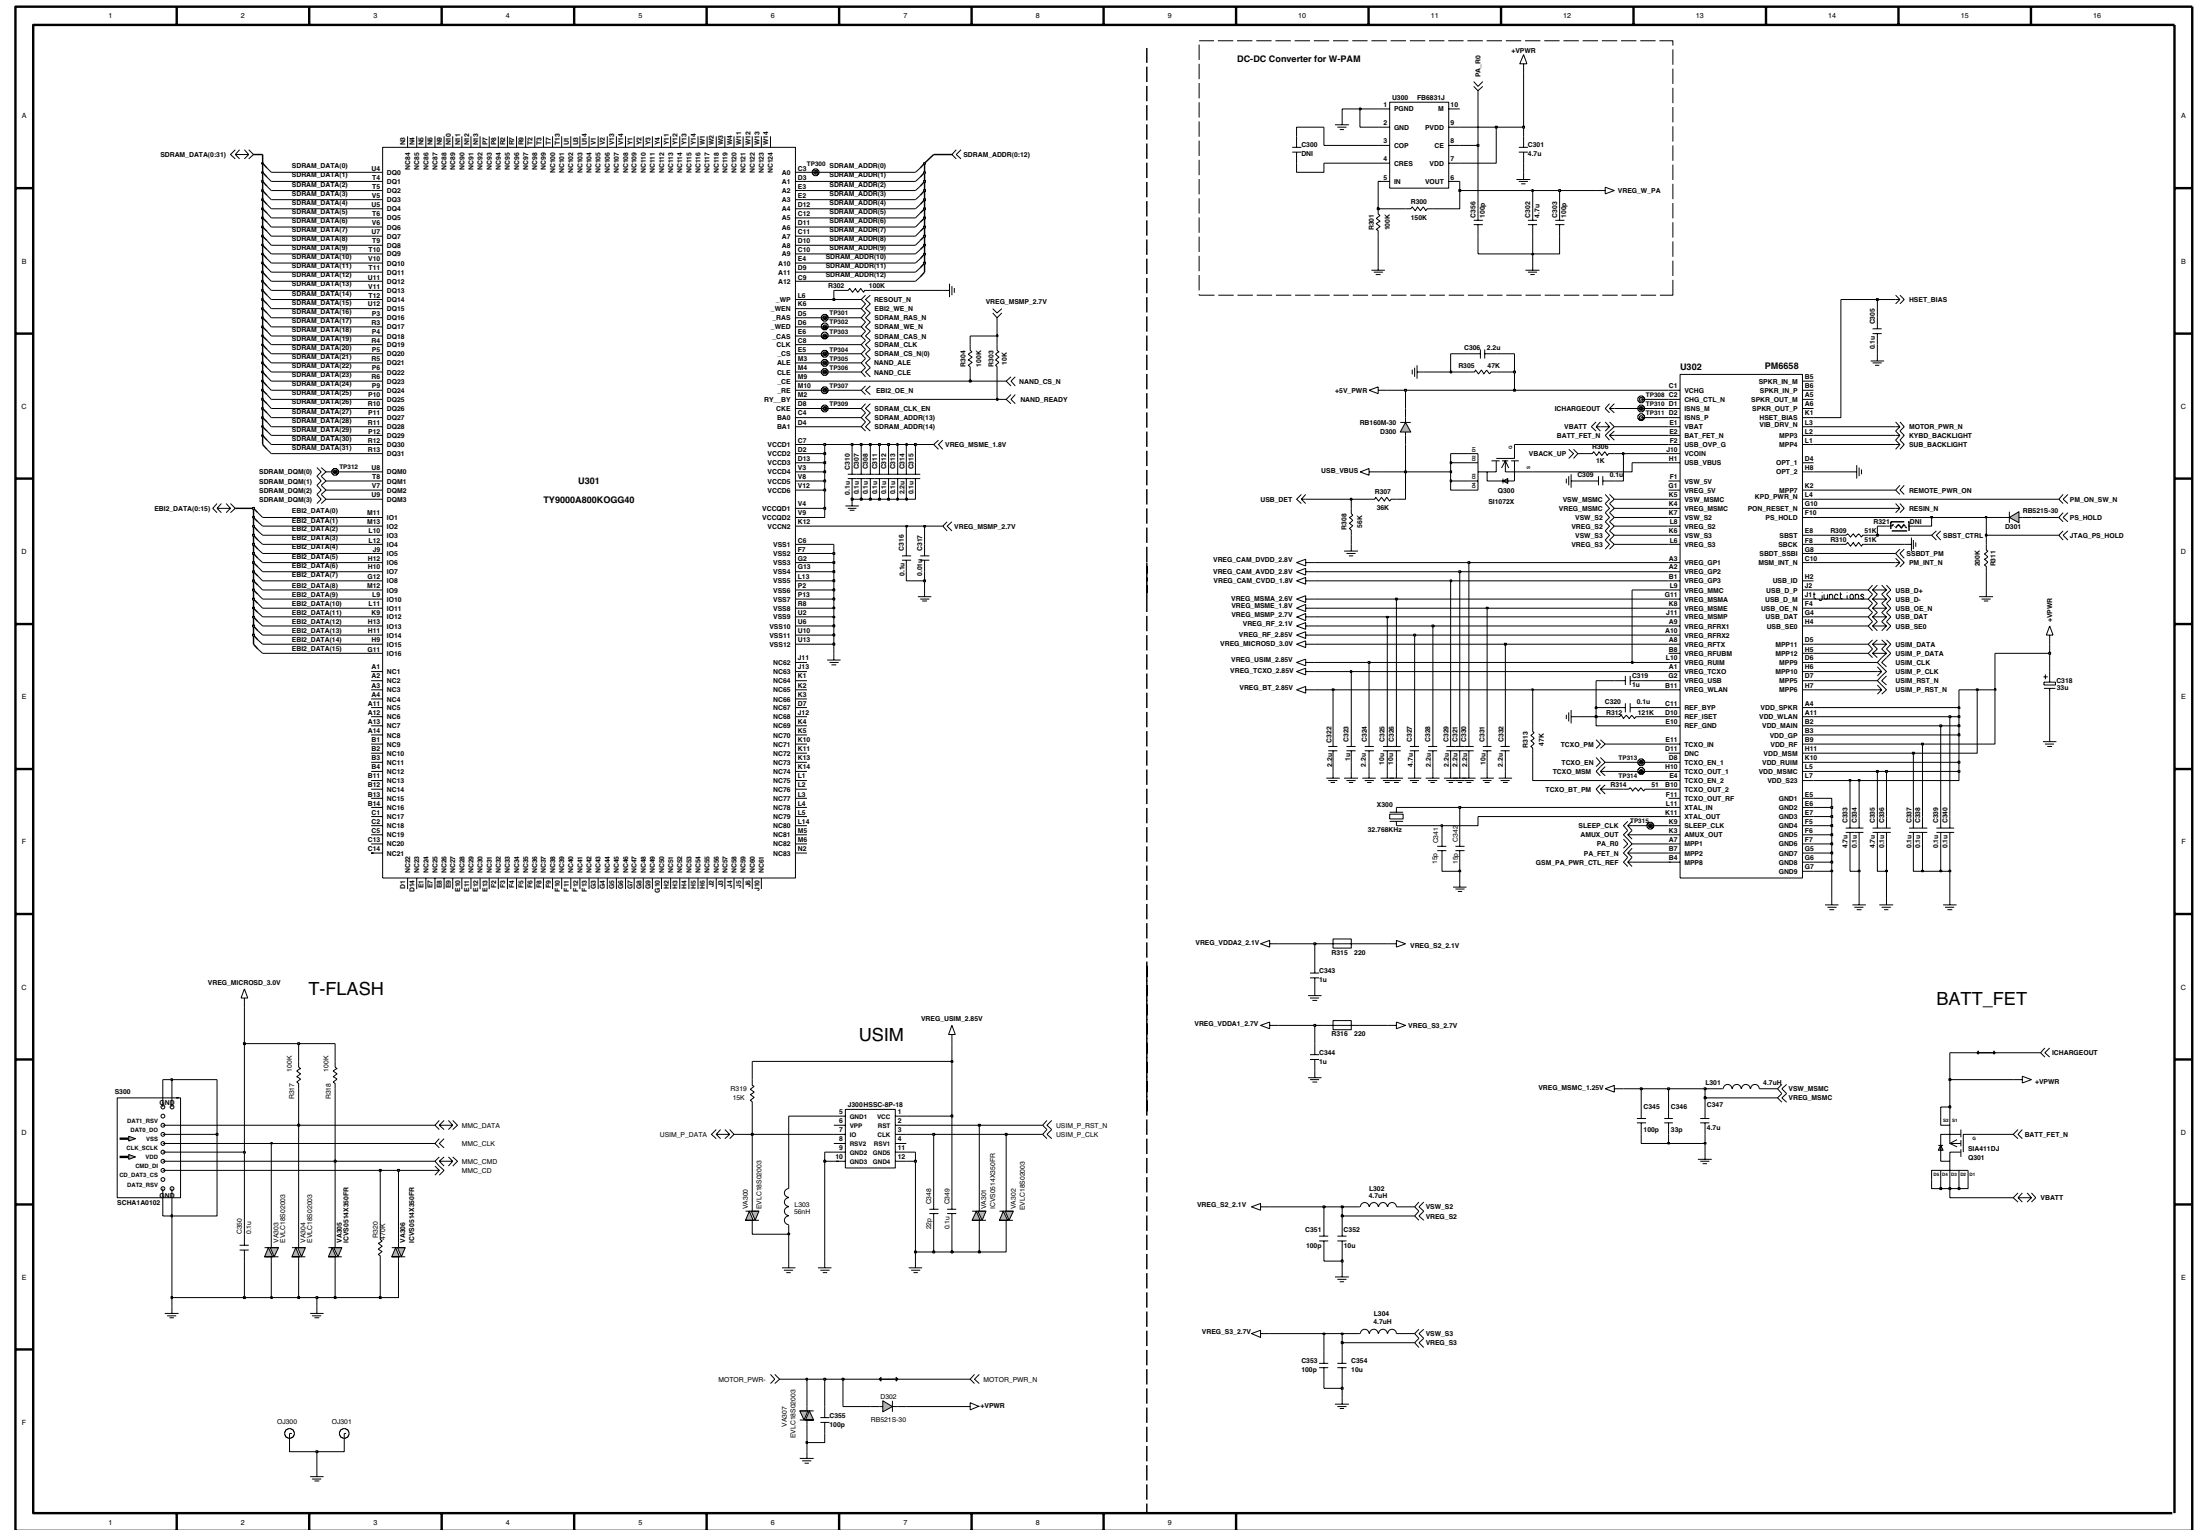


LG42-A-5505-10 01

LGMC

LG Electronics Inc.

7. CIRCUIT DIAGRAM

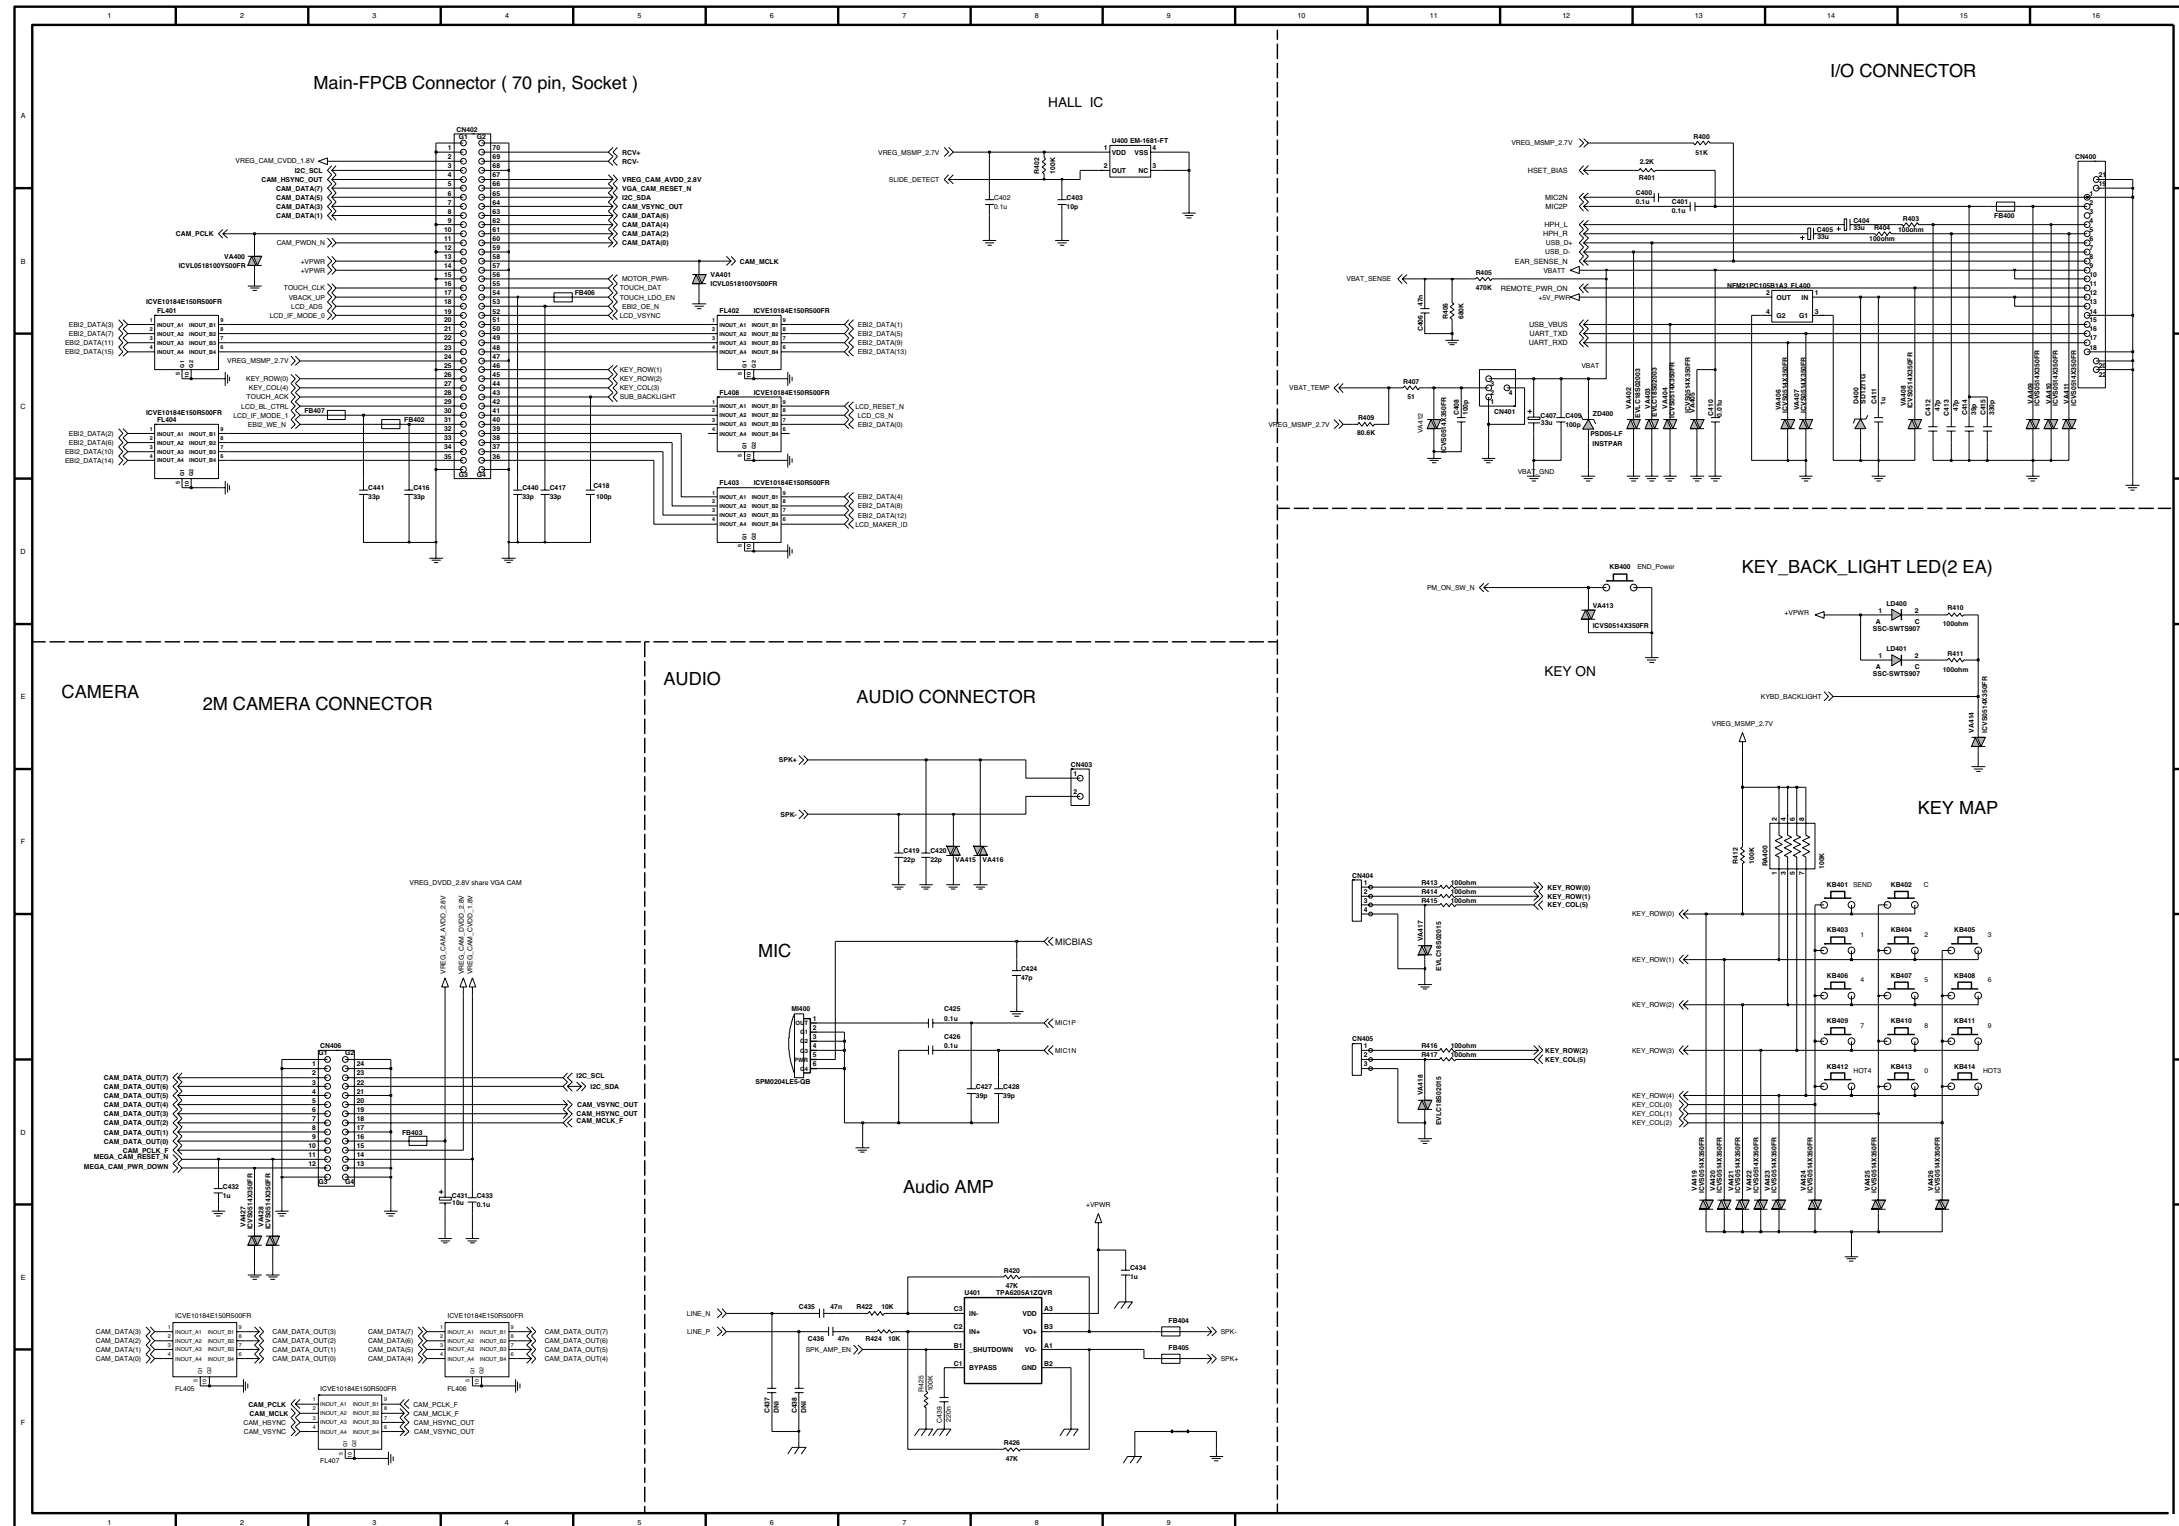


LG(42)-A-5505-1001


LG&C

LG Electronics Inc.

7. CIRCUIT DIAGRAM

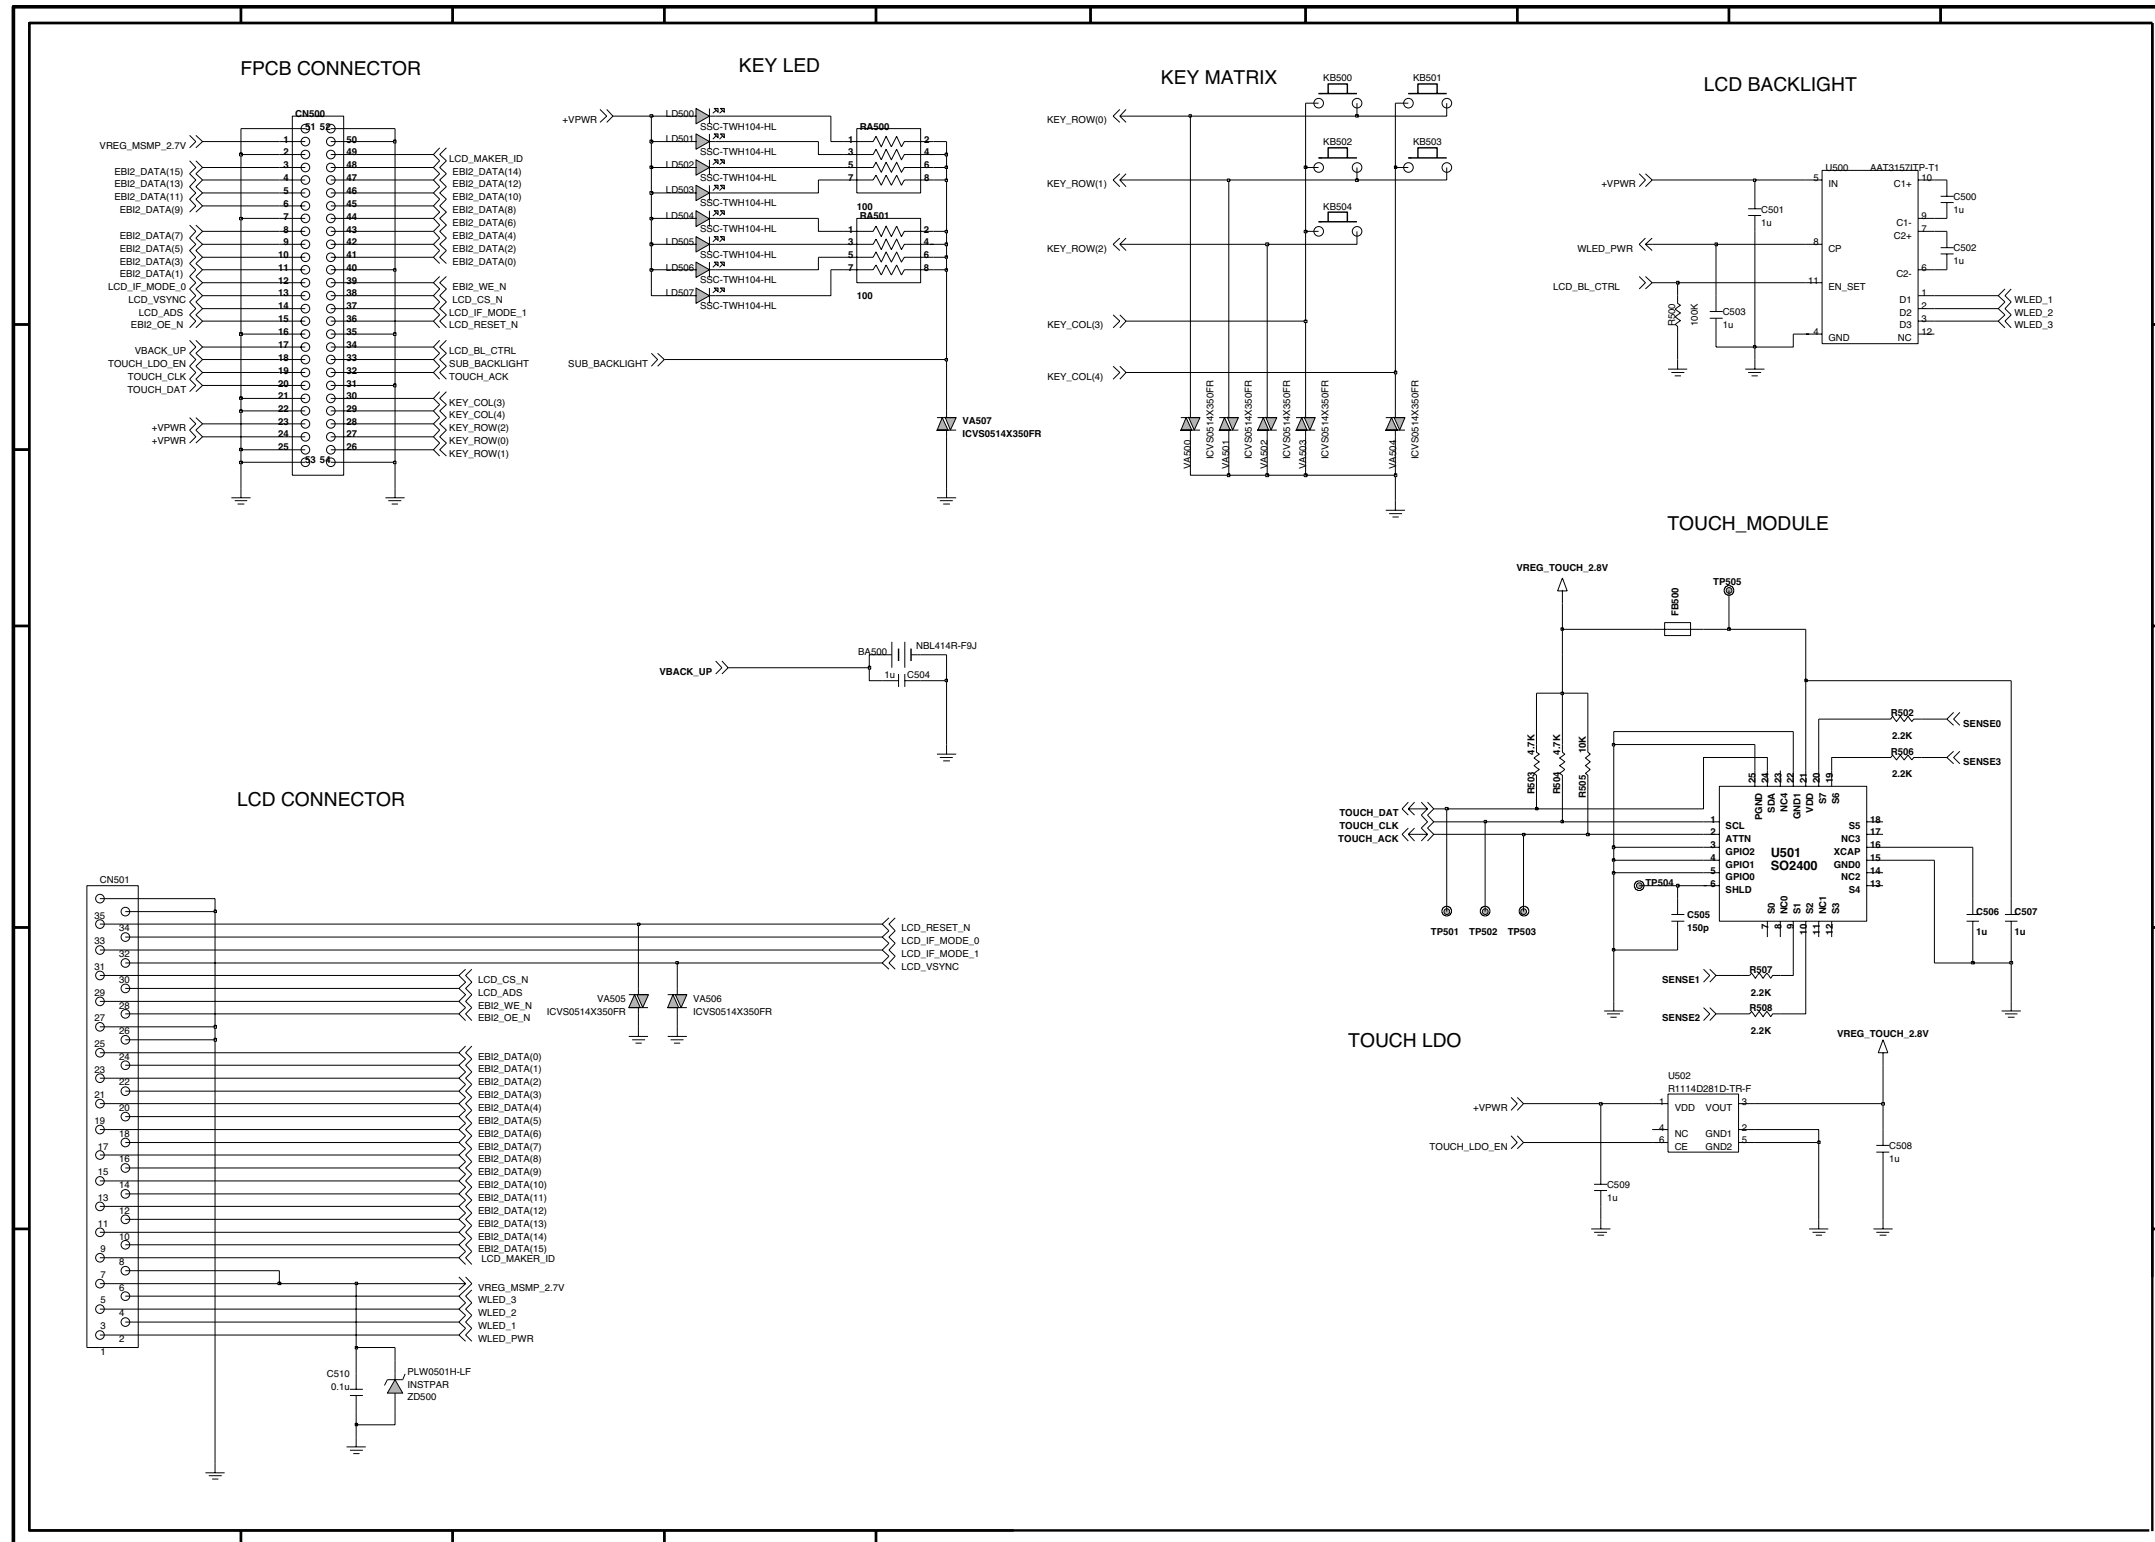


7. CIRCUIT DIAGRAM

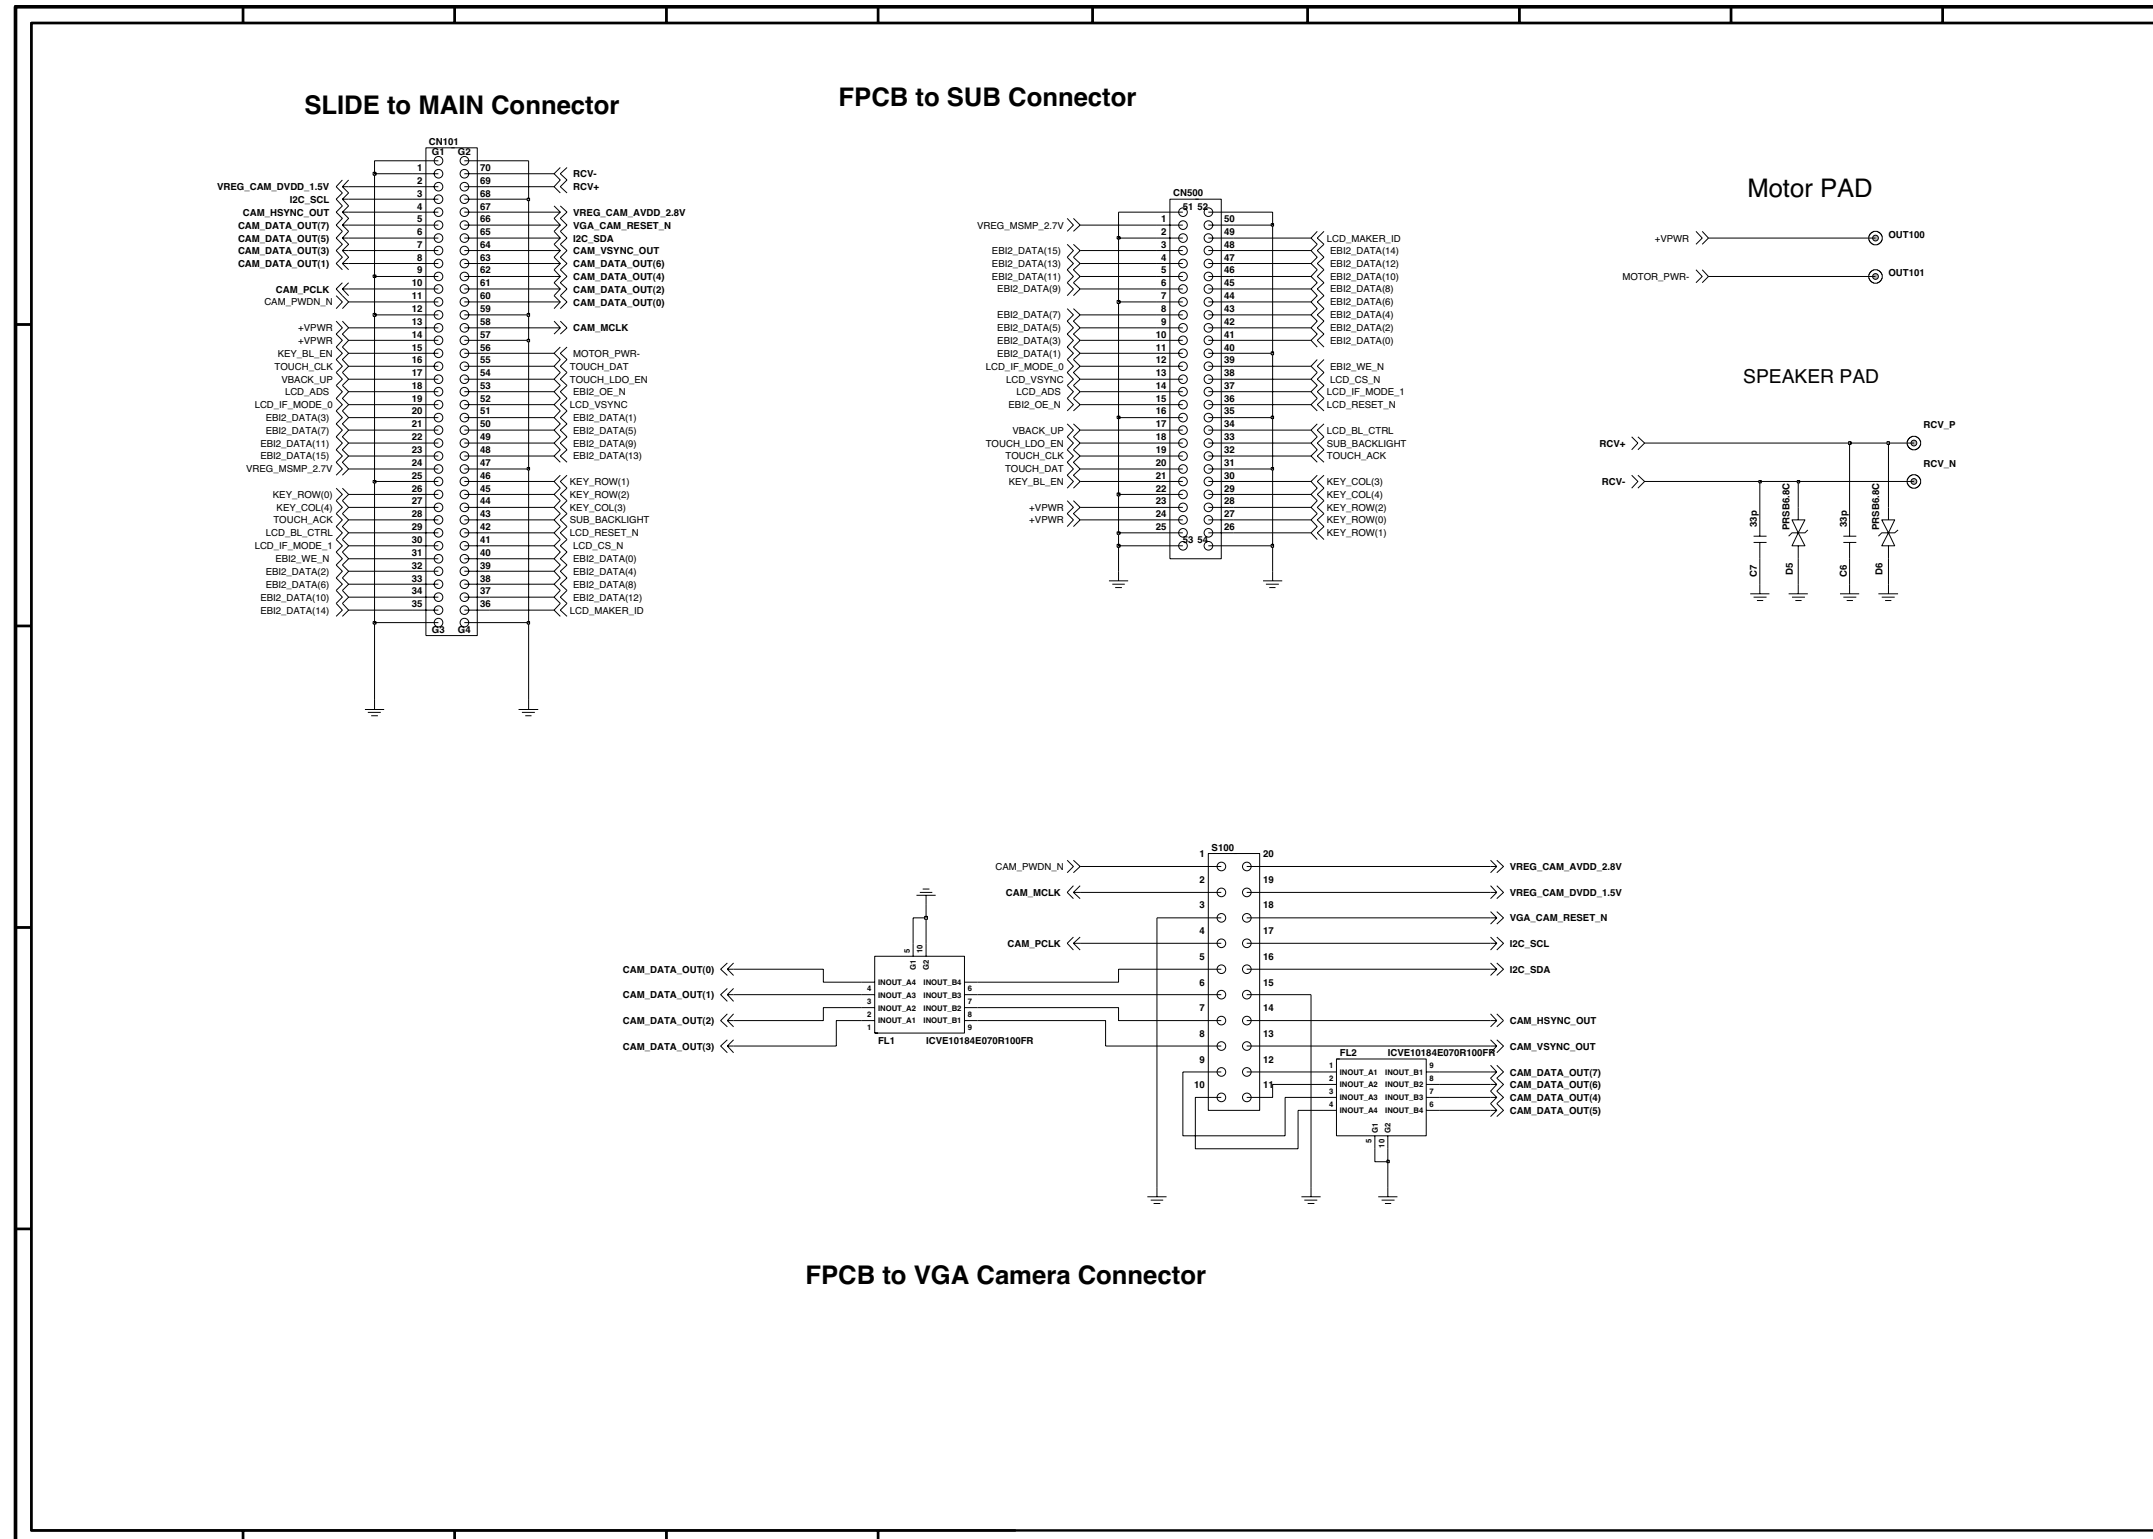

8. BGA IC PIN MAP


< Bottom View >

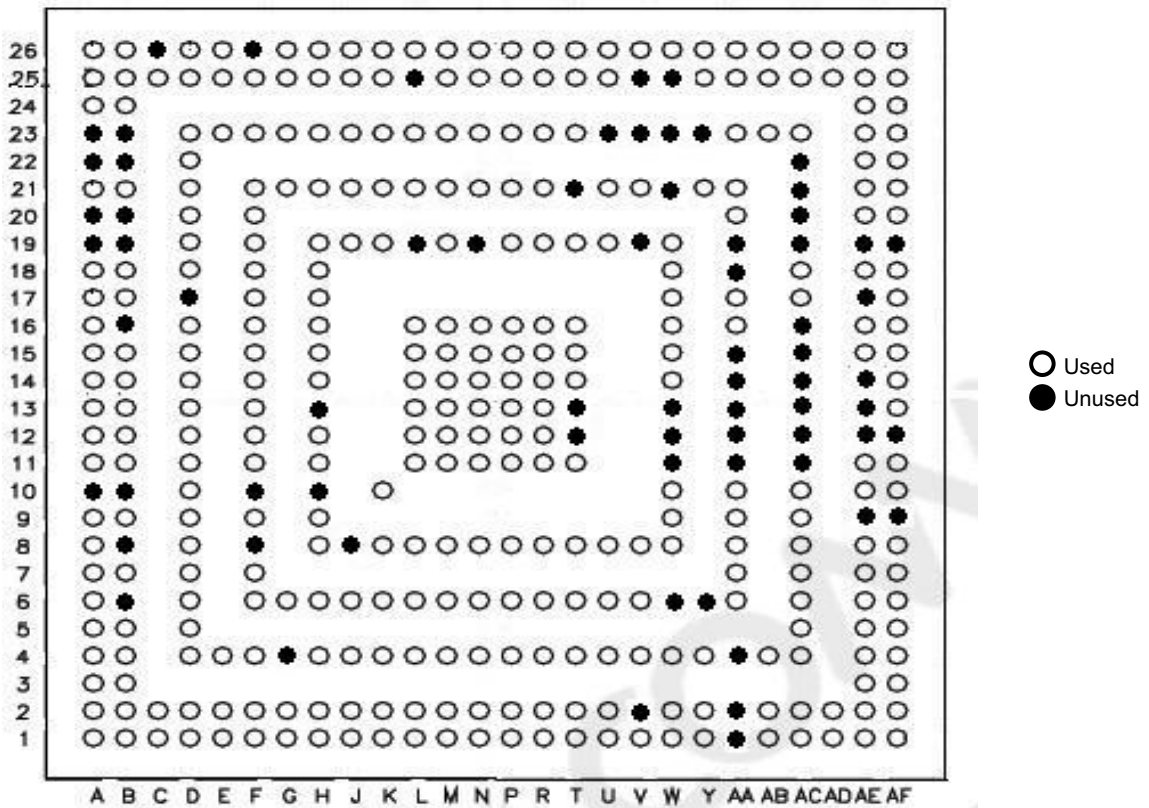

U200 (MSM6280 @ 409PIN - EUSY0295601)


8. BGA IC PIN MAP

< Bottom view >

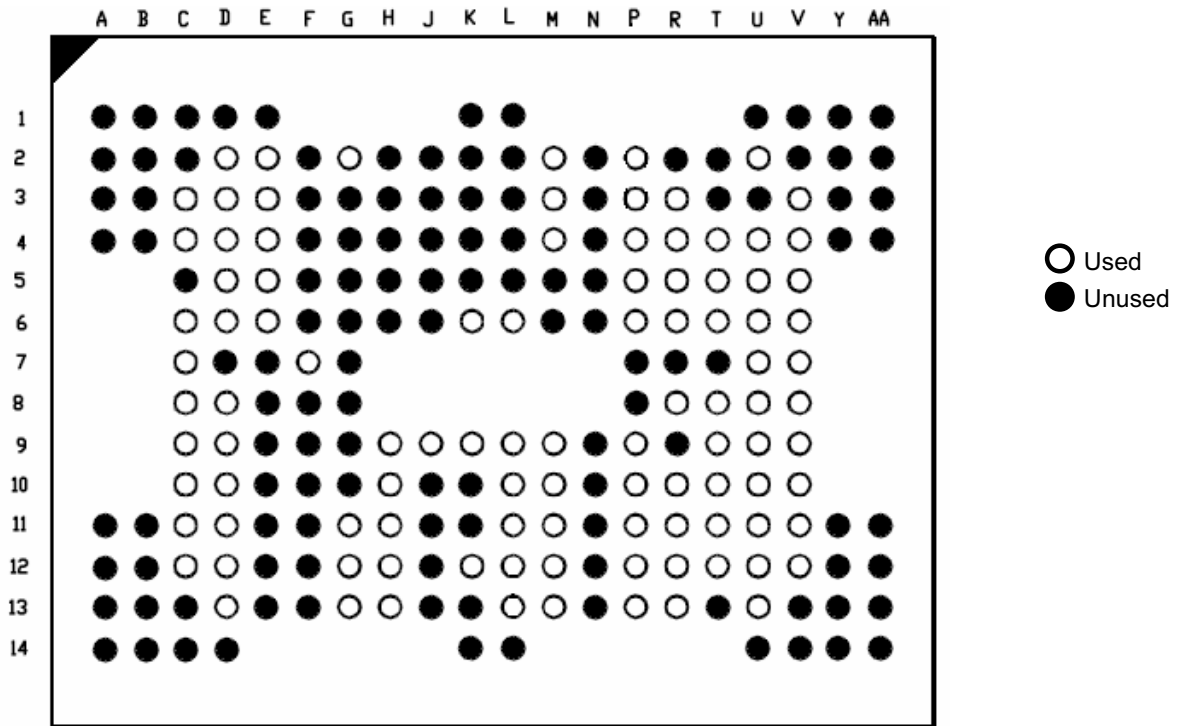

U301 (TY9000A800KOGG40 - EUSY0336902)


< Bottom view >

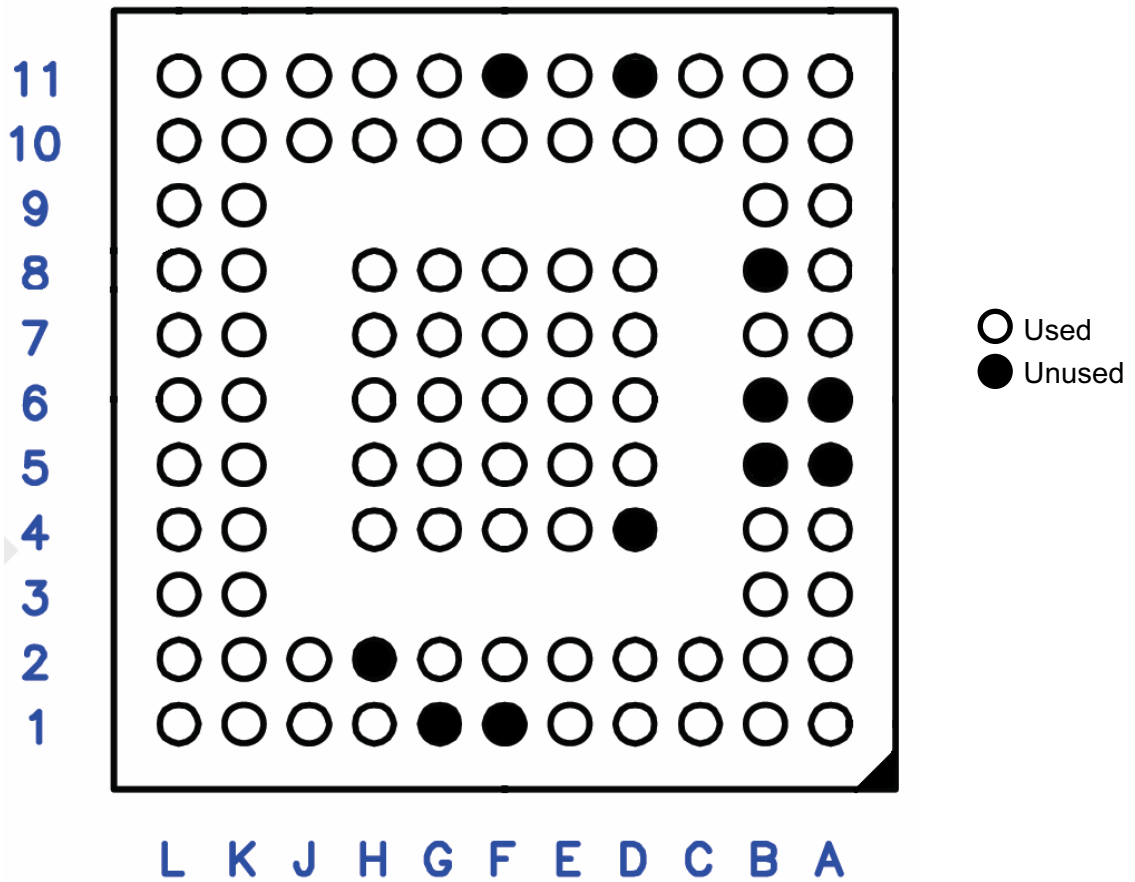

U302 (PM6658 - EUSY0350001)




9. PCB LAYOUT

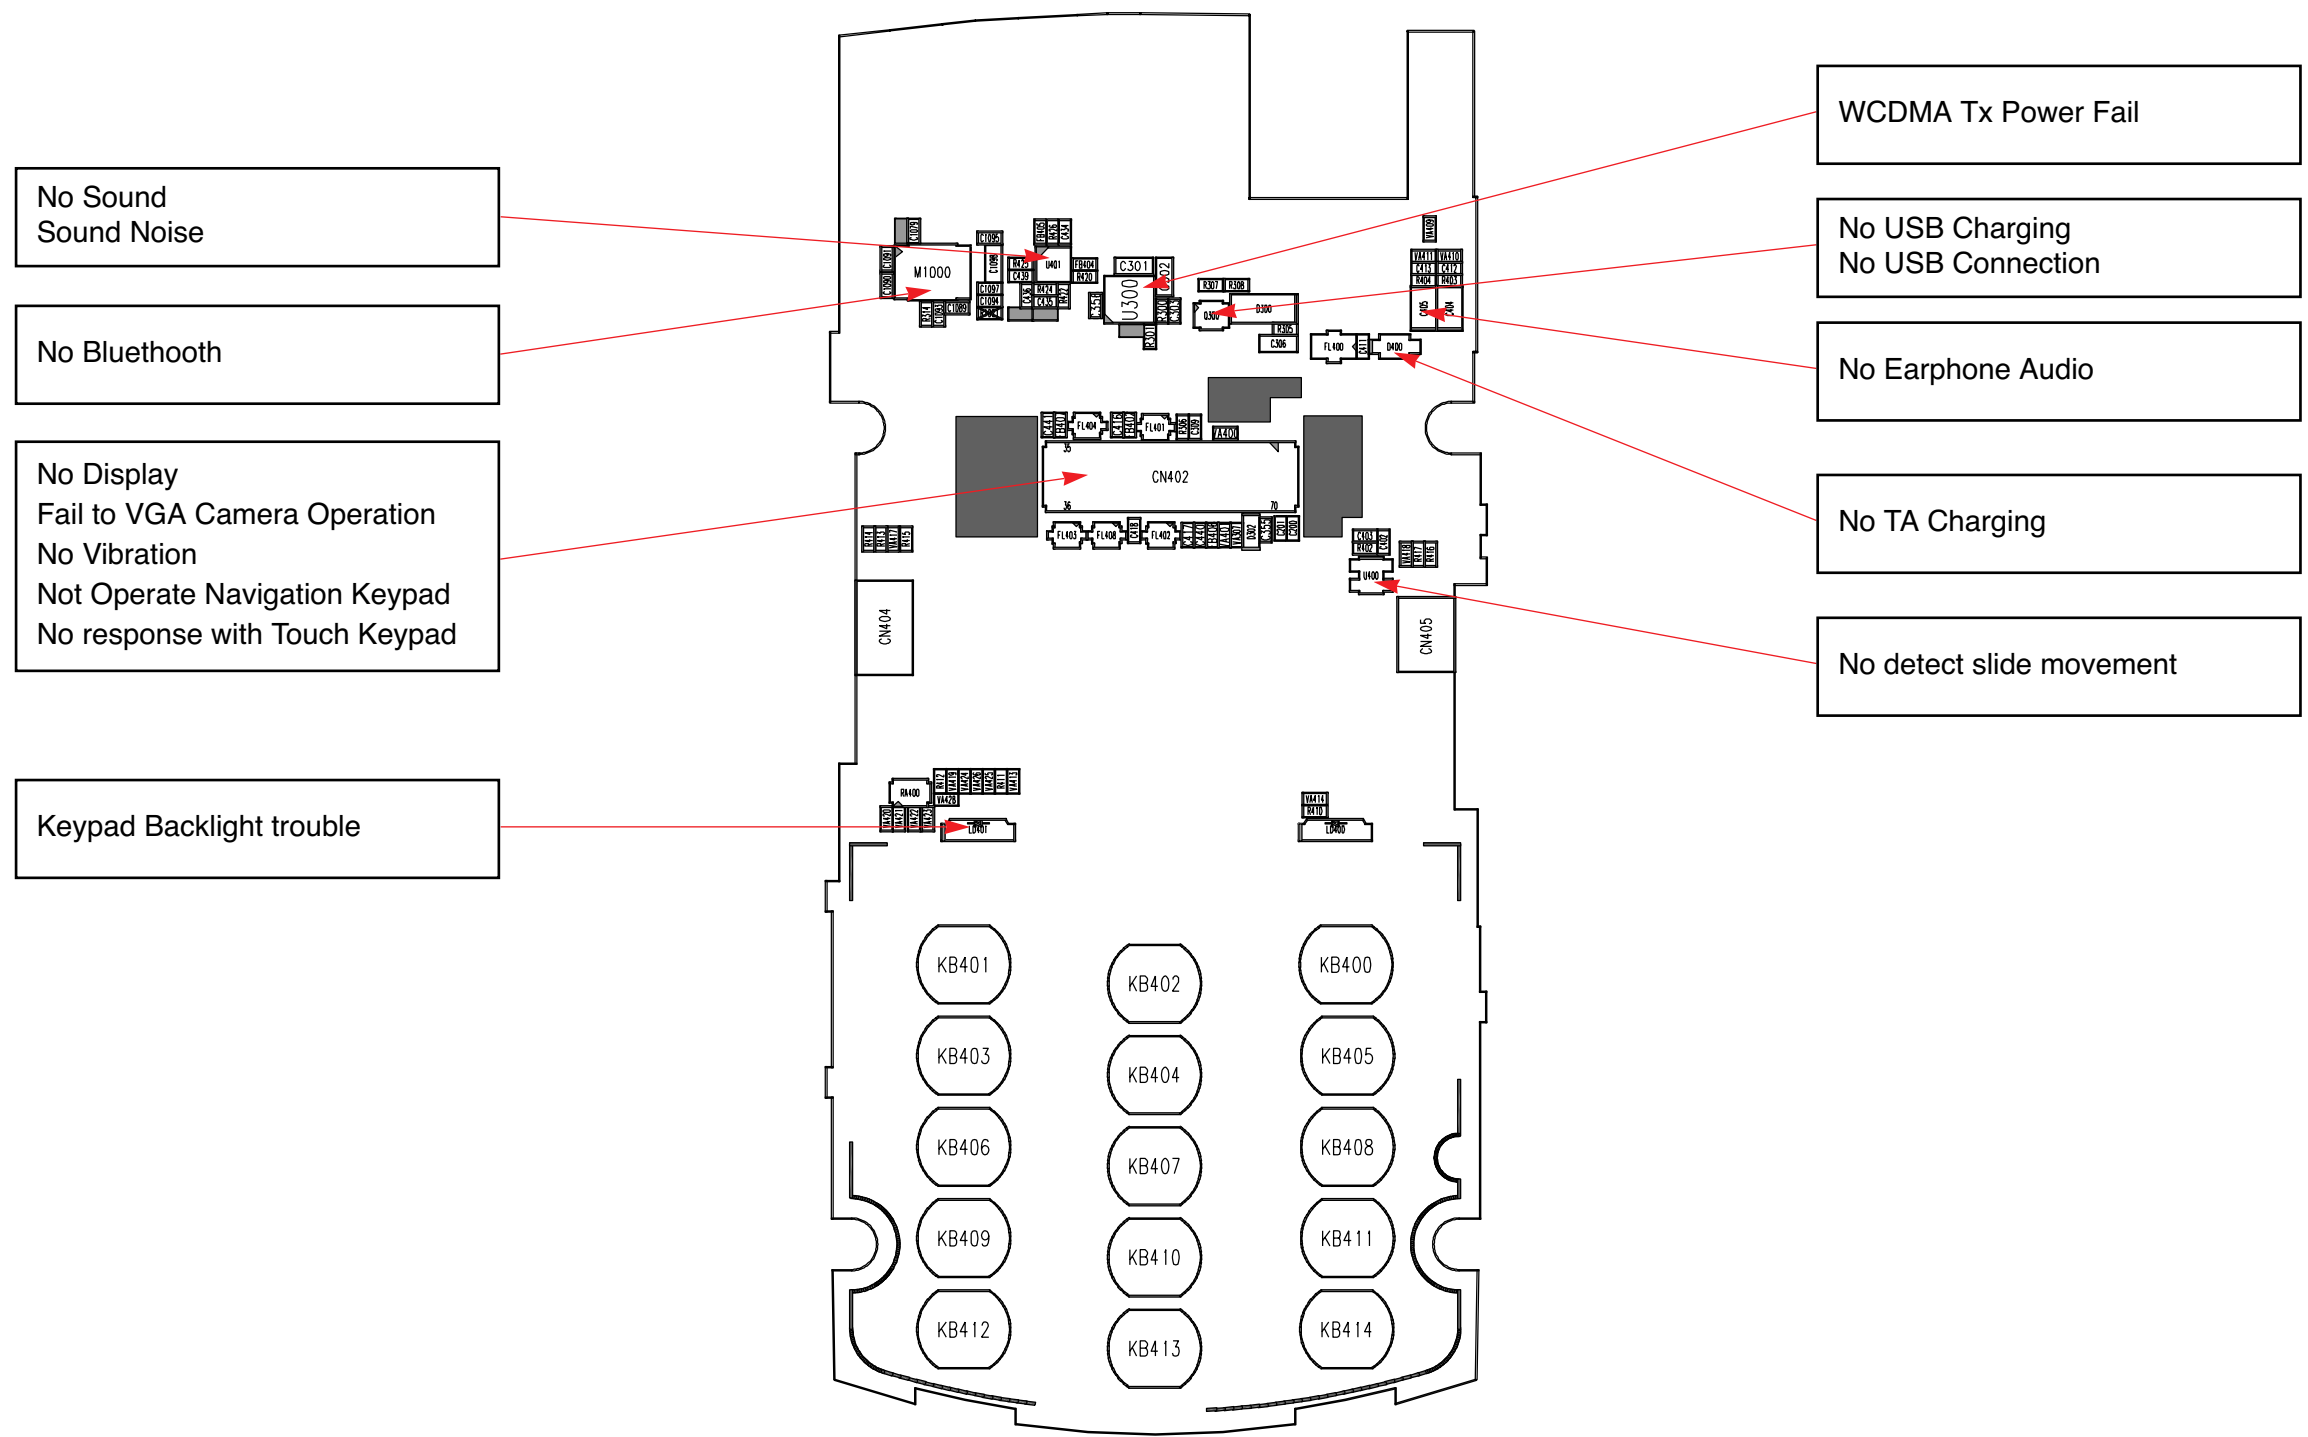


KF 390-MAIN-SPFY0175601-1.0-TOP

9. PCB LAYOUT

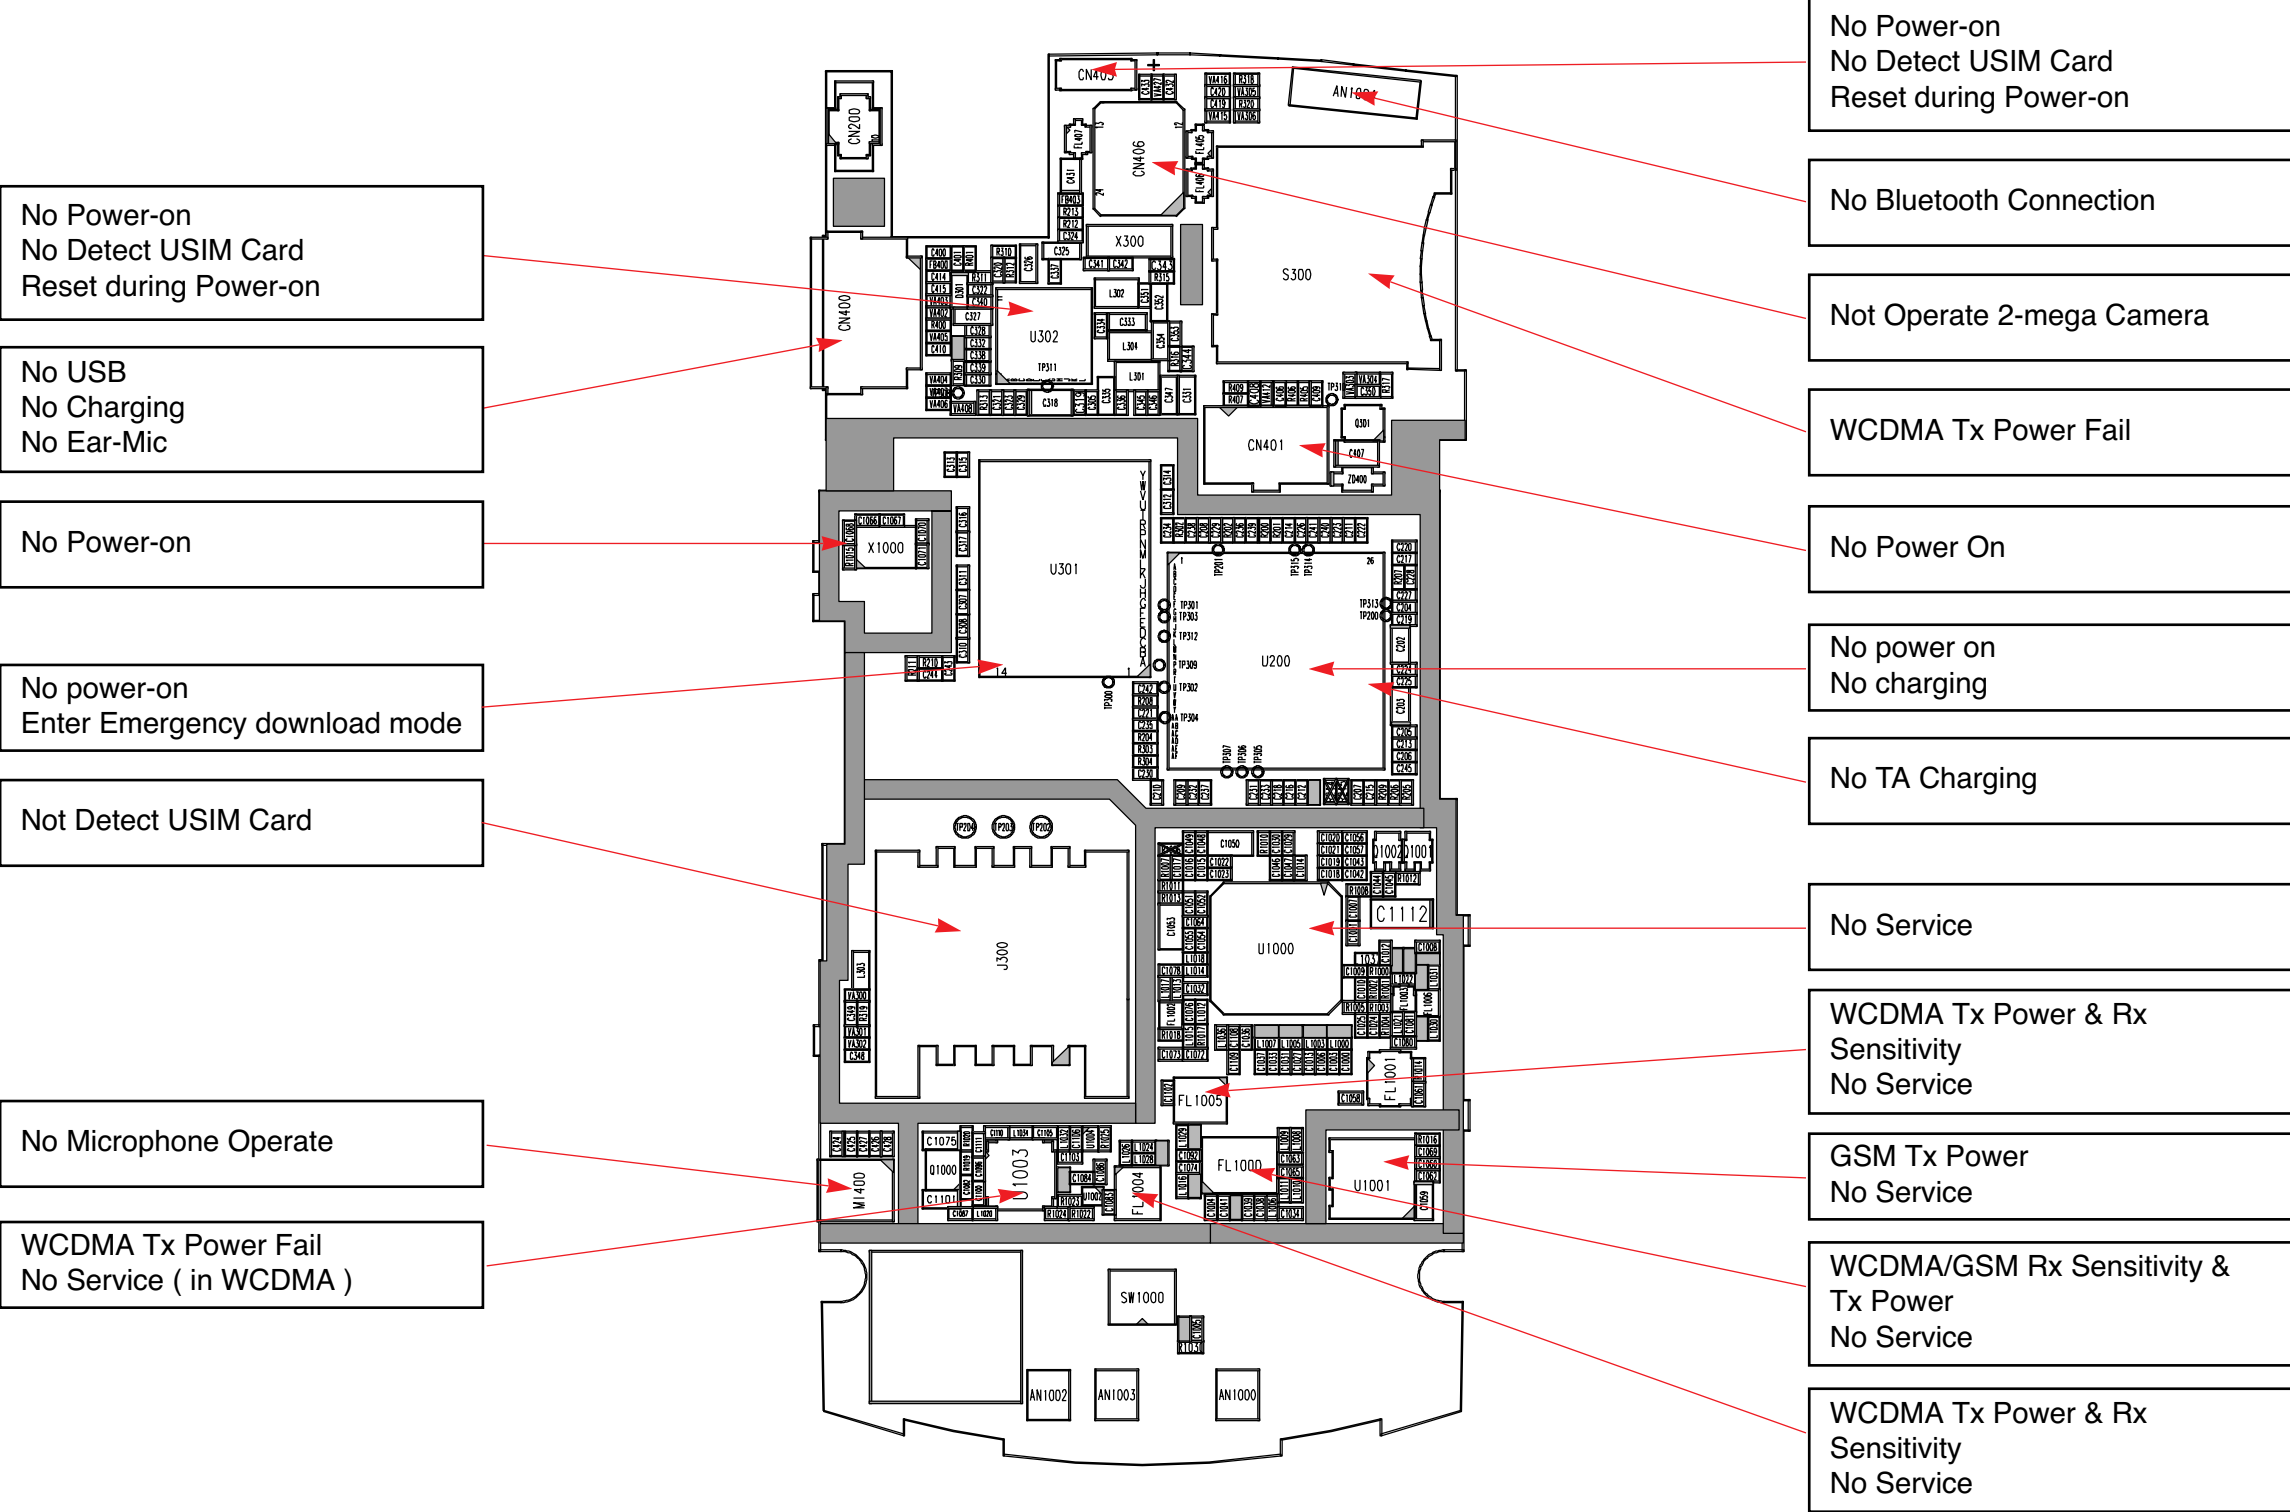


KF 390-MAIN-SPFY0175601-1.0-B0T

9. PCB LAYOUT

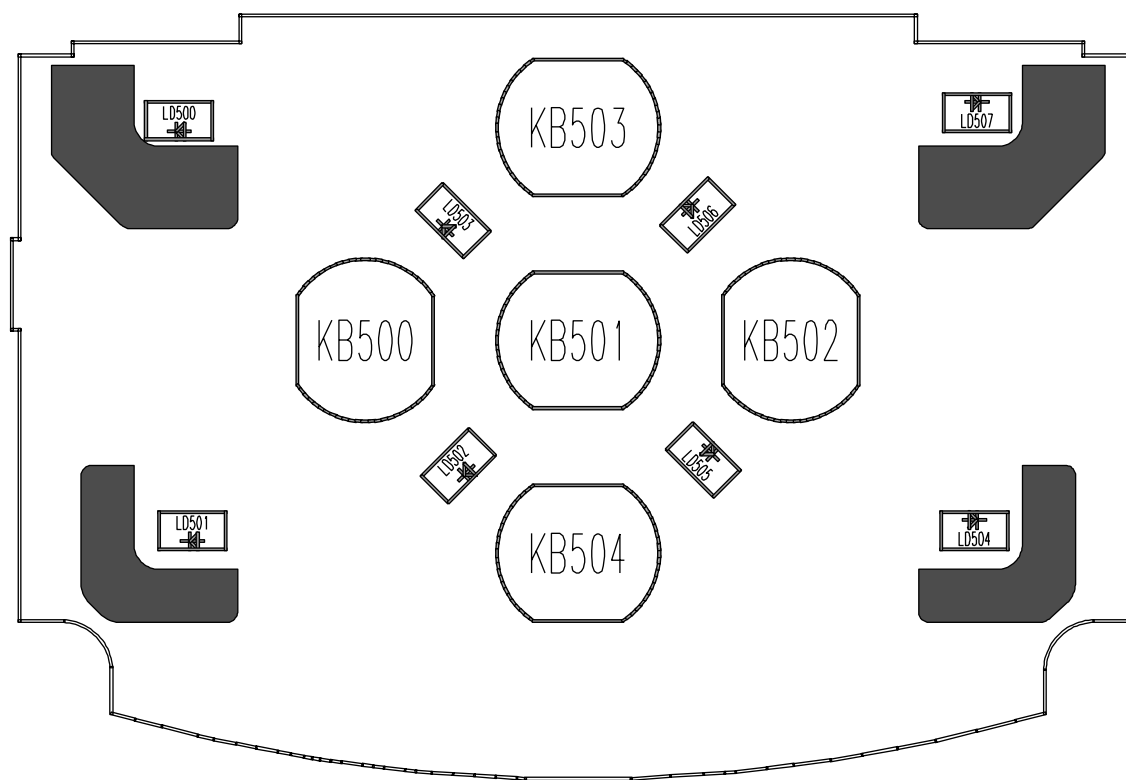


KF390-SUB-KEY-1.0 TOP

9. PCB LAYOUT

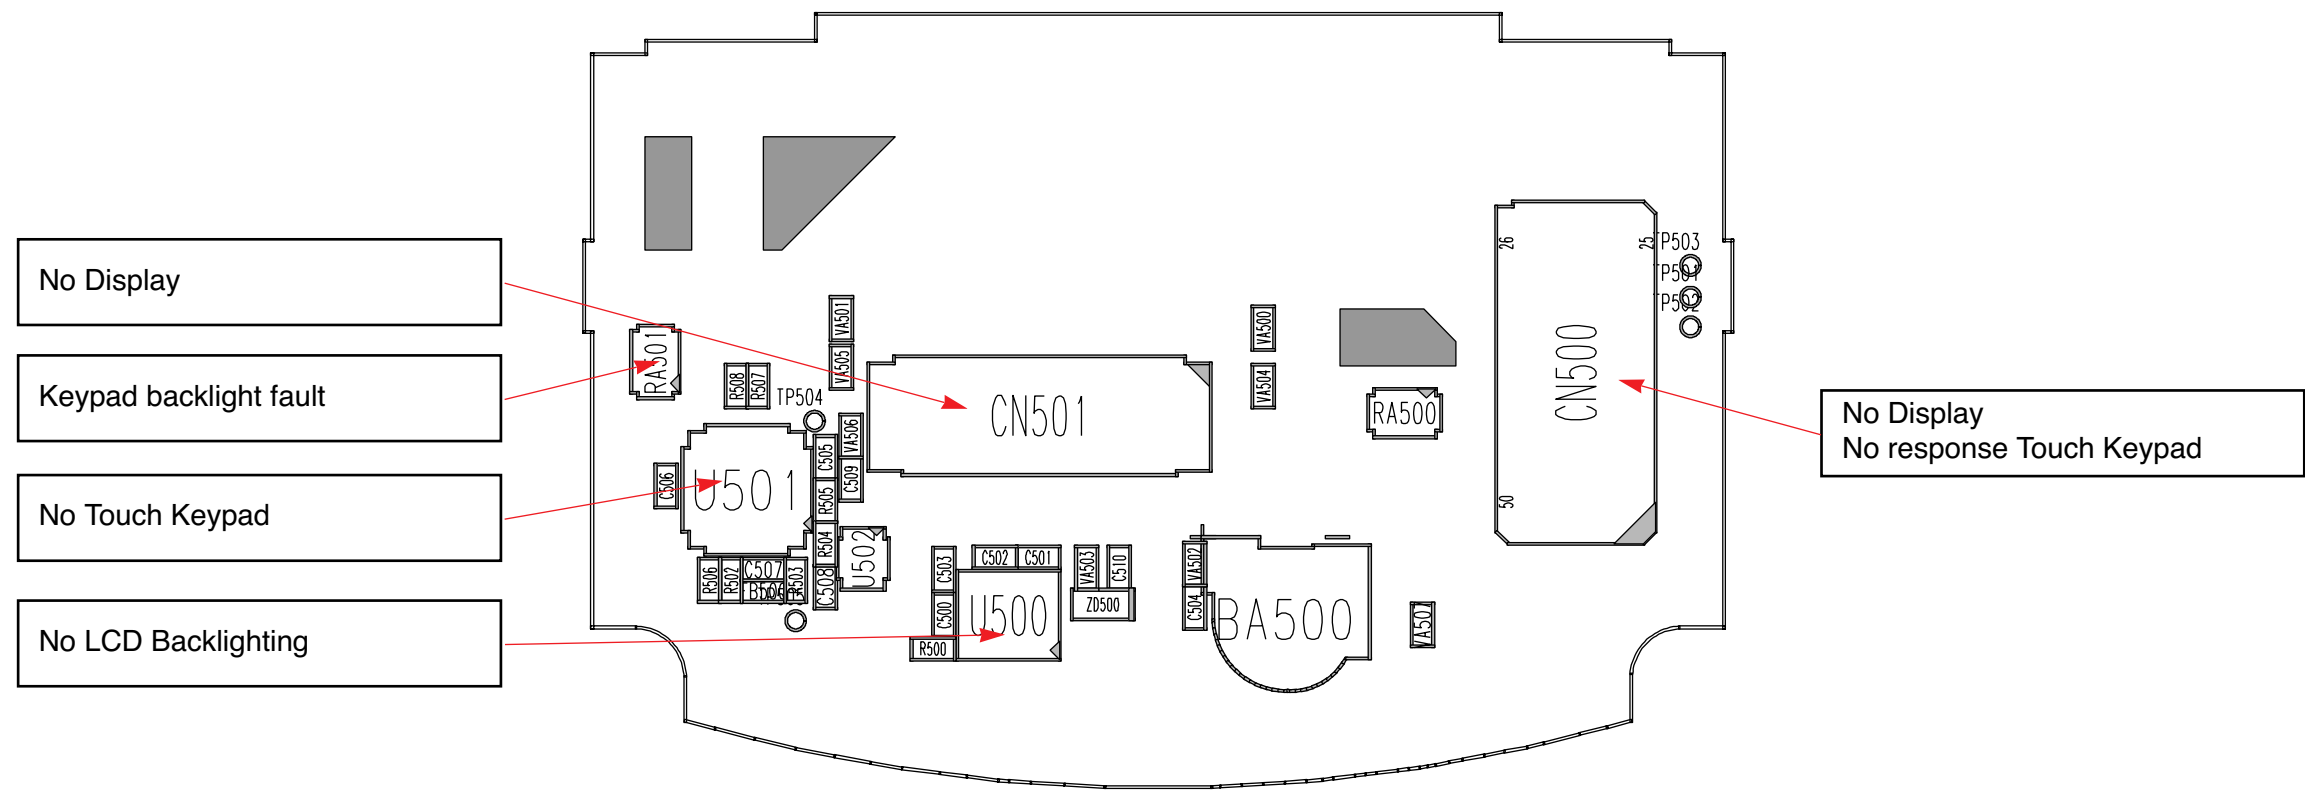


KF390-SUB-KEY-1.0 BOTTOM

9. PCB LAYOUT

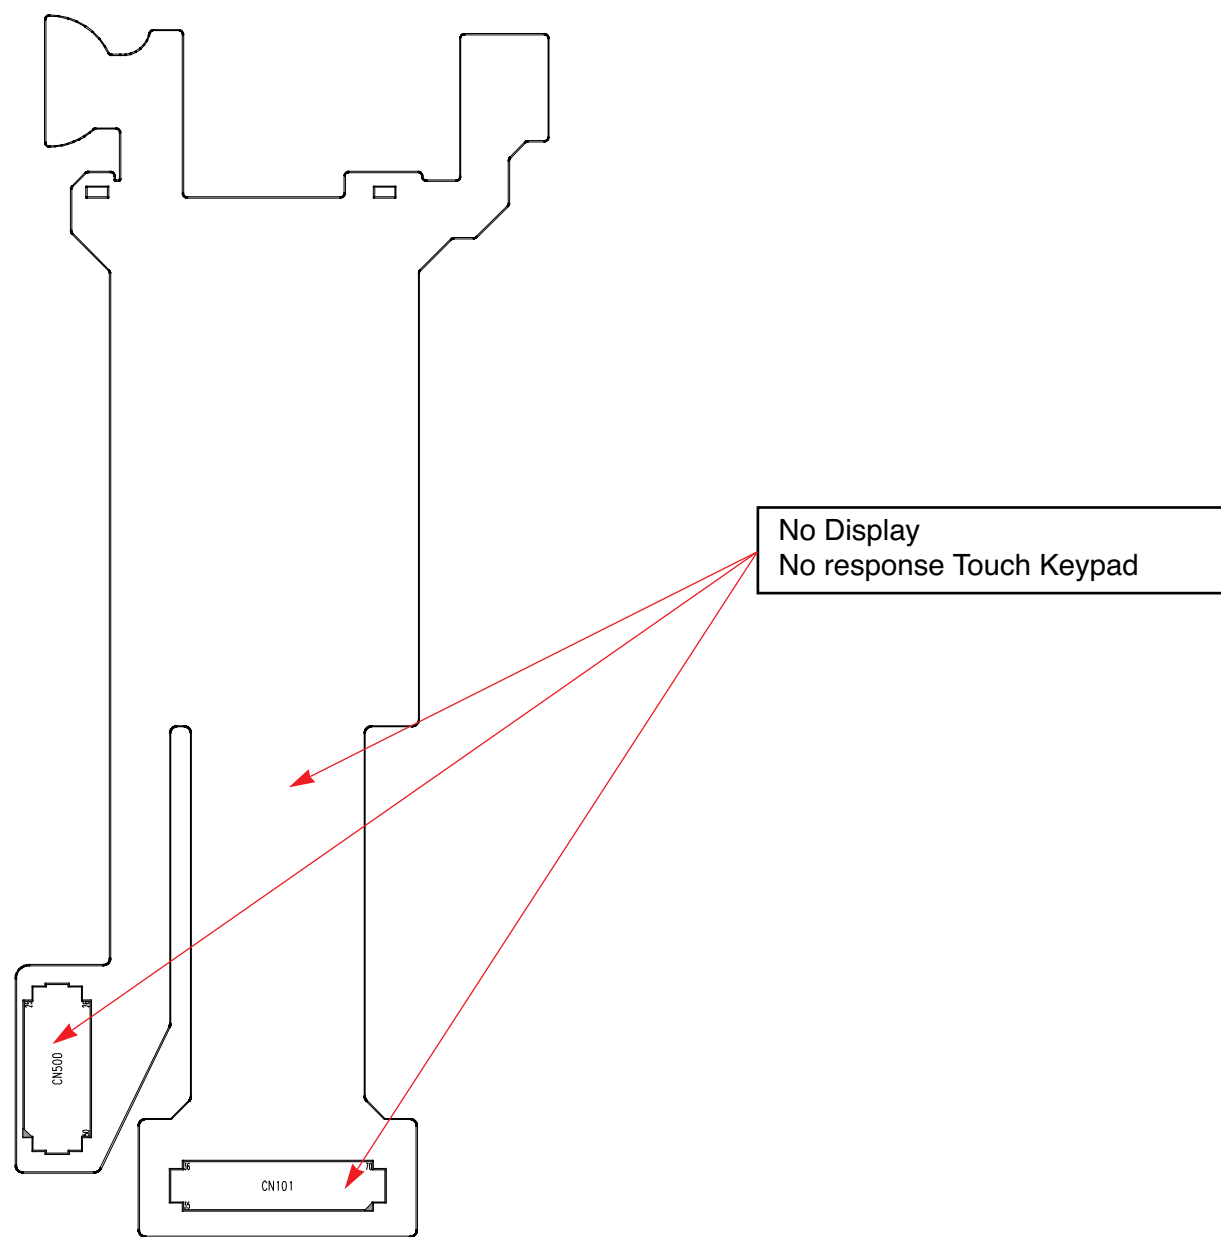

KF390-SPCY0133001-1.0 TOP

9. PCB LAYOUT

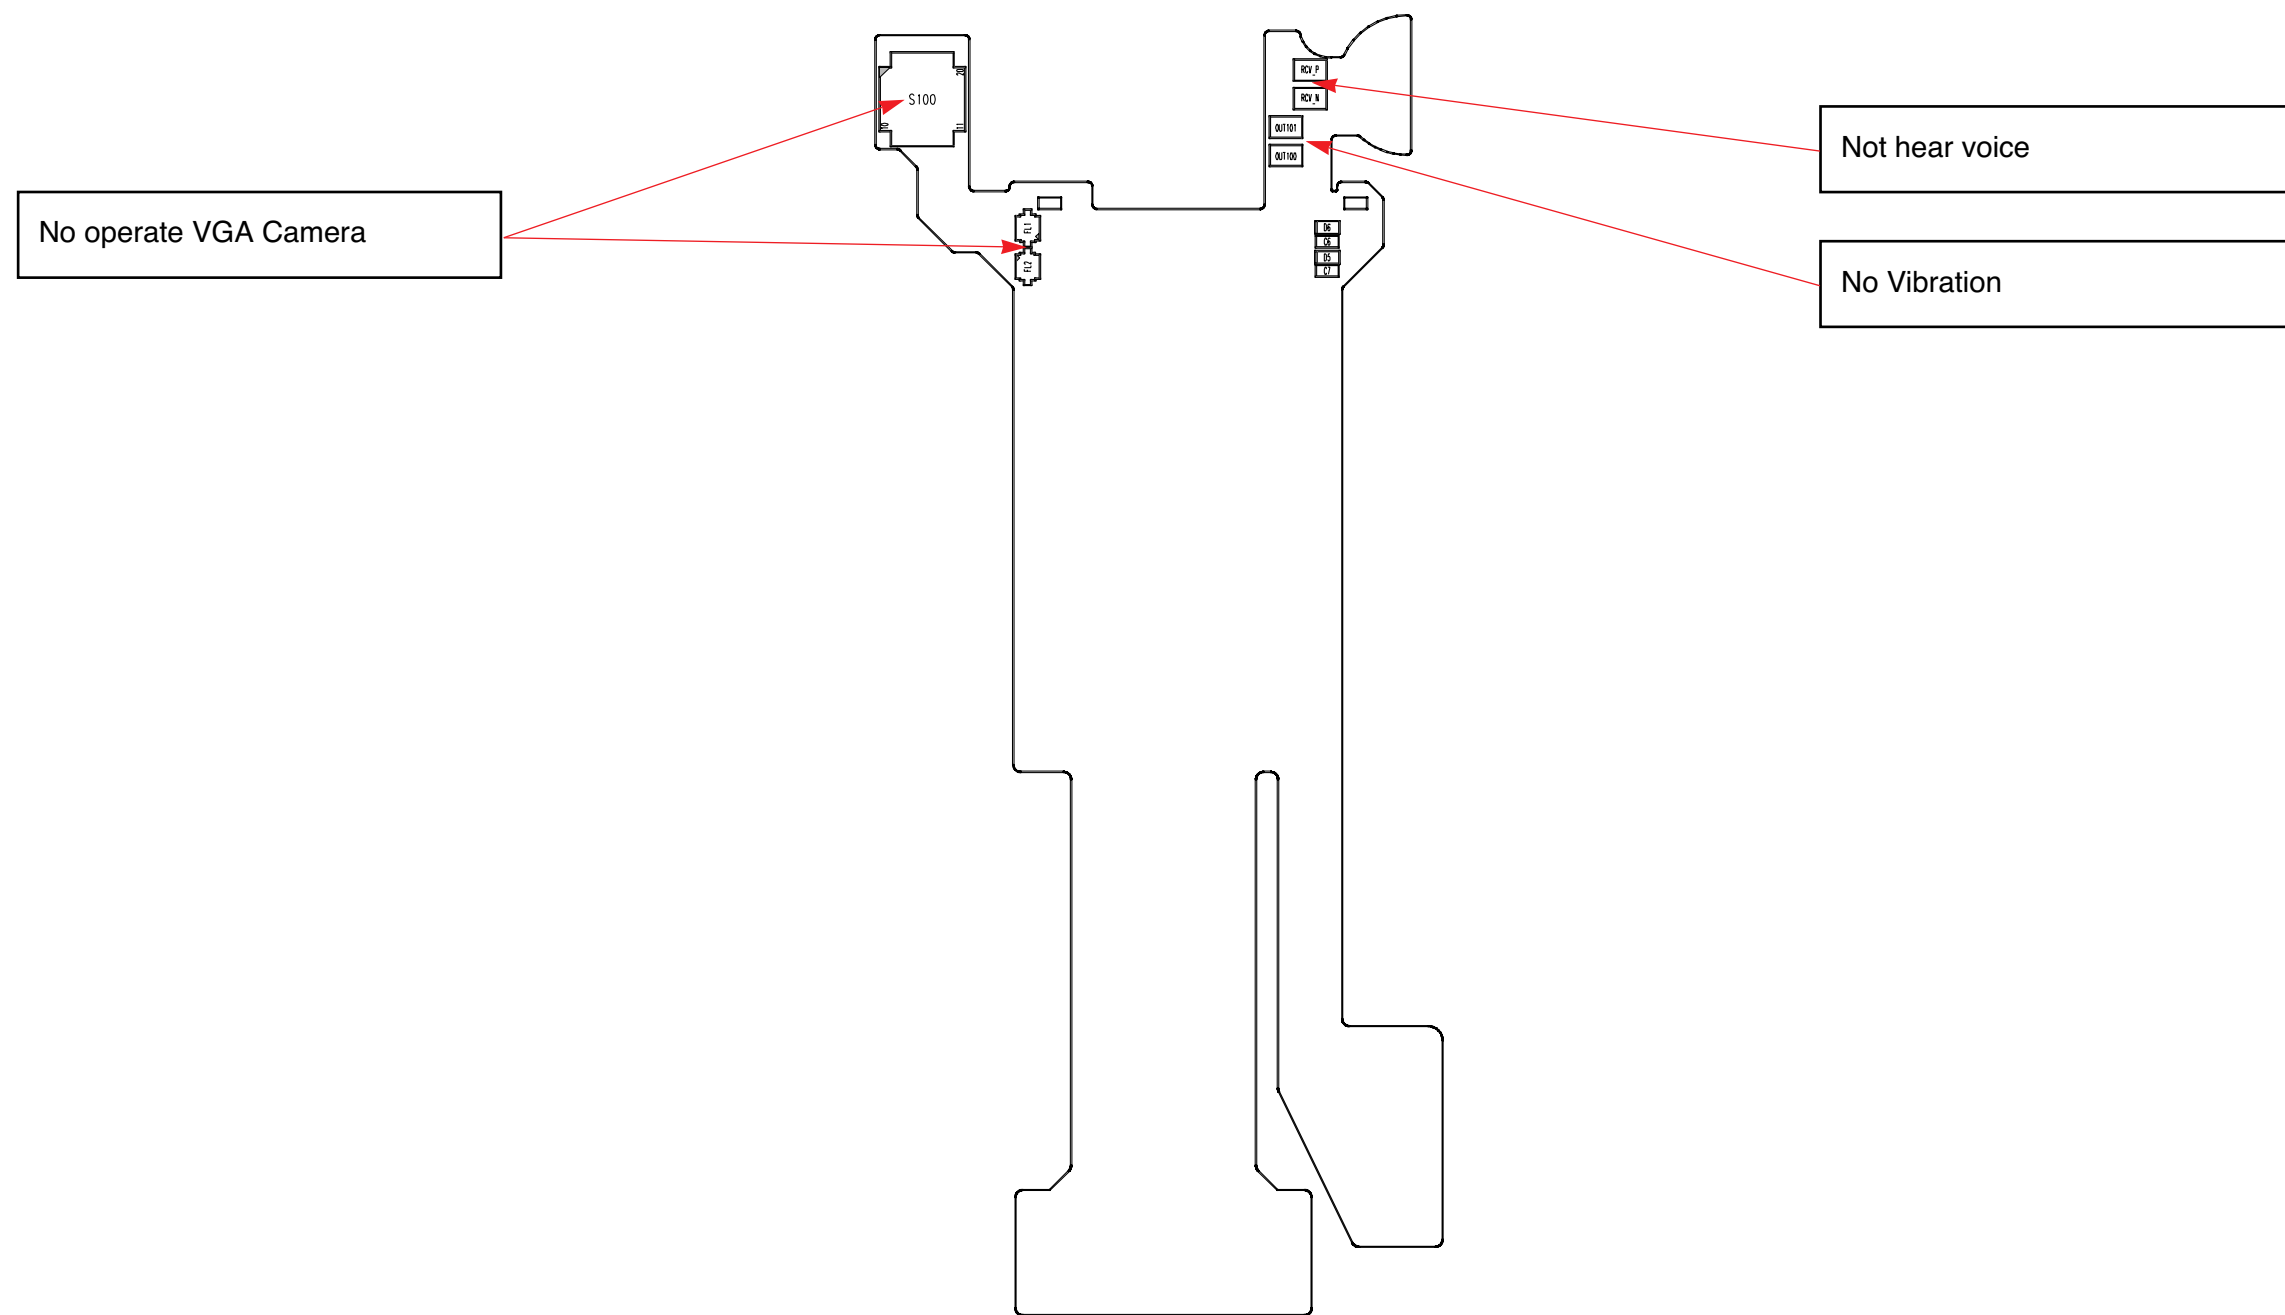

KF390-SPCY0133001-1.0 BTM