

# Overview of the phone

## ① Display indicators

Signal strength/battery level.

## ② Soft keys

Press the soft key to call up the function that is displayed as **Text** or icon on the grey fields above the key.

## ③ Call key

Dial displayed phone number or name, accept calls. In standby mode: Display the last calls.

## ④ On/Off/End key

- Switched off: **press and hold** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: press **briefly** to go back a level. **Press and hold** to return to standby mode.
- In standby mode: **press and hold** to switch off phone.

## ⑤ Input keys

 
Numbers, letters.

## ⑥ \* Press and hold

- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: only switch off ring tones.

## ⑦ # Press and hold

In standby mode: switch key lock on/off.

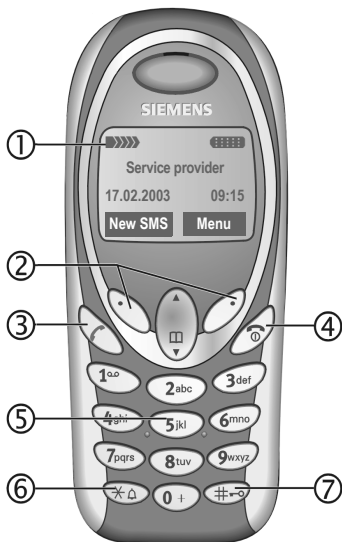

### Additional note

Please read the instructions before using the phone.

 
## Getting Started

The front and back covers of the phone and the keypad (CLIPit™ Covers, my-CLIPit™) can be changed in seconds – no tools required. Please switch the phone off first.

### To assemble the phone



### To insert the SIM card

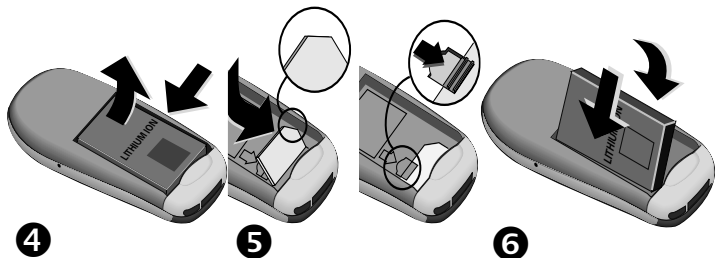

Insert SIM card in the opening, contacts pointing downwards (make sure the angled corner is in correct position **5**). Push gently until it engages **6**.


#### Additional notes

 Your phone's display is delivered with a protective film. **Remove this film before getting started.**

To avoid damage to the display, the phone should not be used without the front cover.

## Charge battery

The battery is not fully charged when delivered. Plug in the charger cable at the bottom of the phone, plug in the power supply unit to the mains power socket and charge for at least **two hours**.

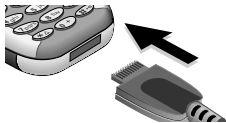


### Charging time

The charging time is 2 hours. Ambient temperature of 5°C to 40°C (icon flashes as a warning when 5°C above/below this).

## Switch on/off, PIN entry

### Switch on/off

**Press and hold** On/Off/End key  to switch on or off.


### Enter PIN

The SIM card can be protected with a 4–8 digit PIN. Enter the PIN code using the number keys (the display shows a series of asterisks, if you make a mistake press **Clear**). Confirm your input with **OK**. Logging on to the network will take a few seconds.

First time switching on phone, the time and date must be set.

### Standby mode

When the name of the service provider/logo appears on the display, the phone is **in standby mode and ready for use**.

**Press and hold** the On/Off/End key  to return to standby mode from any menu option.

## Security

The phone and SIM card are protected against misuse by several security codes. Keep these confidential numbers in a safe place where you can access them again if required.

**Menu** → Setup → Security → Codes  
→ Select a function.

### PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivation of the control.

### Change PIN

You can change the PIN to any 4–8 digit number you may find easier to remember.

### Change PIN 2

(Displayed only if PIN 2 is available.)  
Proceed as with **Change PIN**.

### Change phonecode

You define and enter the phone code (4–8 digits) when calling a phone code protected function (e.g. **Direct call**, p. 5) for the first time. It is then valid for all protected functions. If it is entered incorrectly three times the phone is locked. Contact the Siemens Service.


### Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card. If the PUK (MASTER PIN) has been lost, please contact your service provider.

## Prevent accidental activation


Even if PIN use is deactivated (p. 3) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.


After **pressing and holding** the On/Off/End key  select **OK** to switch on the phone or abort the operation with **Cancel**.

# Making a phone call



## Dialling with number keys

The phone must be switched on (standby mode). Enter the number (always with prefix, if necessary with the international dialling code). Press **Clear** to clear the last digit, **press and hold** to clear the entire phone number. To dial press the  key.




## End call

Press the End key  **briefly**. Press this key even if the person on the other end of the line has hung up first.


## Set volume

Use the scroll key  to start adjusting the volume during conversation. Set volume with .

## Redial previous numbers

To redial the phone number last called, press the Call key  **twice**. To redial other numbers that were dialled previously, pick out the required phone number from the list with , then press  to dial.

## When a number is busy

For automatically dialling the phone number for up to 15 minutes at increasing intervals, press **Auto dial**. For phone ringing when the busy number is free, press **Call back** (). Press **Prompt** and a beep will remind you to redial the displayed phone number after 15 minutes.

## Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.




Press **Reply** or .

If the phone number has been transmitted by the network, it is displayed. If the number and the name are stored in the Phonebook, the corresponding name is displayed instead. If set, an animation can be displayed instead of the bell icon.

## Reject call

**Reject** or  **press** briefly.

## Held call

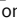Make a new connection during a call with  **menu** → Hold →  (dial new phone number, also from Phonebook: ). With **Swap** you can swap back and forth between both calls.

Additional costs will be incurred for the 2nd phone connection.

## Conference



Make a new connection during a call with **Menu** → Hold → (dial a new phone number).

With **Menu** → **Conference** you can join the held call. Repeat this procedure until all participants are linked together (up to 5 participants).

All calls in the conference are ended simultaneously when the End key is pressed.

**Additional costs will be incurred for every additional phone connection.**

## Call menu

Several functions are only available during a call:

**Menu** → Select a function.

## Direct call

The phone can be locked, so it's only possible to dial a defined number.

### Switch on

**Menu** → Setup → Security → Direct call

Press **Select** and enter phone code. When first prompted you define and enter the phone code (4–8 digits). **Please do not forget this code!** Confirm input with **OK** and press **Change**. Select phone number from the Phonebook (p. 5) or enter a new one. With **OK** confirm On.

### Use

Press and hold the right soft key to dial.

### Switch off

Press and hold **#** and enter phone code. Confirm input with **OK** and press **Change**. With **OK** confirm Off.

# Phonebook

## New entry

Open Phonebook (in standby mode)

(select <New entry>) → **Select**  
→ Activate input fields.

**Number:** Always enter phone number with an area dialling code.

**Name:** Enter first name or surname.

**Group:** Organise entries in groups, select with **Change**.

**Location:** Select location: **SIM**, **Mobile** or **Protected SIM**

**Record no.:** This is automatically assigned to the entry. Change with **Change**.

Press **Save** to store the new entry.

## Text entry

Press number key repeatedly until the required letter appears. The cursor advances after a short delay. Example:

**2** Press once for **a**, twice for **b** etc.  
**Press and hold** to write the number.

**Ä, ä, 1–9** Umlauts and numbers are displayed after the relevant letters.

**Clear** Press briefly to delete the letter before the cursor, **press and hold** to delete the whole word.

Move the cursor (forwards/back).

**#** Press briefly: Switch between: **abc**, **Abc**, **ABC**, **T9abc**, **T9Abc**, **T9ABC**, **123**. Status indicator in the top line of the display.

**Press and hold:** All input modes are displayed.

**\*** Press briefly: Select special characters.

**Press and hold:** Open input menu.



- 0** Press once/repeatedly:  
.,?!' " 0 - ( ) @ / : \_ + ~ &
- Press and hold:** Writes 0.
- 1** Writes blank. **Press** twice = skip line.

## Call/search for an entry



Open Phonebook , select name by typing first letter or scroll and dial with .

## Call with record no.

A record number is automatically assigned to every new entry in the Phonebook.

 Enter record number (in standby mode) → # → .

## Edit entry

 → Select entry → **Options** → **Edit**  
→  (select required input field)  
→ Make changes → **Save**

## Location

An entry can be moved to different storage locations in the Phonebook (edit entry, p. 6).

### SIM (standard)

Entries that are stored in the Phonebook on the SIM card can also be used on a different GSM phone.

### Mobile

Phonebook entries are stored in the memory of the mobile phone when the memory of the SIM card is full.

### Protected SIM


Phone numbers can be stored in protected locations on a special SIM card. A PIN 2 is needed for editing (p. 3).

## Groups

If there are many Phonebook entries it is best to assign them to a group, e.g.:  
Family, Friends, VIP, Others

A special ring tone can sound and/or a symbol can be displayed if the phone number of a call is registered in a group.



### Select a group

**Menu** → Phonebook → <Groups>  
→  (select a group) → **View**

All entries of the selected group are displayed.

### Change group assignment

You can assign a Phonebook entry to a group when you enter it (p. 5).


 → Select entry → **View** → **Edit**  
→  (scroll to group) → **Change**  
→ Select a new group → **Save**

### SMS to group

A memo (SMS) can be sent as a "circular" to all members of a group. Each SMS is charged separately!

Open <Groups> in Phonebook menu and scroll to a group.

**Options** → SMS to group → **Select**  
→ Compose message →  (the group is displayed) → **OK** → 

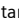
The SMS is sent to the first recipient. Press  again to start the next send operation. Each send operation must be confirmed. Individual recipients may be skipped.

### Call to group

You can call up to 5 group members one by one and link them together in a conference (function may need to be enabled by the service provider).

Open <Groups> in Phonebook menu and scroll to a group.

**Select** → Select the entries → **Change**  
(mark/unmark entry) → **OK**

The first entry is dialled and the call is put on hold. Proceed  by calling the next entry until all marked entries are called.

With **Options** you can link the calls on hold in a conference.



### Group call tones

You can assign different ringtones to groups.

**Menu** → Ring tones → Group calls  
→ Select a group → **Select**  
→ Select ring tone → **Select**

## Messages (SMS)

### Read messages

A new message is indicated on the display with . Press the control key on the left to read the message. Scroll through the message line by line with .

### Reply menu




**Reply** Open the reply menu.

### Inbox/outbox

**Menu** → Messages → Inbox or Outbox

The list of saved messages is shown.

### Compose a message


**Menu** → Messages → New SMS  
→ write text →  →  /   
(enter phone number or select from Phonebook) → **OK**

The SMS is sent to the service centre for transmission.


### Text menu

**Options** Open the text menu.

### Write text fragments

**Menu** → Messages → Predefined texts  
→ <New entry>  
→  (write text fragment)  
→ **Save**

### Use text fragments

 (write message text) → **Options**  
→ Insert text →  (select text fragment from the list) → **Select**

The text fragment is inserted into the text to the left of the cursor.

### Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary. Write a word and finish it without looking at the display. Simply press the keys where the relevant letter is located once. If several options are found in the dictionary the most probably is displayed first. For further options please press the right softkey.

T9® Text Input is licensed under one or more of the following:  
U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;  
Canadian Pat. No. 1,331,057;  
United Kingdom Pat. No. 2238414B;  
Hong Kong Standard Pat. No. HK0940329;  
Republic of Singapore Pat. No. 51383;  
Euro.Pat. No. 0 842 463 (96927260.8)  
DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;  
and additional patents are pending worldwide.

# Profiles

**Menu** → Profiles

Three profiles are standard with default settings, they can be changed however:

Normal environment, Quiet environment, Noisy environment

You can set two personal profiles (<Name>).

The special profile **Aircraft mode** cannot be changed.

## Activate

Select default profile or personal profile → **Select**.

## Change setting

Select profile → **Options** → Change settings  
The list of available functions is displayed.

## Aircraft mode

The phone will automatically switch off if you select this profile. Even the alarm tone is deactivated. An alarm is only shown on the display. It is not possible to modify this profile

## Normal operation

The next time you switch on the phone and return to normal operation the default profile will be activated.

# Setup


## Display

**Menu** → Setup → Display  
→ Select a function.

## Language

**Menu** → Setup → Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

\*#0000# 

## Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

## Call setup

**Menu** → Setup → Call setup  
→ Select a function.

## Hide ID

When switched on, the display of the calling party shows your phone number (dependent on service provider). To suppress this display, you can activate the "Hide ID" mode.

## Call waiting

If you are registered for this service, you can check whether it is set and you can activate/deactivate it with **Call waiting**.

## Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed.



## Divert


You can set the conditions for which calls are diverted to your mailbox or other numbers.

**Menu** → Setup → Divert  
→ Select a function.

### Set up call divert (example)

#### All calls




All calls are diverted.  is shown in the top line of the display in standby mode.

#### Unanswered calls



Includes Unanswered, Not reachable, No reply, Busy

**Select** → Set →  (Enter the phone number to which the call should be diverted) → **OK**


After a short pause, the setting is confirmed by the network.

#### Status check

After a short pause the current information is shown.

 Condition set.

 Not set.

 Display, if status is unknown (e.g. on a new SIM card).

#### Clear all



All set diversions are cleared.

## Clock

**Menu** → Setup → Clock  
→ Select a function.

## Security

**Menu** → Setup → Security  
→ Select a function.

### Direct call

Only **one** phone number can be dialled. Press and hold control key **on the right** (p. 5).

### This SIM only



Your phone is prevented from being used with a **different** SIM card.

### Barrings



Network barring restricts the use of your SIM card.

**All outgoing calls:** Outgoing calls, except emergency 999 calls, are blocked.

**Outgo internet:** Only national calls can be made.

**Out.int.x home:** International calls are not permitted, except for calls to your home country.

**All incom. calls:** The phone is blocked from receiving all incoming calls.

**When roaming:** You do not receive any calls outside your home network.

**Status check:** Query the status of your barrings.

**Clear all:** Clear all barrings. Password protected!


### Phone identity

The phone identity number (IMEI) is displayed.

### Master reset

The phone is reset to the default values (does not apply to SIM card and network settings).

Alternative input in standby mode:

\* # 9 9 9 9 # 

## Network

**Menu** → Setup → Network  
→ Select a function.

### Network info

The list of GSM networks currently available is displayed.

### Auto network selection

If activated, the next network is dialled in the order of your "preferred networks".

### Choose network

The network search is restarted.

### Preferred network

Set the service providers you prefer when you leave your home network.

### Fast search

Speed up network reconnection.

## Ring tones

**Menu** → Ring tones  
→ Select a function.

Set the tones to match your needs.

### Ringer setting


Activate/deactivate the ring tone or reduce it to a short beep.

### Volume

Set the same volume for all ring tones.

 Set volume.

**OK** Confirm.

 **Call tone, Group call tones, Other call tone, Alarm tone, Message tone**

The ring tones for the stated types of call/functions can be set separately.

## More Tones

### Call screening

Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

### Key tones

Set acoustic key acknowledge:  
**Click or Tone or Silent**

### Minute beep

During the call, you will hear a beep once a minute as a reminder.

### Information tones

Set service and alarm tones.

## Alarm clock

### Activate/deactivate

**Menu** → Alarm clock

The alarm will ring at the time set by you, even when the phone is switched off.

**On/Off** Activate/deactivate the alarm.

### Setting

Set time for alarm call (hh:mm), then **OK**.

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**[www.siemens.com/  
mobilephonescustomer-care](http://www.siemens.com/mobilephonescustomer-care)**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **More**) and if available, your Siemens Service customer number.

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

|                    |                  |
|--------------------|------------------|
| Abu Dhabi          | 0 26 42 38 00    |
| Argentina          | 0 80 08 88 98 78 |
| Australia          | 13 00 66 53 66   |
| Austria            | 05 17 07 50 04   |
| Bahrain            | 40 42 34         |
| Bangladesh         | 0 17 52 74 47    |
| Belgium            | 0 78 15 22 21    |
| Bolivia            | 0 21 21 41 14    |
| Bosnia Herzegovina | 0 33 27 66 49    |
| Brazil             | 0 80 07 07 12 48 |
| Brunei             | 02 43 08 01      |
| Bulgaria           | 02 73 94 88      |
| Cambodia           | 12 80 05 00      |
| Canada             | 1 88 87 77 02 11 |
| China              | 0 21 38 98 47 77 |
| Croatia            | 0 16 10 53 81    |
| Czech Republic     | 2 33 03 27 27    |
| Denmark            | 35 25 86 00      |
| Dubai              | 0 43 96 64 33    |

|                 |                            |
|-----------------|----------------------------|
| Egypt           | 0 23 33 41 11              |
| Estonia         | 06 30 47 97                |
| Finland         | 09 22 94 37 00             |
| France          | 01 56 38 42 00             |
| Germany         | 0 18 05 33 32 26           |
| Greece          | 80 11 11 11 16             |
| Hong Kong       | 28 61 11 18                |
| Hungary         | 06 14 71 24 44             |
| Iceland         | 5 11 30 00                 |
| India           | 22 24 98 70 00 Extn: 70 40 |
| Indonesia       | 0 21 46 82 60 81           |
| Ireland         | 18 50 77 72 77             |
| Italy           | 02 24 36 44 00             |
| Ivory Coast     | 05 02 02 59                |
| Jordan          | 0 64 39 86 42              |
| Kenya           | 2 72 37 17                 |
| Kuwait          | 2 45 41 78                 |
| Latvia          | 7 50 11 18                 |
| Lebanon         | 01 44 30 43                |
| Libya           | 02 13 50 28 82             |
| Lithuania       | 8 52 74 20 10              |
| Luxembourg      | 43 84 33 99                |
| Macedonia       | 02 13 14 84                |
| Malaysia        | + 6 03 77 12 43 04         |
| Malta           | + 35 32 14 94 06 32        |
| Mauritius       | 2 11 62 13                 |
| Mexico          | 01 80 07 11 00 03          |
| Morocco         | 22 66 92 09                |
| Netherlands     | 0 90 03 33 31 00           |
| New Zealand     | 08 00 57 43 63             |
| Nigeria         | 0 14 50 05 00              |
| Norway          | 22 70 84 00                |
| Oman            | 79 10 12                   |
| Pakistan        | 02 15 66 22 00             |
| Paraguay        | 8 00 10 20 04              |
| Philippines     | 0 27 57 11 18              |
| Poland          | 08 01 30 00 30             |
| Portugal        | 8 08 20 15 21              |
| Qatar           | 04 32 20 10                |
| Romania         | 02 12 04 60 00             |
| Russia          | 8 80 02 00 10 10           |
| Saudi Arabia    | 0 22 26 00 43              |
| Serbia          | 01 13 07 00 80             |
| Singapore       | 62 27 11 18                |
| Slovak Republic | 02 59 68 22 66             |
| Slovenia        | 0 14 74 63 36              |

|                           |                  |
|---------------------------|------------------|
| South Africa .....        | 08 60 10 11 57   |
| Spain.....                | 9 02 11 50 61    |
| Sweden .....              | 0 87 50 99 11    |
| Switzerland .....         | 08 48 21 20 00   |
| Taiwan .....              | 02 23 96 10 06   |
| Thailand .....            | 0 27 22 11 18    |
| Tunisia .....             | 71 86 19 02      |
| Turkey.....               | 0 21 65 79 71 00 |
| Ukraine .....             | 8 80 05 01 00 00 |
| United Arab Emirates..... | 0 43 66 03 86    |
| United Kingdom .....      | 0 87 05 33 44 11 |
| USA .....                 | 1 88 87 77 02 11 |
| Vietnam.....              | 84 89 20 24 64   |
| Zimbabwe .....            | 04 36 94 24      |

## Product data

### Technical data

|                        |                          |
|------------------------|--------------------------|
| GSM class:             | 4 (2 watt)               |
| Frequency range:       | 824–894 MHz              |
| GSM class:             | 1 (1 watt)               |
| Frequency range:       | 1,850–1,990 MHz          |
| Weight:                | 83 g                     |
| Dimensions:            | 101×44×21 mm<br>(69 ccm) |
| Li-Ion battery:        | 700 mAh                  |
| Operating temperature: | –10 °C to 55 °C          |
| Standby time:          | up to 250 h              |
| Talk time:             | up to 5 h                |
| SIM card:              | 3.0 V/1.8 V              |

## Battery quality statement

The capacity of your mobile phone battery will reduce each time it is charged/ emptied. Storage at too high or low temperatures will also result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even after a full recharge of the battery.

Regardless of this, the battery has been designed and manufactured so that it can be recharged and used for six months after the purchase of your mobile phone. After six months, if the battery is clearly suffering from loss of performance, we recommend that you replace it. Please buy only Siemens original batteries.

## Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you to enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

## SAR - International (ICNIRP)

INFORMATION ON RF EXPOSURE /SPECIFIC ABSORPTION RATE (SAR)

THIS MOBILE PHONE MEETS THE LIMITS FOR PROTECTION OF THE HEALTH OF THE PUBLIC FROM THE EFFECTS OF EXPOSURE TO ELECTROMAGNETIC FIELDS

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of RF energy for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies\*. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*\*. Tests for SAR are conducted in all frequency bands using standard operating positions with the phone transmitting at its highest power level. The actual SAR level of the phone during operation can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general,

the closer you are to a base station, the lower the power output.

The highest SAR value for this model phone when tested for use at the ear is 0.56 W/kg\*\*\*.

SAR information can also be found at **[www.siemens-mobile.com](http://www.siemens-mobile.com)**

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international guidelines for safe RF exposure.

\* The World Health Organization (WHO, CH-1211 Geneva 27, Switzerland) states that present scientific information does not indicate the need for any special precautions for use of mobile phones.

Further information:

**[www.who.int/peh-emf](http://www.who.int/peh-emf), [www.mmfa.org](http://www.mmfa.org),  
[www.siemens-mobile.com](http://www.siemens-mobile.com)**

\*\* averaged over 10g of tissue.

\*\*\* SAR values may vary depending on national requirements and frequency bands. information for different regions can be found at **[www.siemens-mobile.com](http://www.siemens-mobile.com)**

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed. The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



Only use original Siemens batteries (100 % mercury-free) and -charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



The ringtone, info tones and hands-free talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function. Otherwise you risk serious permanent damage to your hearing.



You may only open the phone to replace the battery (100 % mercury-free), faceplate, keypad or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

## Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

Ref.No.: A31008-H6230-A1-2-7619



\* A 5 B 0 0 0 7 5 4 9 0 7 4 3 \*