

# ONE TOUCH

310-311



English



# CONTENTS

<b>Safety and precautions</b>	<b>p. 4</b>
<b>Information</b>	<b>p. 7</b>
<b>1. Your telephone</b>	<b>p. 8</b>
1.1 Keys	p. 9
1.2 Icons	p. 10
1.3 Conventions used in this User's Guide	p. 11
<b>2. Getting started</b>	<b>p. 12</b>
2.1 SIM card and battery	p. 12
2.2 Switching your phone on	p. 14
2.3 Switching your phone off	p. 14
<b>3. Call</b>	<b>p. 15</b>
3.1 Making a call	p. 15
3.2 Call your voice mail	p. 16
3.3 Receiving a call	p. 17
3.4 During the call	p. 17
<b>4. Call memory</b>	<b>p. 21</b>
4.1 Accessing and calling back	p. 21
4.2 Available options	p. 22
<b>5. MENU</b>	<b>p. 23</b>
<b>6. Events</b>	<b>p. 26</b>

<b>7. Directory</b>	<b>p. 27</b>
7.1 Accessing your directory	p. 27
7.2 Creating a file	p. 29
7.3 Available options	p. 30
7.4 Assigning a file to a family	p. 31
7.5 Assigning a ring tone to a family	p. 31
7.6 Temporary SIM card	p. 32
<b>8. Vibrator</b>	<b>p. 33</b>
8.1 Activating / deactivating the vibrator	p. 33
<b>9. Messages</b>	<b>p. 34</b>
9.1 Accessing messages	p. 34
9.2 Reading your messages	p. 35
9.3 Composing a message	p. 38
9.4 Data entry system	p. 39
9.5 Icons, sounds, smileys	p. 43
9.6 Sending a message	p. 44
<b>10. My setup</b>	<b>p. 45</b>
10.1 Sounds	p. 45
10.2 Main screen	p. 49
10.3 Information	p. 49
10.4 Zoom	p. 50
10.5 On/Off screens	p. 50
10.6 Numbers	p. 50
10.7 The front panel	p. 52

<b>11. Alarms</b>	<b>p. 53</b>
11.1 Wake up	p. 53
11.2 Appointments	p. 54
11.3 Birthdays	p. 54
11.4 Options	p. 54
<b>12. Calculator/Converter</b>	<b>p. 55</b>
12.1 Calculator	p. 55
12.2 Convert	p. 56
12.3 Currency selection	p. 57
<b>13. Setup</b>	<b>p. 59</b>
13.1 Services	p. 59
13.2 Clock	p. 67
13.3 Languages	p. 67
13.4 Dictionary	p. 67
13.5 Display	p. 68
13.6 Pick up	p. 68
13.7 Automatic power off	p. 69
13.8 Keypad lock	p. 69
<b>14. WAP (Via services)</b>	<b>p. 70</b>
14.1 Accessing Mobile Internet Services	p. 70
14.2 Available options	p. 71
14.3 Setting up your access	p. 72
<b>15. Character set</b>	<b>p. 74</b>
<b>16. Warranty</b>	<b>p. 75</b>
<b>17. Accessories</b>	<b>p. 77</b>

# SAFETY AND PRECAUTIONS

We recommend that you read this chapter carefully before use. The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

- **CONDITIONS OF USE:**

Switch the phone off before boarding an aircraft. Use could lead to legal action against the user. Switch the phone off when in health care facilities except in areas specified. Like many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices in their proximity. Persons with a medical device (such as a pacemaker, hearing aid, insulin pump) should not carry the phone in a place close to the device. When placing or receiving a call, persons with a pacemaker or hearing aid should hold the telephone against the ear on the opposite side to the device if any.

Switch your phone off when near gas or flammable liquids. Strictly obey all signs and instructions when in a fuel depot or chemical plant, at a refuelling point (service station) or in any potentially explosive atmosphere. Do not let small children use the phone without supervision. Do not attempt to open or repair it yourself. Use only the batteries, battery chargers and accessories approved by the manufacturer. The manufacturer disclaims any liability for damage caused by use of other batteries, chargers or accessories. Do not expose the phone to unfavourable environmental conditions (humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is: -20 °C to +40 °C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

- **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off.

Battery use precautions are: do not attempt to open the battery (chemical substances may cause burns), do not pierce nor cause a short-circuit in a battery, do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C. Batteries must be disposed of in accordance with locally applicable environmental legislation. Batteries should not be used for other purpose than the one they are designed for. Never use damaged batteries.

- **TRAFFIC SAFETY:**

Remember to always check whether local legislation allows operation of a mobile phone while driving a vehicle. When it is said that the use of mobile phones while driving a vehicle is a risk factor, we strongly recommend that you park the car before using the phone. However if you intend to use your phone while driving, you must use it connected to the Alcatel Car Kit accessory.

Your mobile phone when powered emits radiation likely to interfere with the vehicle electronic systems such as anti-lock brakes (ABS, airbag). Consequently, you should:

- avoid placing the phone on the dashboard
- connect imperatively the phone to an external antenna. The antenna should be mounted and located away from the driver and passengers or separated from them by a metal screen (e.g. the car roof).
- check with the car manufacturer that the dashboard is adequately shielded from mobile phone RF energy.

- **ELECTRONIC WAVES:**

THIS MOBILE PHONE COMPLIES WITH EUROPEAN REQUIREMENTS ON ELECTROMAGNETIC WAVES.

Validation of conformity with European directive 1999/5/EC (R&TTE) is a requirement prior to launching any mobile phone model on the market. Protection of public health and safety, in particular the mobile phone users' is the main aspect in this directive.

Your mobile phone is a radio transceiver. It has been designed to operate under certain thresholds of exposure to Radio frequencies (RF) recommended by the European Union Council (1) for people and users. They were established by independent expert groups based on scientific evaluations which are carried out regularly and in detail. These limits allow for significant safety margin in order to ensure everyone's security whatever his or her age and health condition.

Standard of exposure for mobile phones is determined by a measurement standard called Specific Absorption Rate (SAR). The SAR limit recommended by the European Union Council is 2.0 w/kg (2). Testing has been performed on telephones emitting at maximal strength level for all frequency bandwidths, on the basis of standard using modes as defined by the current specifications. Although SARs are tested at the highest strength possible, the actual SAR level in a mobile phone in current use is normally way below the maximum values obtained during the tests. Your mobile phone is designed to operate at a level of strength strictly necessary to allow for its connection to the network. In principle, the closer you are to a base station antenna, the lower the mobile phone's SAR strength level.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

- (1) EC Recommendation 1999/519/EC
- (2) SAR limit on mobile phones in general is 2.0 watts/kg at average for 10 g of human tissue. The limit includes a significant safety margin to increase the user's protection and take into account measurements variation.

# INFORMATION

- Web site: [www.alcatel.com](http://www.alcatel.com)
- Wap address: [wap.alcatel.com](http://wap.alcatel.com)
- Alcatel hotline No.: see “Alcatel Services” leaflet (calls charged at applicable local rate in your country).


Your telephone is designed to emit and receive calls. It operates on GSM networks with 900 MHz and 1800 MHz bands.

The **CE 0165** mark indicates that your telephone complies with EC directive 1999/5/EC (R&TTE) and the accessories with applicable EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained on Alcatel website [www.alcatel.com](http://www.alcatel.com).

January 2001

# 1

# YOUR TELEPHONE

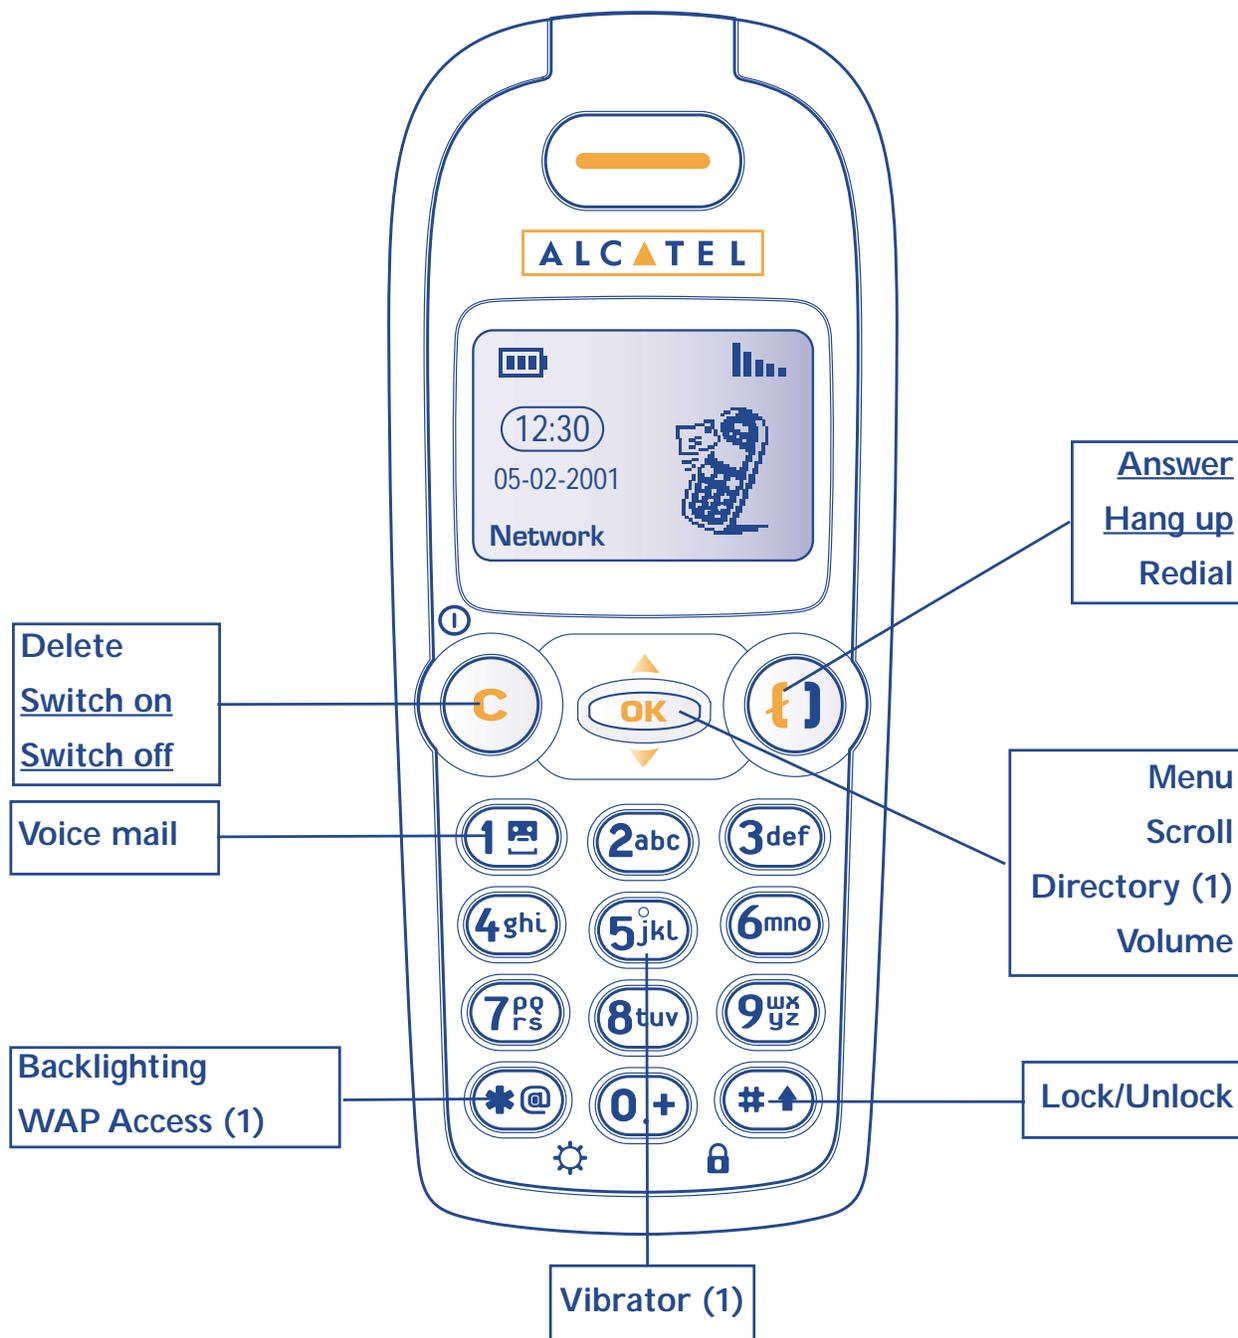

(1) Depending on your phone model.

## 1.1

### Keys



Delete (short keypress).

Return to previous screen (long keypress).



**Switch phone ON/OFF** (long keypress).



Access the MENU / Directory / Short messages,

Confirm an option.



Volume control during a call.

Scroll to select an option.

Access the directory (1) (long keypress downwards).

Access the messages (1) ((long keypress upwards).



**Answer/Hang up**

Access the Call Memory (Redial)



Access your voice mail (long keypress).



**Switch on/off the backlighting** (long keypress).

Access Internet services (WAP) (long keypress) (1).



Lock keypad (long keypress).

Enter upper/ lower case letters, digits, punctuations.



Activate / Deactivate the vibrator (long keypress)(1).



(1) Depending on your phone model.

## 1.2

### Icons (1)



**Battery charge level.**



**Vibrator mode:** your telephone vibrates but emits no ring tone nor beep. (See page 33)



**Silent mode:** your telephone emits no ring tone, no beep and does not vibrate. (See page 47)



**Events (Consult information):** You can access your voice mail where all unanswered calls, unread short messages, are stored. (See. page 26)



**Message list is full:** your terminal cannot store any more messages. You must access the message list and delete at least one message. (See page 35)



**Forward:** your calls are forwarded. (See page 62)



**Alarms set for appointments, birthdays and anniversaries (2), or wake-up (2).** (See page 53)



**Signal strength indicator.**



(1) Icons and other illustrations shown in this User's Guide are for information only.

(2) Depending on your phone model.



Preferred tariff area. (1)



Keypad locked.



“Manual Network Search” mode.  
(See page 66)



Roaming within your subscription country.

### 1.3

## Conventions used in this User's Guide


The following symbols are used in the text which follows:



Briefly press the scroll key in its centre in order to confirm an option.



Move the scroll key up or down in order to select an option.

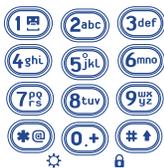

Use the keypad keys to enter digits, letters, and punctuations.



(1) Check the availability of this service with your operator.


# 2

## GETTING STARTED

### 2.1 SIM card and battery


#### Inserting and removing the Sim card (1)

- Remove the rear panel of the phone, then insert your SIM card.

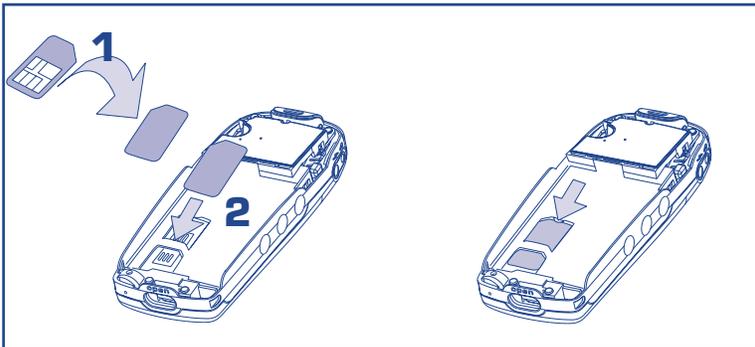


Fit SIM card with chip facing downwards

Slide the SIM card into its compartment. Check that it is properly inserted

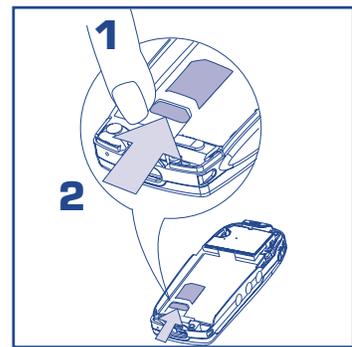


Push the SIM card with your finger to release it


#### Inserting and removing the battery

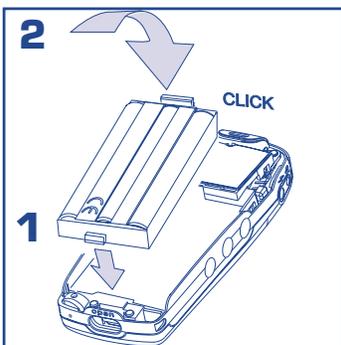

Insert the battery

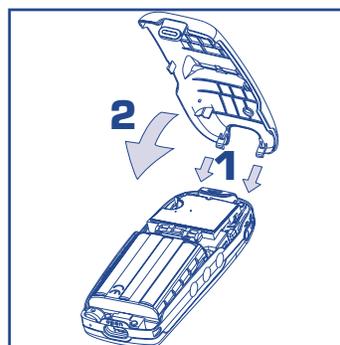

Close the battery cover as shown

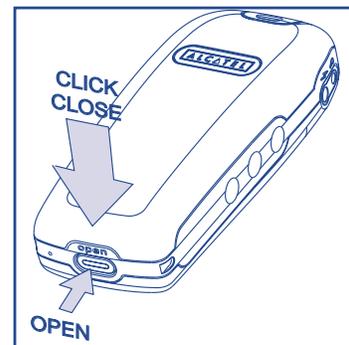

Click the cover to close it

To open the cover, press the clip and lift the panel




(1) The previous 5 Volt SIM Card types cannot be used. Please contact your supplier.


## Remove the battery

Reverse the procedure to remove the battery.


## Charging the battery

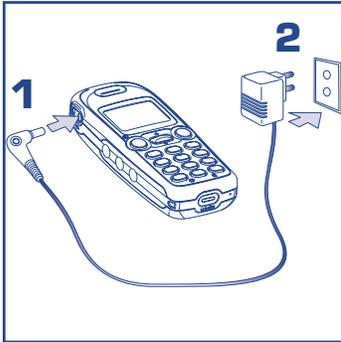

Connect the battery charger

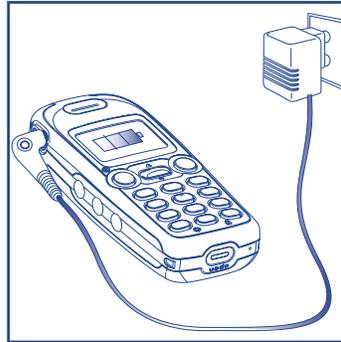

The on-screen indicator stops flashing when charging is over

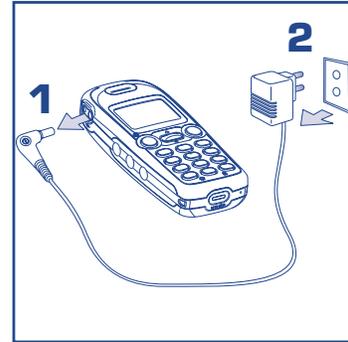

Disconnect the battery charger once charging is complete

- A beep will sound when charging begins.
- The charging indicator icon may take several minutes to start to flash.
- The mains socket outlet must be close to the phone and easily accessible.
- Avoid using excessive force when connecting the battery charger to the telephone.

## Screen

Remember to remove the transparent foil that covers the screen (See page 52).



When you first use your phone you must charge the battery for approximately 3 hours.

## 2.2

## Switching your phone on



Switch your phone on (long keypress)

Enter your PIN code

Confirm

Main screen

You are prompted to enter the time and date, enter new data if necessary, then confirm by .

If cell broadcast messages are displayed, use the  key to browse through them in full or press the  key to return to the main screen.

While the phone is searching for a network, <<<->>> is displayed. (??-?? is displayed if your SIM card is rejected by the network, in this case please contact your operator).

## 2.3

## Switching your phone off

From the main screen, press the  key (long keypress).




If you do not know your PIN code, please contact your network operator.

Do not leave your PIN code near your phone and store your card in a safe place when you are not using it.

# 3

## CALLS

### 3.1 Making a call

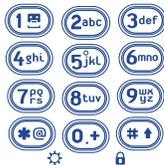

bla,bla,bla  
bla,bla



Dial the number

Make the call

Talk


Hang up

If you make a mistake, you can delete digits by pressing the  key.

### Making an emergency call

If your telephone is within the area covered by a network, to make an emergency call, dial 112 or any other number provided by your operator.

### Making an international call

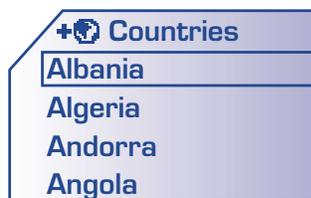

Display the "+"  
prefix (long  
keypress)

Display the list of countries

Select the  
country

Confirm

To enter characters "+" or "P" (pause), make a long keypress on the  key (the following characters scroll: 0, +, •, P).

Once the country code is displayed, dial the rest of the number and make the call.

## 3.2

### Call your voice mail

The network provides voice mail service to ensure that you do not miss any calls; it works like an answering machine which you can interrogate at any time.




To use your voice mail abroad, contact your operator before leaving.

If your operator's voice mail access number is not shown, dial the number that was supplied to you with your subscription. To later modify this number, use the "**Numbers**" MENU option, page 50.

### 3.3

## Receiving a call

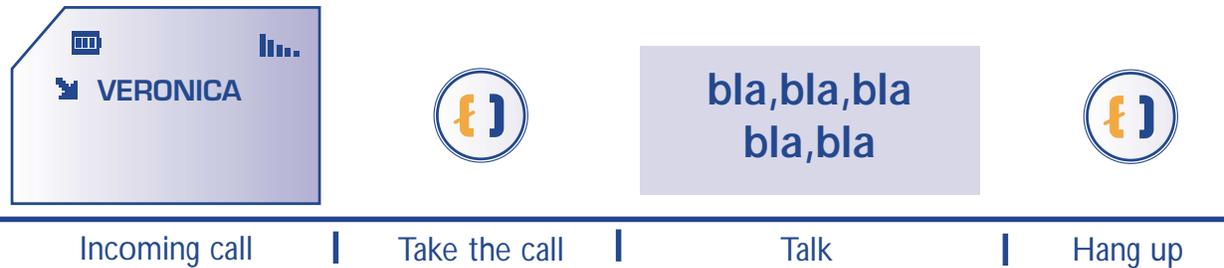

If the  icon is displayed, the vibrating system is enabled and no ring tone is heard.

If the  icon is displayed, the vibrator and ring tone are both deactivated.



The caller's number is displayed if it is provided by the network (check the availability of this service with your operator.).

### Switching the ring tone off (without losing the call!)

Press the  key while the phone is ringing; you can still answer the call by pressing the  key.

Pressing the  key again rejects the call.

### 3.4

## During the call

During a call, you can use the  key to adjust the volume and you can use the  key to access the following options:

	<b>Volume</b>	Increase or decrease the sound level
	<b>Handsfree</b>	Activate/deactivate handsfree mode (the  symbol is then replaced by  )
	<b>Caution:</b> move the handset away from your ear before activating this mode because the amplified volume could cause hearing damage	
	<b>Hold call (1)</b>	Place an ongoing call on hold (you can later resume the call by pressing the  key)
	<b>Dial (1)</b>	Make a second call (an ongoing call will be automatically put on hold and you can switch between calls by pressing the  key)
	<b>Save Number</b>	Store a phone number in the directory
	<b>Directory</b>	Access the directory
	<b>Messages</b>	Read your messages
	<b>Services (1)</b>	Access the services supported by your network operator
	<b>Back</b>	Return to the previous screen

**!** (1) Check the availability of this service with your operator.


## Handling a second incoming call (1)

You already have a call and a second call comes in:

If you accept the new call, the ongoing call is automatically put on hold; you can then switch between the calls by pressing the  key and then the  key.



To refuse the second call, press the  key twice.

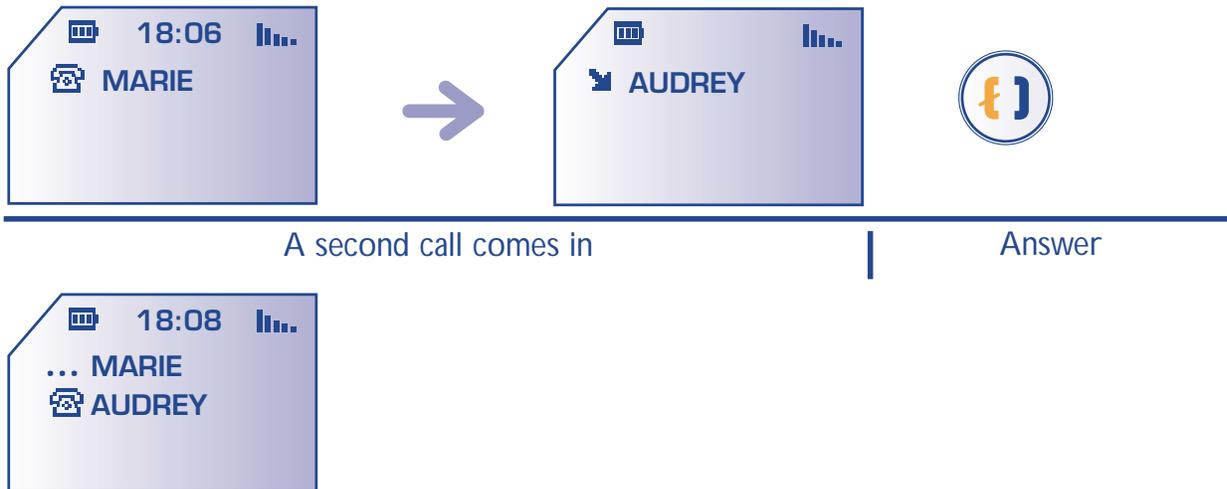


## Conference calls (1)

Your telephone allows you to converse with several persons at the same time.



(1) Check the availability of this service with your operator.

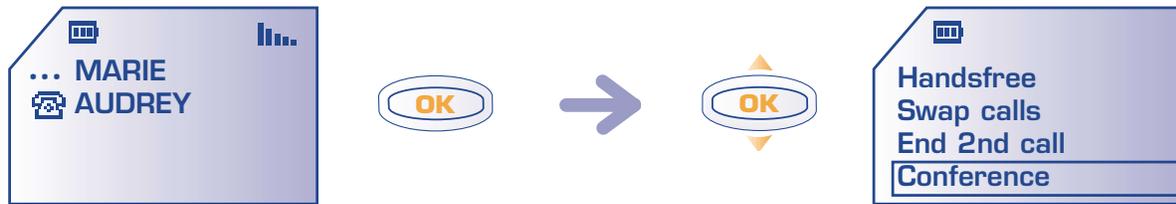

You have received a second call

Select "Conference"



Confirm

The conference starts


### • A third call comes in



A third call comes in

Answer the call and speak with your new caller

Confirm

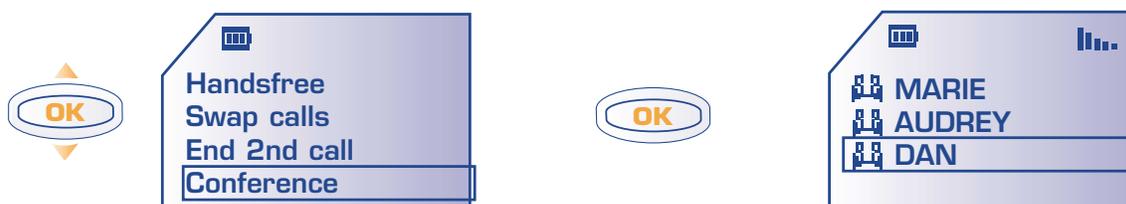

Select "Conference"

Confirm

The caller joins the conference

Pressing on the key hangs up the communication you had with the caller you have selected.


To end the conference call, click on the key and select the "End Conf. Call" option.

# 4

## CALL MEMORY

### 4.1

### Accessing and calling back

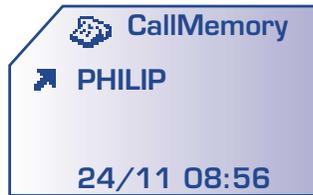

Access the call memory

Select the number

Make the call

Each call is identified by one of the following symbols:

- Answered incoming call
- Unanswered incoming call
- Outgoing call



The caller's number is displayed if it was transmitted by the network (check the availability of this service with your operator).

## 4.2

## Available options


From the call memory, press the  key to access the following options:

  	<b>To Directory</b>	Store the selected phone number in the directory
	<b>Modify Num.</b>	Modify the selected phone number
	<b>Clear CallMem.</b>	Clear all the numbers in the call memory
	<b>Back</b>	Return to the previous screen

# 5


## MENU

From the main screen, press the  key to go to the MENU.

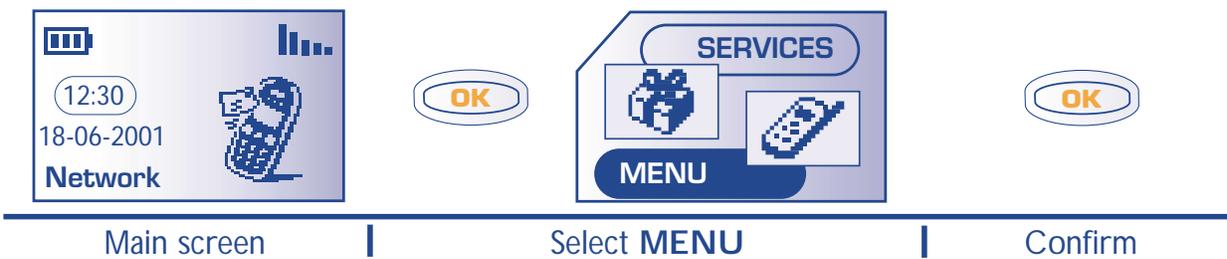

Direct access to the MENU depends on your operator and on the SIM card which you are using.

### Choosing a MENU function

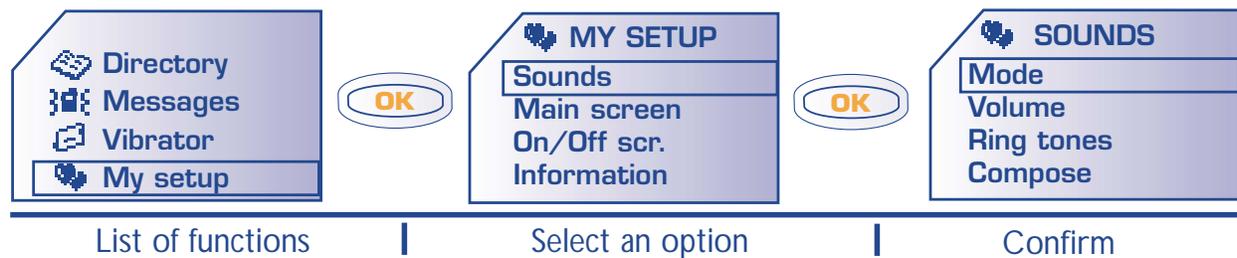

### Return to the screen:

**Previous screen:** Press  (short press).

**Main screen:** Press  (long press).




## Organisation of functions

For each of the listed functions, refer to the appropriate chapter in this User's Guide.




### Directory:

Access / store and make calls from your directory.

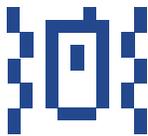


### Vibrator:

Activate / deactivate the vibrator when you don't want to be disturbed.

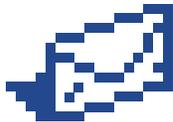


### Messages (SMS):

Read, write and send your short messages.

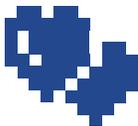

### My setup:

Customise your ring tones, icons, switch on/off screens, your direct dial numbers.

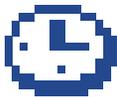


### Alarms:

Set your telephone's alarms (appointments, birthdays or anniversaries, wake-up, etc.).



### Calculator/Convert:

Perform basic calculations and currency conversions (Euros, etc.).

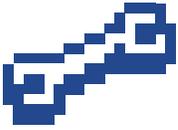

### Setup:

Set up your telephone (displays, formats, etc.) and take advantage of the features provided by your operator (security, call forwarding, etc.).



### Events:

Access your voice mail, unanswered incoming calls, unread messages, and WAP notifications (1).

You can customise your MENU by changing the order of the options, for example, you can choose to display “**Messages**” after “**Directory**”. Select this option, make a long keypress on the  key to place it in the first position, on  to place it in the second position...

To cancel, make a long keypress on the  key.




(1) Depending on your model, the language and availability of this service with your operator.

# 6

## EVENTS

You can access all of the events which occurred on your telephone in your absence and which you have not yet accessed.

Voice messages which you have not yet listened to, unread short messages, unanswered incoming calls are gathered under this icon.

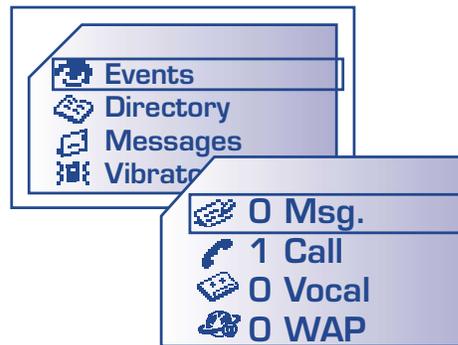

### **Short messages (Msg.):**

Access unread short messages. (See page 34).



### **Unanswered incoming calls (Call):**

Display the numbers of callers who tried to reach you in your absence. (See page 21).



### **Voice Mail (Vocal):**

Call your voice mailbox to listen to your new voice messages. (See page 16).



### **Notifications (WAP) (1) :**

Access the WAP notifications you received.



(1) Check the availability of this service with your operator.

# 7


## DIRECTORY

### 7.1

### Accessing your directory

Press the  key to access the directory from the main screen.(1)

Use the MENU (see page 23) to access the directory by pressing the  key.

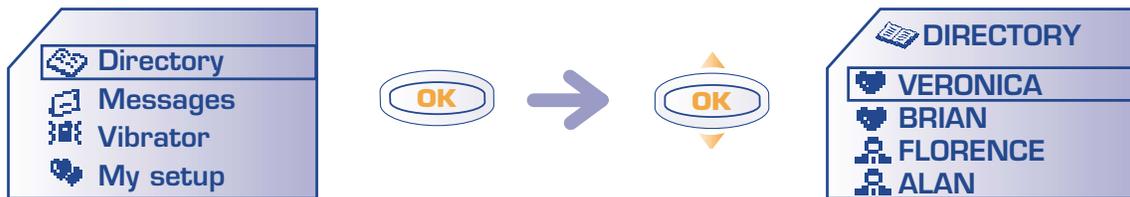

To find the name you're looking for

### Searching a name from the first character

You can also search for the name of the person you wish to contact by pressing the key associated with the first letter of his/her name.

Example: press the  key twice to find the first name beginning with "B", then scroll the list to the name you are looking for using the  key.



(1) Depending on your phone model.


## Calling from the directory

You can assign 3 different numbers to the same name: home, mobile, office. (See page 29) If you want to call a party who has several numbers, first you must choose the number you wish in the list.




Select the number you want

## Displaying a phone number

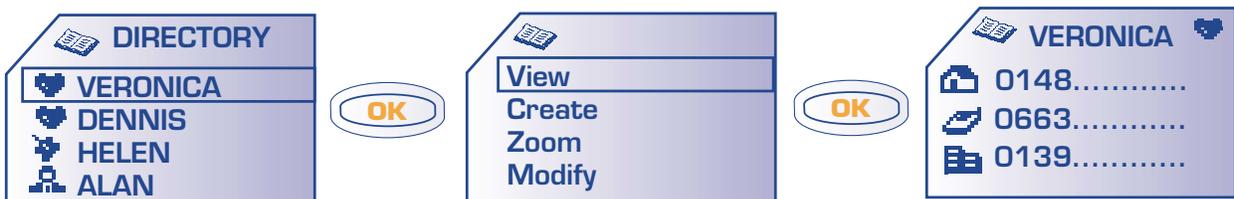

## 7.2 Creating a file

From the list of names in your directory, press the  key to create a file.

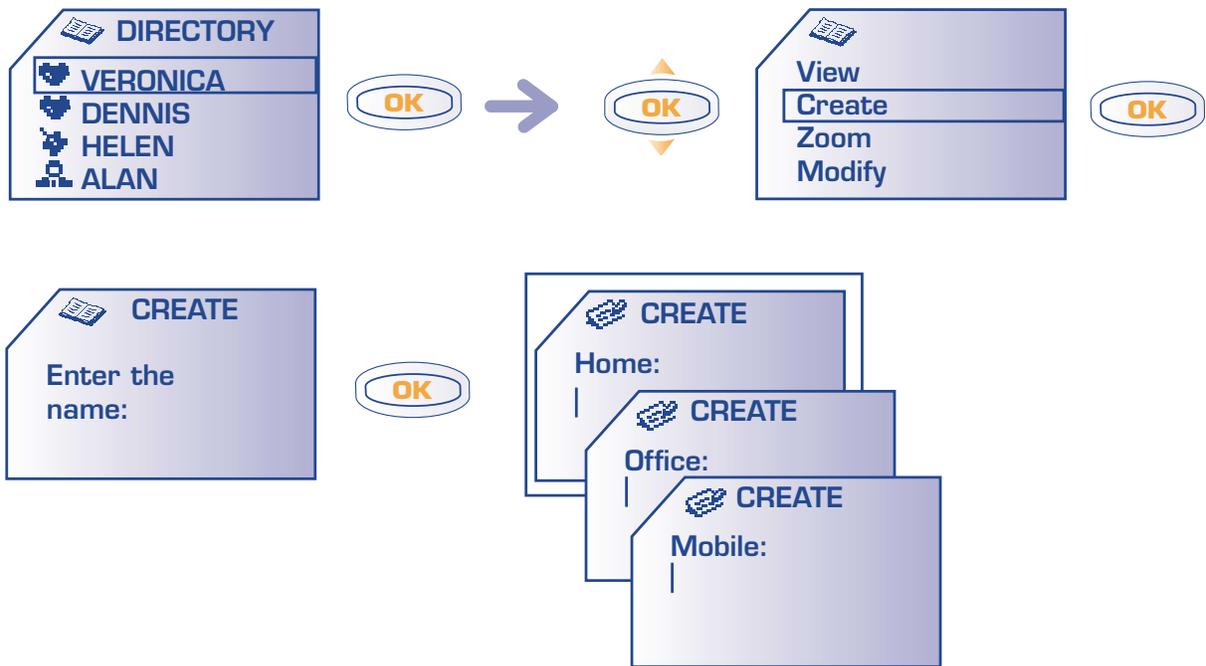

You can save the information you have entered at any time by pressing the  key and by choosing "Save".



You don't have to fill in all the information, but at least one number must be entered for each name.

The directory's capacity depends on the operator.

If you use your telephone abroad, store the numbers in the directory in the international format with the "+" prefix (see page 15).

The files you create are organized in alphabetical order. It is also possible to organize them by family: Private , Professional , and Other . (See page 31)

### 7.3 Available options

From the list of names in your directory, you can access the following options by pressing the  key:

	<b>View</b>	Display the contents of each file
	<b>Create</b>	Create a file
	<b>Zoom</b>	Change the character size
	<b>Modify</b>	Modify file contents
	<b>Alphabetical/ By Family</b>	Display files by family: Private, Professional, Other, None
	<b>Delete</b>	Delete the selected file



**Classify**

Classify the selected file in the appropriate family

**Ring tones**

Assign a melody to a family

**File Number**

Change the file number

**Back to list**

Return to the previous screen

## 7.4

### Assigning a file to a family

To differentiate your files, you can classify them in groups called families: Private , Profession. , Other , None. A different ring tone can be assigned to each family. This classification will allow you to easily distinguish a professional call from a private call. It is possible to screen incoming calls by family. (See page 64)

## 7.5

### Assigning a ring tone to a family

When you receive a call from a contact classified in a particular family, the ring tone for the incoming call will be the one assigned to that family. An icon is also assigned to each of the families, allowing you to easily recognize your caller's family.

## 7.6

### Temporary SIM card

When you create a file, you can include 3 different numbers (Home, Office, Mobile).

If you change SIM cards, an informational message will be displayed when the telephone is switched on. You must then decide if this card will become your new SIM card or if it is being inserted temporarily:

- If the SIM card is to become your main card, you can modify your directory as you wish. If you reinsert your old SIM card, you will no longer find the 3 numbers that were formerly associated with the same name on that card.
- If the SIM card is being inserted temporarily, you will be authorized to create files including one number. If you then reinsert the first card (your main card), you will find all the information it originally contained.

# 8

## VIBRATOR

You can enable the vibrator in public places (such as restaurants, museums, etc.) allowing you to keep your telephone switched on while remaining as discreet as possible. When you receive a call, your telephone will vibrate instead of ringing or beeping.

### 8.1

### Activating / deactivating the vibrator

- By pressing (long keypress) on the  key from the main screen. (1)
- By pressing the  key from the MENU (see page 23).



Activate / Deactivate



(1) Depending on your phone model.

# 9

## MESSAGES (1)

### 9.1 Accessing messages

Make a keypress on the  key from the main screen.

Or from the MENU (See page 23), access the messages pressing the  key.

	<b>Unread</b>	Read new messages
	<b>Read</b>	Read old messages already read
	<b>Write</b>	Create a new message
	<b>My canned</b>	Create your own canned messages. You can save or edit them later on using the  key
	<b>Zoom</b>	Change the character size
	<b>Parameters</b>	Set parameters, especially the number of the service centre if it is not automatically suggested (you cannot send a message without this number)



(1) Check the availability of this service with your operator.

## 9.2

## Reading your messages

The messages are stored in your SIM card and classified in 2 categories: unread messages and read messages.



The capacity of your SIM card depends on your operator. The  icon is displayed when there are too many stored messages: delete some messages.

When a new message is received, an audible signal (1) is emitted and the  icon is displayed.

The  icon disappears as soon as you have read all of the new messages.

### Reading a new message



(1) To deactivate the audible signal, see page 46.

## **Consulting read messages**

Received messages that have already been read and messages that have been written, sent or stored.

In the event an acknowledgement receipt is requested (See page 38) the messages may be preceded by the following symbols:



Message sent and acknowledgement received.




Message sent and no acknowledgement received, or message not delivered (in this case you should send the message again).

## **Storing icons and related ring tones**

Your friends can send you messages containing icons, animations, smileys, sounds and texts. You may store the icons, smileys, sounds, and animations so that you can use them later.

If a message contains several icons, sounds, or animations, select the desired item using the  key:

While reading a message, you can access the following options by using the  key:

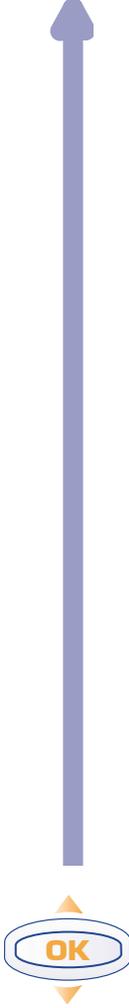

<b>Delete</b>	Delete the selected message
<b>Answer</b>	Answer an incoming message
<b>Forward</b>	Send the selected message again after modifying the recipient's name or the parameters
<b>Save Number</b>	Store the first number contained in the text of the message in the directory
<b>Save icon (1)</b>	Store an icon in the list of icons
<b>Save Animation (1)</b>	Store an animation in the list of animations
<b>Save sound (1)</b>	Store a sound in the list of sounds
<b>Save canned</b>	Store this message as a canned message



(1) If the received message contains sounds, images, icons, animations.



## Parameters

Update the following parameters:

**Serv. centre:** your operator's service centre call number (may be provided automatically)

**E-mail centre:** call number for sending an e-mail (can be automatically presented to you)

**Format:** format in which the message is to be delivered to your correspondent (SMS, e-mail, fax, etc.)

**Validity:** time during which the network presents the message again to your recipient in case of unsuccessful delivery

**Receipt:** acknowledgement receipt request for each message delivery

## Zoom

Change the character size

## Back

Return to the current message

## 9.3

## Composing a message

Make a keypress upwards on the  key from the main screen.

Or on the  key from the MENU (See page 23) to access the messages.

You can create a message or add to a (canned) stored message.

You can create a message with text only but can also assign icons or sounds, or "smileys". (See page 43)



## 9.4 Data entry system

To make it easier to write short messages, your phone has an assisted data entry system (predictive data entry) (1). To create a word, all that is needed is a single keypress on the key for any of the letters which the word contains.



The character displayed may not correspond to the one you entered; the system suggests the most usual word. Do not worry about the words initially suggested, go on typing, the system will make better suggestions as you type.

The cursor shape varies with the selected entry mode:

predictive mode ■


normal mode |

To confirm a word, press the  key downwards or the  key (a space will be automatically inserted).



(1) Depending on the language.


While writing the message in predictive mode, you can access the following options by pressing the  key:

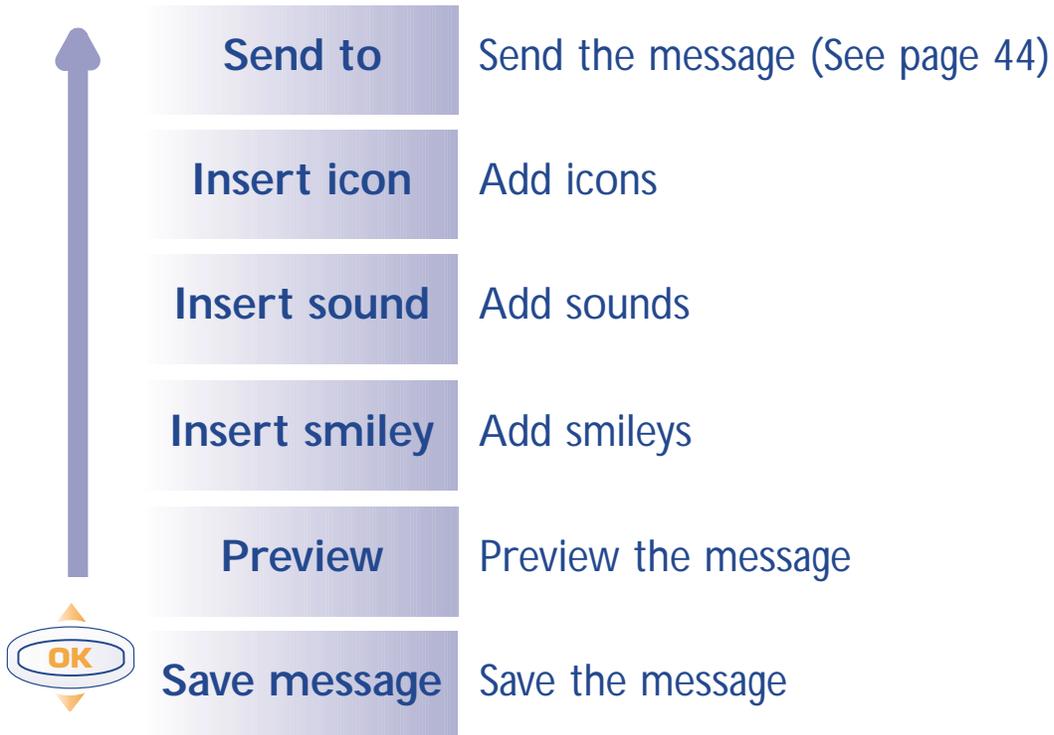



- |                      |   |
|----------------------|---|
| <b>Confirm word</b>  | Accept the word suggested                         |
| <b>OtherWords</b>    | Access the list of other suggested words          |
| <b>Insert digits</b> | Insert a digit                                    |
| <b>Punctuation</b>   | Insert a punctuation mark or a symbol in the text |
| <b>Normal mode</b>   | Switch to normal mode                             |
| <b>Add word</b>      | Add a word to the dictionary                      |
| <b>Languages</b>     | Choose another language                           |
| <b>Back</b>          | Return to the main screen                         |

You may also use the following keys:

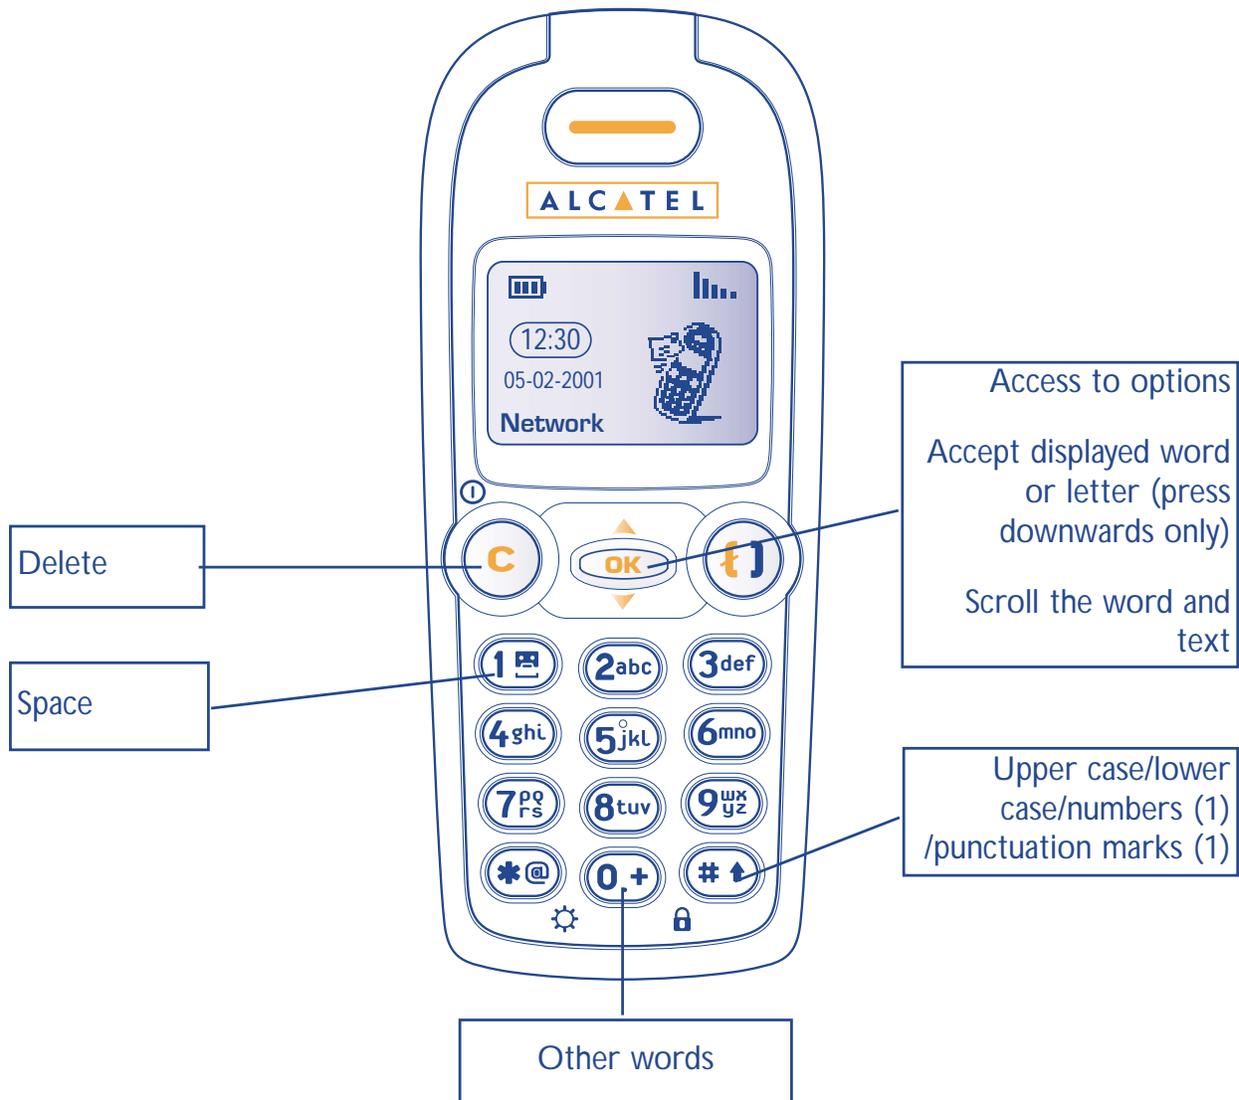

There is a dictionary in which you can add, modify or delete words. Add a word while composing a message by pressing the  key and selecting the **“Add word”** option.

From the MENU (See page 67), it is possible to manage your own dictionary.



(1) In predictive text input mode only.

## 9.5

### Icons, sounds, smileys

Your messages can be customised with icons, sounds or with the following faces (“smiley”) to reflect your mood:



Ironic



Upset



Smiling



Amazed



Skeptical



Crying

You can also create your own smileys using the alphabetical characters (example: :-)).

You can view the message once it is created: the icons, sounds, and smileys that you have inserted will be displayed.

You can add more icons and sounds to your phone by downloading them from the internet. (See page 49)

The recipient of the message must have a compatible EMS mobile phone in order to display icons and smileys, and listen to the sounds attached to your message.




The icon or sound that you inserted is represented by a symbol (\*📎 or 🎵).

## 9.6

# Sending a message

You can send a message:

- Manually (keying in your correspondent's number)

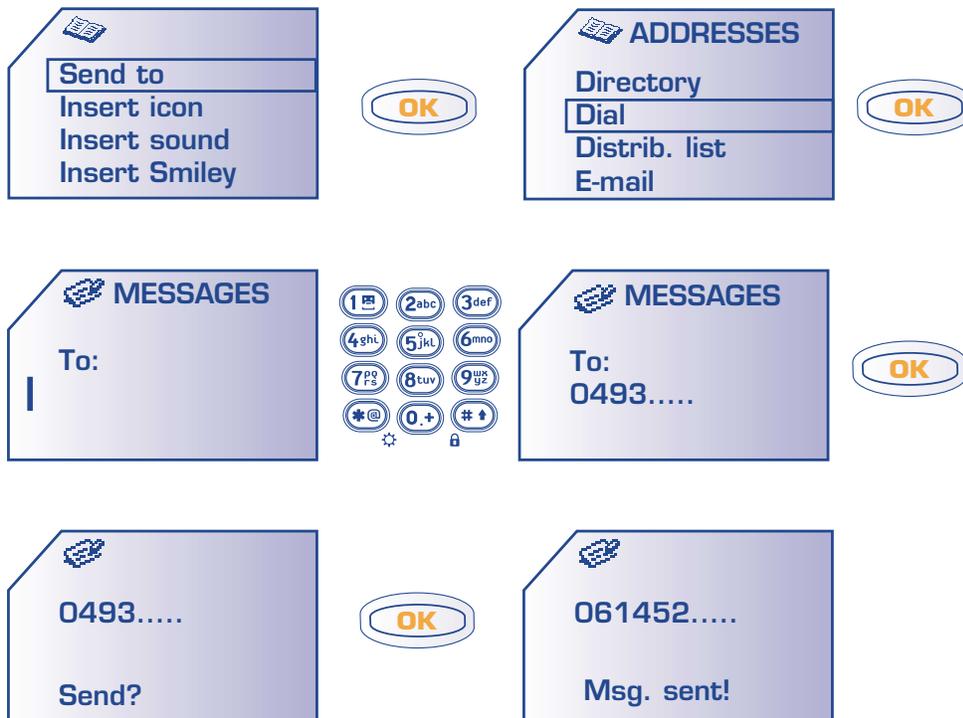

- To a recipient from the directory. (See page 27)
- To several recipients by selecting the group of recipients (choose the "**Distrib. list**" option).
- To a recipient with an e-mail address.

# 10

## MY SETUP

For each of the functions described in the rest of this chapter, select the desired option.


From the main screen, press the  key to access the MENU.



### 10.1

## Sounds

From the "Sounds" menu, press the  key to access the various options.

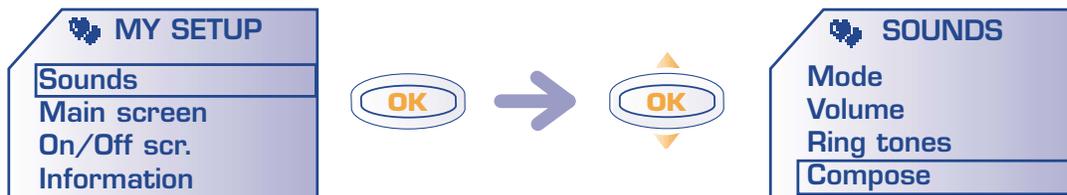

	<b>Mode</b>	Select the mode (see below)
	<b>Volume</b>	Adjust the volume with
	<b>Ring tones</b>	Select the ring tone for incoming calls with
	<b>Compose</b>	Compose a melody
	<b>Key beeps</b>	Activate/deactivate the beep played with each short or long keypress
	<b>Msg. alert</b>	Choose a sound to announce the arrival of a message
	<b>ON sound</b>	Choose the sound which will be played when the phone is switched on
	<b>OFF sound</b>	Choose the sound which will be played when the phone is switched off

## **Mode**

You can choose from the following modes:

<b>Sound</b>	Normal ring tone (increasing volume).
<b>Vibrator + tone</b>	Vibrator is activated followed by a normal ring tone.

## Vibrator


No sound is emitted (ring tone, message or appointment alert, low battery beep). The  icon is displayed. (see page 33)


## Silent

No sound is emitted and the vibrator is deactivated. The  icon is displayed.

## Compose my melody

From the "Compose" option, you can create your own tunes. To compose your melody, use the keypad as shown below:

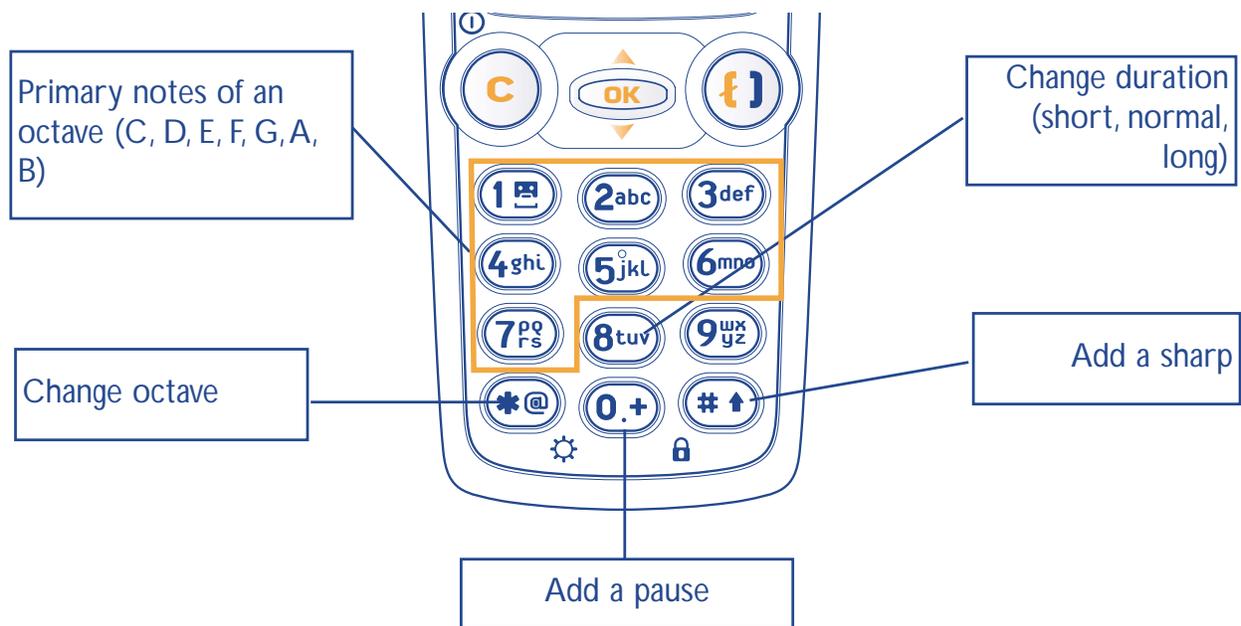

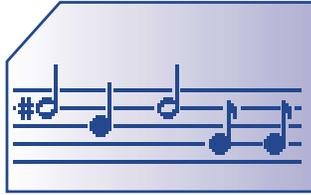


## Available options

While you are composing your tune, use the  key to access the following options:

	<b>Save</b>	Save your tune
	<b>Save&amp;Quit</b>	Save your tune and return to the previous screen
	<b>Last 5 notes</b>	Listen to the last five notes
	<b>Play all</b>	Listen to the entire melody
	<b>Modify title</b>	Change the title of the melody
	<b>Tempo</b>	Choose the tempo: allegro, andante, lento
	<b>Delete</b>	Delete the selected melody
	<b>Back</b>	Return to the previous screen

## 10.2 Main screen

The main screen is displayed when your telephone is switched on and/or when no feature is in use (calls, sending messages, etc.). From the MENU, you can personalise your screen by changing the icon and display format for the date.

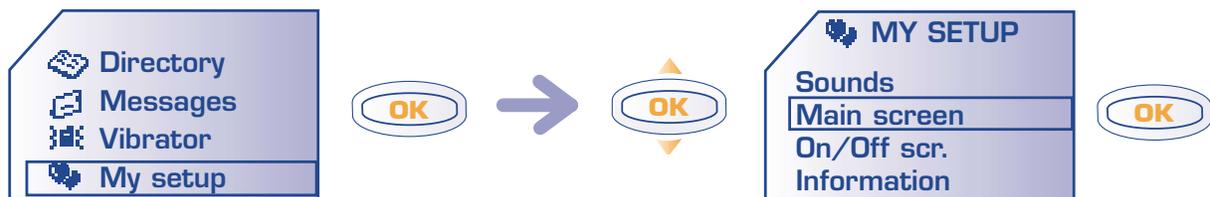

## 10.3 Information (1)

Your telephone is equipped with a system allowing you to download icons and sounds. Downloading is performed from a computer. Once you are connected to a website available on the internet (2), select the item you wish to download. Once the download is completed, you will receive an SMS containing the selected item. (See page 36)

**!** To return to the main screen, press the  key (long keypress).

- (1) Depending on the model.
- (2) Depending on the country.

## 10.4 Zoom (1)

Your telephone can display different sized characters (small or large) by selecting the zoom function.

## 10.5 On/Off screens (1)

You can customise the welcome message, the animation or icon that are displayed when the telephone is switched on.

You can also customise the telephone switch off screen by selecting an icon or an animation.

## 10.6 Numbers

### My number

Save your telephone number, (usually given on your SIM card). Enter the number - confirm by pressing .

### Voicemail

Change your voice mail number (enter the number - confirm by pressing ).



(1) Depending on the model.

## Keyboard (1)

Direct dial numbers: once entered, can be dialled directly from the main screen with a long keypress on keys "2" to "9" of the keyboard.

- If no numbers are programmed:



- If a number has already been programmed:



## Prefix

Activates/cancels the prefix which will be added automatically in front of the phone number when making the call (enter the number - confirm by pressing ).



(1) Check the availability of this service with your operator.

## 10.7


## The front panel

Your telephone has a removable front. This allow you to change the colour of your handset by acquiring other fronts (sold separately). (See page 77)

### Removing the front




Lift the top of the screen

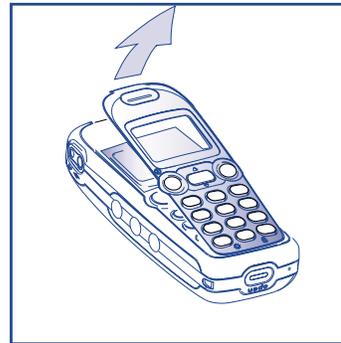


Always lift the top part

### Fitting the front

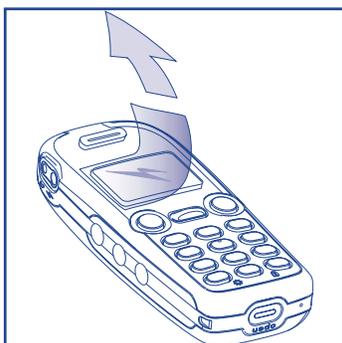

Remove the plastic film for better readability of the screen

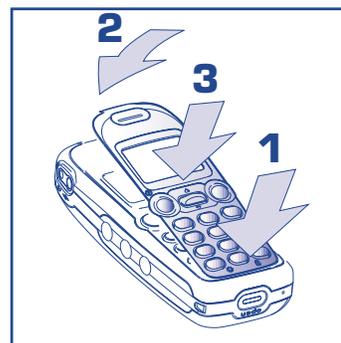

Insert the bottom part of the front then click into place

# 11

## ALARMS

Access the alarms feature from the MENU (see page 23) by pressing the  key.



### 11.1 Wake up (1)

Set the alarm time and confirm by pressing  .

Once this feature is activated, the  icon appears on the main screen. Under "**Options**" (1), you can choose to program the alarm clock with a melody. The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.



(1) Depending on your phone model.

## 11.2

### Appointments

You can schedule your appointments (enter the date and time – confirm by pressing  - enter the purpose of the appointment – confirm by pressing ) and program how often they occur (once, daily, weekly).

Once an appointment is scheduled, the  icon appears. The alarm will sound whether the phone is switched on or off, but pressing any key will shut it off.

You can also change or cancel an appointment. In addition, you can program a short message to be sent (with icons, and/or a melody) at the appointment time.

## 11.3

### Birthdays (1)

You schedule birthdays and anniversaries in the same way as appointments but on an annual basis. You can schedule up to five anniversary dates.

## 11.4

### Options (1)

The "snooze" function can be activated when you program any alarm. The alarm will be repeated at regular ten minute intervals after the first sounding.

To program the alarm clock, you may also decide not to sound the alarm when the handset is off.



(1) Depending on your phone model.


# 12

## CALCULATOR/ CONVERTER (1)

You can access the calculator and the currency converter from the main screen in two different ways:

- From the MENU, select the "Calculator" option.
- Enter a figure directly on the keypad, then press the  key, and select the "Calculator" or "Convert" (1) option.

### 12.1 Calculator

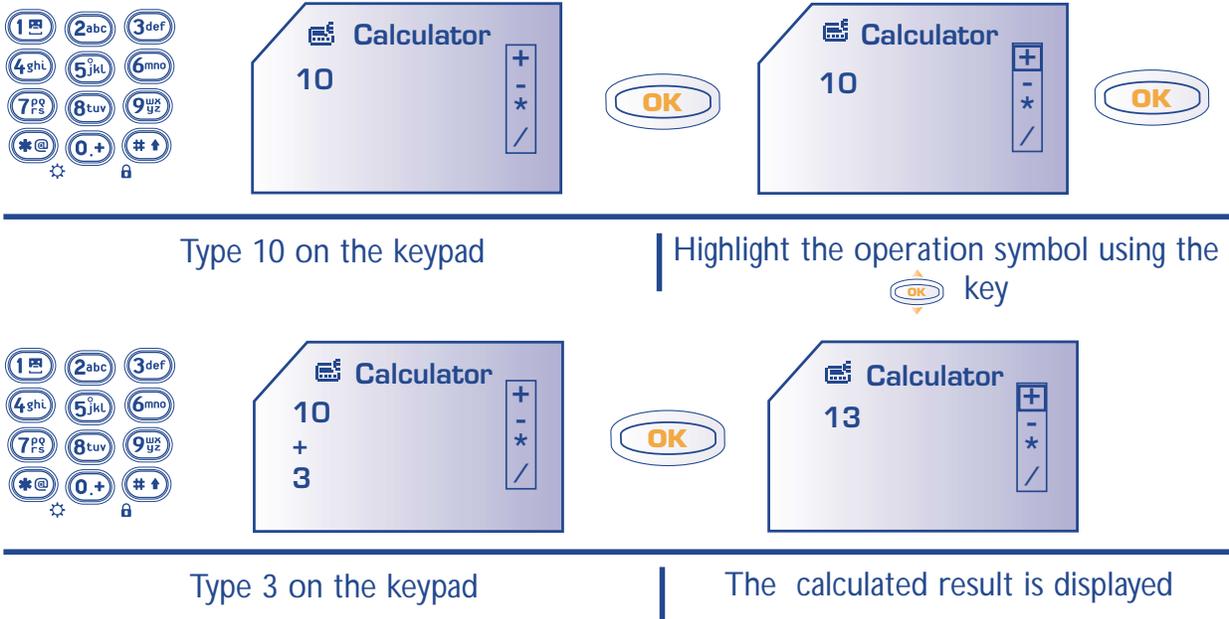

Type 10 on the keypad

Highlight the operation symbol using the  key

Type 3 on the keypad

The calculated result is displayed



To enter decimals ("."), use the  key (long keypress). To return to the main screen, press the  key (long keypress).

(1) Depending on your phone model.


## 12.2

## Convert (1)

The currency converter allows you to:

- Directly convert a currency into Euros and vice-versa (2).
- Convert a sum of money into another currency (e.g. dollars into French francs).

### Example of conversion into Euros:

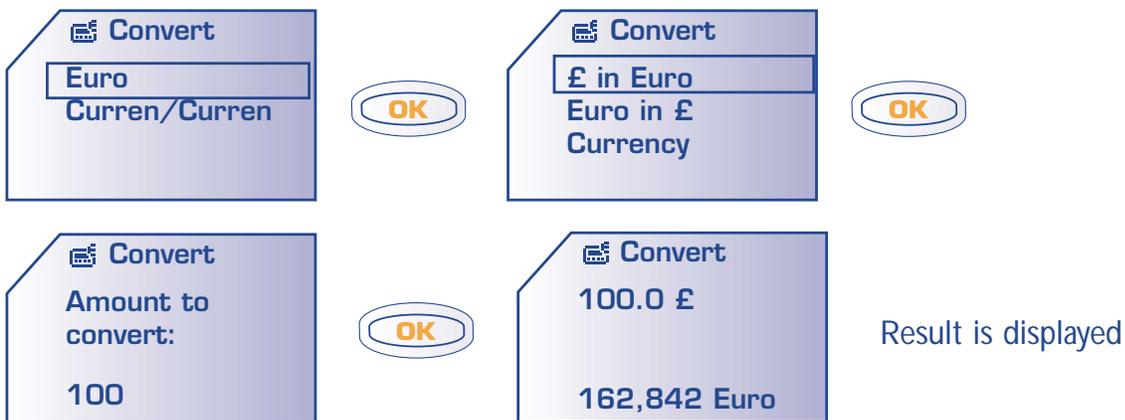

- (1) Depending on your phone model.
- (2) The currency converter uses the final conversion rates for the EURO set on 31/12/1998, which are used in accordance with the official conversion rules.

## 12.3

### Currency selection (1)

Access the currency table.



From this table, choose the currencies to convert (into euros or into another currency) using the  key to access the following options:

	<b>Confirm</b>	Select the currency
	<b>Create</b>	Add a new currency (which can subsequently be changed)
	<b>Modify</b>	Modify a currency which you have created
	<b>Delete</b>	Delete the new currency
	<b>Back</b>	Return to the previous screen



(1) Depending on your phone model.

### **If you are in the Euro converter (1):**

Once the currency has been selected or created, you must enter the exchange rate of the currency in euros (or confirm it if it is already shown).

### **If you are in the currency converter (1):**

When you have selected or created the first currency, repeat the same operation for the second currency, then enter the rate for exchanging these 2 currencies.



To return to the main screen, press the  key (long keypress).

(1) Depending on your phone model.

# 13

## SETUP

Access "settings" from the MENU (See page 23) by pressing the  key.



### 13.1 Services

#### Security

**PIN Code (1)** SIM card protection code requested each time the phone is switched on if the code is activated.

Activate/  
Deactivate      Activate (or cancel) this code.

Change      Update the code (4 to 8 digits).

**PIN2 Code (1)** Protection code for certain functions on the SIM card (Billing / Cost / FDN, etc.) requested when these functions are used if this code is activated.

Change      Update the code (4 to 8 digits).



(1) Contact your operator if necessary.

<b>Netwrk Code (1)</b>	Code requested to access the “ <b>Forbidden</b> ” options associated with the network.
<b>MENU Code</b>	Protection code for certain MENU functions (Services, Settings / Language), requested when these functions are used if this code is activated.
Activate/ Deactivate	Activate/cancel this code.
Change	Update the code (4 to 8 digits).
<b>Prod.Code</b>	Protection code for your telephone, requested each time it is switched on if this code is activated.
Activate/ Deactivate	Activate/cancel this code.
Change	Update the code (4 to 8 digits).
<b>Change SIM</b>	Defines SIM card as the main SIM card. (See page 32)

## **Billing**

<b>Duration</b>	Call time management.
Last call	Duration of last call.
Avail. Duration	Remaining time available in relation to time indicated under the “ <b>Inclusive Time</b> ” (for user's information only).

**!** (1) Check the availability of this service with your operator.

Cumul.dur.	Total duration of calls made.
Inclusive Time	Duration of subscription (enter the time - confirm by  ).
Reset	Reset (immediately or periodically) the total duration of calls made.
Beep durat.	Activates/cancels the beep which sounds during a call at an interval set by the user (enter the interval - confirm by  ).
<b>Expense (1)</b>	Management of call charges.
Last call	Cost of last charged call.
Credit	Remaining credit in relation to " <b>Set Credit</b> ".
Cumul. cost	Total cost of charged calls
Set Credit	Maximum credit beyond which all charged calls are barred (enter credit - confirm by  ).
Reset	Reset the total cost of charged calls.
Unit value	Cost of one telecom unit in the chosen currency (select the " <b>Other?</b> " option for another currency and press the  key to enter a decimal point).

**!** (1) Check the availability of this service with your operator.



## Forward (1)

- All** All your calls are forwarded. The  icon is displayed.
- Conditional** Calls are forwarded if the line is busy, the call isn't answered or the phone is out of range of the network.
- If busy** Calls are forwarded only if your line is busy.
- No reply** Calls are forwarded only if the call isn't answered.
- Unreach.** Only if the phone is out of range of the network.
- Data** Data calls are forwarded to the specified number.
- Fax** Fax calls are forwarded to the specified number.
- Status** List of call forwarding operations activated from this phone.
- Cancel All** Cancels all activated call forwarding.



## Call

- Call wait (1)** Activates/cancels signalling of a second incoming call by a beep while you are in communication.
- Conceal ID (CLIR) (1)** Activates/cancels the option which makes your calls anonymous (your number is not transmitted by the network to the parties you call).



(1) Check the availability of this service with your operator.

**Caller ID (CLIP) (1)** Activates/cancels presentation of the caller's number (or name if it is stored in the directory) with every call.

### **Auto Redial (1)**

Activate/  
Deactivate Activates/cancels automatic call back if the first call was unsuccessful.

Forbidden No List of numbers for which automatic call back was unsuccessful (10 unsuccessful attempts).

Reset Reset the blacklist.

**Ntwk. Redial (1)** (Completion of Calls to Busy Subscribers)  
Automatic callback of the last dialled busy number.

## **Call Barring**

**Outgoing** Activates/cancels call barring. This option is applicable in the following cases:

 Except Dir. (2) Calls to numbers not stored in the phone's directory are barred.

 All (1) All outgoing calls are barred.

-  (1) Depending on your phone model and whether this service is made available by your operator.
- (2) You can no longer modify your directory.

International(1) Outgoing international calls are barred.

Excpt-> Outgoing calls except those to the subscription  
Home (1) country are barred.

ExceptFDN (1) Calls to numbers other than the specific FDN  
directory (contained in the SIM card) are barred.

Activate/  
Deactivate All calls which do not begin by one of the numbers  
stored in the "FDN" directory are barred.

Change If the "**Exc. FDN**" option is activated, you can  
update the "FDN" directory after entering PIN2  
code (update "FDN" directory by pressing  ).

View View the list of FDN numbers.

 Exc.  
Private All calls other than those to numbers included in  
the "**Private**" family are barred.

 Exc.  
Prof. All calls other than those to numbers included in  
the "**Professional**" family are barred.

 Exc.  
Other All calls other than those to numbers included in  
the "**Other**" family are barred.



(1) Check the availability of this service with your operator.

**Incoming** Activates/cancels incoming call barring. This option is applicable to the following cases:

✎ Except Dir. (1) All calls from a number not stored in the phone's directory are barred.

✎ All (2) All incoming calls are barred.

If abroad (2) Incoming calls are barred if you are abroad.

✎ Exc. Private All calls other than those from numbers included in the "**Private**" family are barred.

✎ Exc. Prof. All calls other than those from numbers included in the "**Professional**" family are barred.

✎ Exc. Other All calls other than those from numbers included in the "**Other**" family are barred.

**Status** List of call barring operations activated.

## **Networks**

**SMS CB (2)** Messages broadcast over the network (weather, traffic, etc.) are automatically displayed on the main screen.

CB list List of the message codes to be displayed:

Reception Depending on the selected option, the phone displays messages broadcast by the network.



(1) You can no longer modify your directory.

(2) Check the availability of this service with your operator.

Full	The phone permanently scans the network and displays received messages according to your list (see " <b>CB list</b> " option).
Limited	Phone intermittently scans the network and displays received messages according to your list (see " <b>CB list</b> " option).
None	The phone does not receive any messages.
<b>Searching</b>	Search for a home network.
Available	List of available networks in your radio environment.
Mode	Depending on the selected option, search mode is:
Automatic	First searched network is the last one used.
Manual	User chooses the home network.
Preferred	List of networks for priority connection (update this list with  ).
Forbidden	List of forbidden networks (update the list with  ).



(1) Check the availability of this service with your operator.

## 13.2

### Clock

**Time/Date**      Setting your telephone's date and time.

**Format**          Date and time display format.

## 13.3

### Languages (1)

Message display languages (select by pressing ). The "**Automatic**" option chooses the language of the subscription network (if it is available in the phone).

## 13.4

### Dictionary (1)

There is a dictionary to which you can add your own words to those already contained in the assisted data entry system.

When you consult your dictionary, you can add, modify, or delete words using the options available by pressing the  key.



(1) Depending on your phone model and the language.

## 13.5

### Display (1)

**Backlight** Backlighting intensity (press  to adjust); we recommend using the minimum necessary intensity to save battery power. However, you can use the  key (long keypress) to activate backlighting.

**Contrast** Display contrast (press  to adjust).

## 13.6

### Pick up

**Pick up** Allows you to choose the way a call will be answered.

**Automatic** Automatically (without touching a key) after approximately 2 rings (this option is only available if your phone is connected to an audio accessory).

**Key = ** After pressing the  key.

**Any key** After touching any key on the keypad (1 to #).

## 13.7

### Automatic power off

#### Power off

When this option is activated, the phone is automatically switched off if it is not used (i.e. no keypresses, no calls, no incoming messages) after an amount of time chosen by the user (enter the duration - confirm by ).

## 13.8

### Keypad lock

#### Keypad lock

When this option is activated, the keypad will be automatically locked (if you are not going to use your phone for a prolonged period of time).

- To lock the keypad instantly, press (long keypress) the  key.
- To unlock it, press (long keypress) the  key, and confirm by .

# 14

## WAP (1) (Via services)

### 14.1 Accessing Mobile Internet Services (2)

You can access mobile Internet services from the main screen by pressing the  key and selecting the "Services" option or by making a long keypress on the  key (1).

The following screen will pop up:



The "**Homepage**" option allows you to start the WAP browser if it is already configured.

The "**Profiles**" option allows you to set up the connection parameters for your WAP services access providers. In most cases, your navigator connection parameters will have already been set up.

If that is not the case, refer to the "**Go to URL**" option.

At anytime during navigation, you can exit the WAP mode with a long keypress on the  key.



- (1) Depending on your phone model and the language.
- (2) Check the availability of this service with your operator.

## 14.2

## Available options

While consulting an Internet page, you can access a number of options by pressing the  key.



...	Can be accessed from the current page
Home Page	Return directly to the home page
Go to URL	Access the address of a site directly
Bookmarks	Access your favourite sites
Show URL	Display the address of the site you are currently visiting (1)
Connect. Status	Display the information bar for your Internet session
Alert List	Display the list of your notifications (2)
Zoom	Change the character size
Help	Display on-line help messages
Exit WAP	Finish consulting Internet services and return to the main screen
Back	Return to the previous screen

## 14.3

### Setting up your access (1)

Select a profile from the list of profiles and access the following options by pressing the  key.

	<b>Confirm</b>	Confirm the profile that you will use to access Wap services
	<b>Try profile</b>	Try the profile homepage
	<b>Create</b>	Create a new profile
	<b>Modify</b>	Modify the profile parameters
	<b>Delete</b>	Delete a profile
	<b>Back</b>	Return to the list of profiles



- (1) Depending on your phone model.
- (2) Check the availability of this service with your operator.

To create a new profile, you must fill in all of the following parameters (1) :

- Profile name
- Homepage
- Profile Address
- Profile Port
- Parameters
  - Access Type (analogue, ISDN)
  - Input name
  - Password
  - Access No.
  - Speed



(1) Enter the information supplied by your operator.

# 15

## CHARACTER SET

To enter a word, press the key which corresponds to the desired letter several times until the wanted letter appears.

	1	2	3	4	5	6	7	8	9	10	11	12
	┌	1	_	,	'	"	:	;	?	¿	!	
	A	B	C	2	À	Ä	Æ	ç				
	D	E	F	3	É	Δ	Φ					
	G	H	I	4	Γ							
	J	K	L	5	Λ							
	M	N	O	6	Ñ	Ø	Ö	Ω				
	P	Q	R	S	7	Β	Π	Σ				
	T	U	V	8	Ü	Θ						
	W	X	Y	Z	9	Ξ	Ψ					
	+	0	•	-	#	/	%	(	)	<	>	
	*	=	@	\	~	€	\$	£	¥	&	§	
	#	↑										

┌ : space.

# 16

## WARRANTY

Congratulations for choosing this mobile phone - we hope that this product will satisfy all your needs.

Notwithstanding any other applicable statutory warranties, this mobile phone and the battery are guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice.

Nevertheless, if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty will apply in place of the manufacturer's warranty. The present warranty terms also apply to the accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your dealer or any maintenance centre (see list of maintenance centres at our website - [www.alcatel.com](http://www.alcatel.com)) without delay of any defect and present the invoice given to you at the time of purchase.

The dealer will decide whether to replace or repair, as appropriate, all or any part of the equipment (telephone or accessory) found to be defective. This warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall entitle to a three month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

- use not conforming with the instructions for use or installation,
- non observation of the technical and safety standards applicable in the country where the equipment is used,
- improper maintenance of batteries and other sources of energy, and of the overall electric installation,

- Accidents or the consequences of theft, (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- Combination or integration of the equipment in hardware not supplied by the manufacturer unless the latter gave written, explicit consent for such,
- Modifications, alterations, or repairs carried out by parties not authorised by the manufacturer or by the maintenance centre,
- Use of the equipment for a purpose other than that for which it was designed,
- Normal wear,
- Deterioration caused by external causes (RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc),
- Modifications made to the equipment even if they are mandatory due to changes in regulations and/or modification of network parameters,
- Connection faults resulting from unsatisfactory radio propagation or caused by the absence of radio relay coverage.



Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty.

Apart from the statutory warranty, the above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excluding any other explicit or implied warranty associated with sale of the equipment.

# 17

## ACCESSORIES (1)


Alcatel latest generation of GSM mobile phones feature a built-in "hands-free " which enables use of the telephone at a certain distance, i.e. on a table. Users who wish to protect the confidentiality of their conversations may use the headset accessory.




Headset  
M 13




Changeable front panel  
FDx

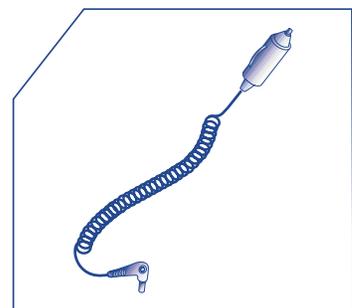


Cigar lighter charger  
C 56

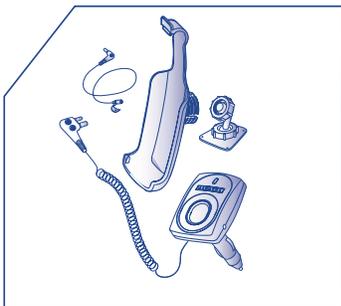

Easy to install hands-free car kit  
MP 82

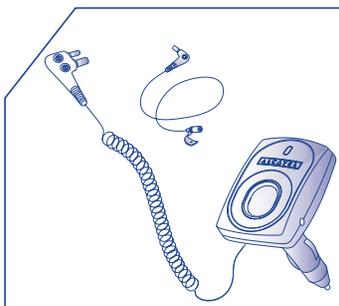


Basic car-kit  
MP 79

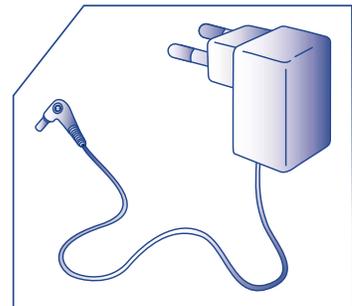


Standard charger  
C 55




(1) Depending on your phone model and availability.

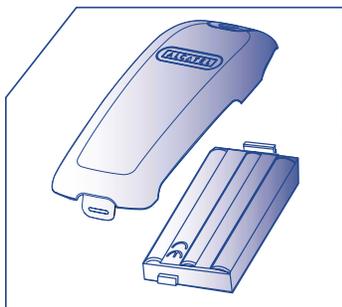

Battery  
B 56

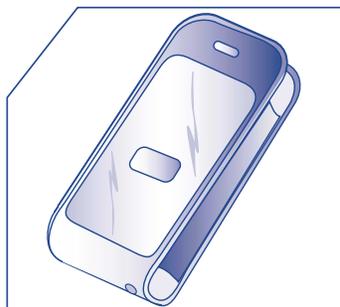

Functional carrying case  
HC 27

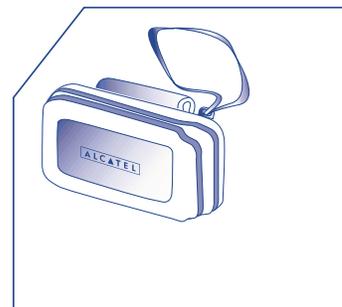

Carrying case  
HC 26



Online purchase: [www.alcatel.com](http://www.alcatel.com)



© ALCATEL BUSINESS SYSTEMS 2001.  
All rights reserved. Alcatel reserves the  
right to alter material or technical  
specification of its products  
without prior notice.



3DS08041AAAA 01



[www.alcatel.com](http://www.alcatel.com)