

User Manual

X-treme 3SIM

We thank you for buying double-standarted mobile phone X-treme 3SIM. Given manual includes description of main mobile phone functions .

The phone X-treme 3SIM allows to use 3 SIM cards. 1 SIM of CDMA standard and 2 SIM of GSM standard at triple standby mode, i.e., in standby mode there are 3 cards in the connection; during the call 1 card works in active mode, 2 other cards are unavailable.

The content of given manual is right. The description of some functions may differ due to changes in software or provider services. The company keeps the right to arrange changes in technical specifications without previous warning.

Key remarks in security technics.

Given phone is assigned for calling and receiving calls, sending SMS messages, surfing the Internet (may be unavailable) etc.

Read carefully the below section and strictly keep following instructions.

The phone doesn't contain any materials harmful for health.

- ♦ Don't use the phone during the thunderstorm in the open air.
- ♦ Keep the battery off from high temperature, explosive and flammable liquids.
- ♦ Power the phone off in case if using the phone can cause the obstacle or danger.
- ♦ Do not put the prone in heating devices such as microwave oven, hot plate or heater.

- ♦ Do not try to open the mobile phone's case. If phone or any of accessories do not work properly, please contact the closest authorized service center.
 - ♦ Use only accessories and charging devices assigned to this model. Do not use defective or second hand chargers.
 - ♦ Do not let the battery short circuit happen.
 - ♦ If you use any personal medical devices, please clarify from producer whether device has sufficient protection from radiation in radio-spectrum. Power the phone off in medical institutions if it is required with inner regulation rules.
 - ♦ Do not use the phone during driving. Follow mobile phone using recommendations while driving.
 - ♦ Keep the phone, all its components and accessories in a place unavailable for kids and pets. They may damage the device or accidentally choke with small details.
 - ♦ Avoid contacting phone with water.
 - ♦ Do not use potent chemicals, dissolvents or bleaches for cleaning the phone.
 - ♦ Do not subject the device under the effect of direct sun rays.
 - ♦ To avoid getting heavy metals, acids, chemicals in water or ground what cause significant damage to environment, wasted accumulator battery should be utilized after end of service term in accordance to the law regulations. Juristic responsibility occurs in case of failure to comply with legislation.
- Data about safe utilization of lithium-ion batteries may be obtained in the closest specialized service center.

Specifications


Phone	3 active SIM (mini-SIM)
-------	-------------------------

	GSM: 850/900/1800/1900 MHZ(x2) CDMA: 800MHZ (x1)
Messages	SMS
Mob. Internet	GPRS
Bluetooth	V2.1
Display	2,4", coloured LC, 240x320 pix
Camera	1,3 Mn
Supporting formats	MIDI, AAC, MP3, WAV, JPG
FM-radio	87,5-108,0 МГц (built-in antenna)
Micro-SD	till 32 Gb
Battery	Li-Ion, 3000mAh

Package includes:

- Mobile phone
- Battery
- Charging device (x-style type:C1000\01)
- USB-micro-USB cable
- User manual
- Warranty card
- Key to open screw from back cover.

Phone buttons.

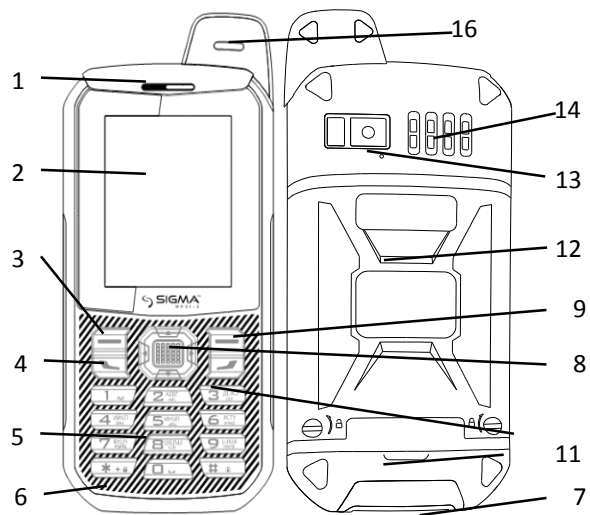

1	Front dynamic
2	Display

3	Left functional button
4	Calling\receiving call
5	Digital-letter keyboard
6	Microphone
7	Micro-USB port, USB port of Powerbank system
8	Navigation buttons.
9	Right functional button
10	Rebound\Cancel\display deactivating (long pressing - to power on or power off phone)
11	Port to facilitate opening the back cover
12	Back cover
13	Camera
14	Outer dynamic
15	Back cover screws
16	Informational indicator (signalize incoming calls, messages, battery condition)

First powering on

Open the back cover, using complex key to unscrew screws.

Insert SIM cards in proper device slots.

NB! Slot for CDMA SIM remarked with letter "C", slots for GSM SIM – letter "G"

Insert also micro-SD card, if required.

Insert battery, controlling that battery contacts fit phone contacts.

Be careful, broken card or batteries cards lead to device breakage and cancelling warranty.

Close back cover and fix it with screws.

Power on the phone long pressing button 10 (red handset).

It is recommended to arrange full battery charge before first use.

Conditional screen marks on phone

	No connection signal
	Connection signal
	Battery charge indicator
	New message
	Incoming call
	Silence mode activated
	Vibro mode activated
	Alarm clock is active
	Bluetooth switched on
	GPRS Internet is active
	Keyboard locked

Power on\off the device

To power on the device press and keep button «power» until activation of device display.

To power off press and keep button «power» until shutdown.

Device locking occurs automatically, or after switching off LCD display using "end" key. Unlocking occurs through consequent pressing right soft-button and button «*».

Calling

To call - dial number on digital keyboard in local or international format, or choose number from phone contacts list, and press calling button. Choose from which Sim-card to call. To cancel call - press button 'cancel'.

During call it is also possible to: switch volume in a speakerphone mode, start conversation record, add more persons to conference conversation, turn off\switch on microphone and etc.

Device menu

To access the main device menu you need to press left soft-button or central navigation button.

Menu includes following section:

Calls: incoming, outgoing and missed calls register;

Contacts: phone book including phone, SIM cards storage;

Message: to send SMS\MMS messages and read received messages;

Setting: settings volume profiles, display, phone, Sim-cards, security, language and time;

Media: device media-functions are concentrated in this menu: Camera, video player, audio-record, photo gallery, FM radio;

Audio player: mp3 files player.

NB! FM radio uses built-in antenna. This phone do not support wired headset. FM radio audio output uses phone speaker.

Bluetooth headset works with voice calls and MP3 player.

Organizer: browser, calendar, E-reader, alarm, Bluetooth settings and file manager.

Calls

«Calls» menu contains incoming, outgoing and missed calls register, counter GPRS traffic and allows: dial contact number, send SMS-messages, add new number to contacts, add number to black list, delete information about call and etc.

Contacts

«Contacts» menu is your phone book with contacts which are saved to phone or to Sim. Phone memory capacity is 1000 contacts.

Contacts may be viewed in alphabet order, in groups and the most popular (interface moves with navigation buttons to the left\right)

To view contact - point it with cursor and press central navigation button.

To call - press “Call” button.

Additional options open with left soft-button.

New: add new contact. Before creating you have to select storage.

Send: create and send text message to contact.

Dial: call chosen contact.

Delete: delete chosen contact.

Select multiple: choose from contact to delete from contact list.

Import\export: allows to copy contacts between Sim-cards and phone, and also to export or import contacts in VCF format.

Additional options: view memory state, add numbers to speed dial and send V-card.

Adding new contact: choose «New» in options, choose place to save contact, put name and phone number, press «options-save».

To add contact to a group choose group through editing menu contact. Only contacts from phone memory may be added in a group.

Contact record may contain following data: name, image, mobile, home or office numbers, fax number, email, URL, note and personal ringtone.

Messaging

This menu contains all necessary to sending, saving, viewing and deleting SMS and MMS messages.

New SMS\MMS: choose to write and send (or save) new message.

Incoming: folder with received messages.

Outgoing: folder with sent messages.

Draft: unfinished messages.

Sent: sent messages.

Safe: section to keep messages with important data. To enter type password - 1234.

Template: template texts for messages.

Number of voice mail: to input number of voice mail.

To enter SNS settings press right soft-button when in menu «Messaging».

Menu «Settings» allows to set numbers of SMS center for both SIM-cards, set up term of message, settings to receive delivery condition report, settings to save messages, turning off or switching on push-messages.

Settings

Profiles: menu is assigned for setting sound profiles, i.e. volume characteristics, ringtones, vibrate mode, button sound and systems

for different conditions of phone using, such as: outdoor, meeting, silent and etc.

Built-in settings are editable as well as custom settings may be created.

To activate settings choose profile in menu and press central button.

Calls: menu allows to set up number of active Sim-cards, readdressing options and etc.

Phone: contains date and time settings, interface languages, settings of speed access buttons, scheduled power on\off and allows to control the work of informational LED. This menu contains restore to default settings option as well.

Display: wallpaper settings, screen and backlight timeout.

Security: set up Sim-card lock, phone lock and lock of special phone functions.

Blacklist management is in this menu as well.

Network: allows to set up GPRS, choose card to transmit data by default, set up network accounts.

Media

Programs to work with photo, video and sound are collected in this section.

Photo camera - for photos.

Video camera - for video recording.

Radio - for listening to radio stations (works only through outer dynamic).

Audio recorder for sound record.

Photo - for viewing images.

Tools

The following programs are available in this menu:

Calendar - for viewing calendar.

Calculator - for arithmetic calculations.

E-book – for reading texts in TXT format (UNICODE code).

Alarm - allows to set few alarms simultaneously.

Bluetooth – allows to set connection with other devices through Bluetooth.

Files: File manager allows to work with files in phone memory and in memory card. Following operations are available: copying, moving, deleting, creating files, or setting melodies as phone ringtones.

Also possible to format memory card. Be careful, during formatting all files will be deleted from memory card.

Charging

This menu is assigned to switch on and turn off charging of Powerbank function. Connect device which needs to be charged to phone USB port. Charging may start. To avoid possible circuit take off charge after finishing.

Troubleshooting

Following recommendations may help to solve some problems with phone independently. In case problems occurs try to solve it yourself with following recommendations. If problem is not solved, contact to Sigma mobile service center.

Check whether battery is charged and whether problem continues after device reset.

Try to restore factory settings through menu «Settings - phone – Default settings» (password by default – 1122)

Problems with memory card mostly occurs in case of memory card breakage. Thus, firstly check given card separately. Also recommended to: take off and insert memory card in port, check whether card is put in port correctly, reload phone.

Passwords:

Requests to input following passwords may occur during activating and phone use :

Phone password: request occurs during activating. This is the password of general locking.

Anti-theft password: occurs during loading in case function is switched on or Sim-card was changed.

PIN-code: if Pin-code checking is active, it is required to input code which is given with Sim-card.

PUK code, PIN2 code - also given with SIM card.

Confidential code: requested if confidentiality is active in security settings, during activation of blocked function.

Code of private messages: requested during entrance the folder of private messages (SMS) (by default – 1234)

Be careful installing blocking passwords: if they are lost, to renew phone functionality is possible only in service center.

Phone does not power on: check battery charge, repeatedly connect charging device, and wait at least 10 minutes. Press and keep the button «Power on» not less than 5 second. If device does not power on contact in service center.

Battery discharges rapidly: reasons for increased battery charges may be: low air temperature, active using of media programs, huge distance to cellular tower of connection operator.

Battery does not charge: check charging adapter connection to plug. Use only complete charging adapter and cable.

Impossible to call: this problem may be caused by law connection signal, network overloading, incorrect input of contact number, activated function of calling prohibition. Try to change location, check level of connection signal, wipe phone to factory reset. Contact in service center.

Low receiver volume: during conversation, press button «up» to increase volume. Set volume during conversation in profiles. Check signal of cellular connection.