

TELSTRA T84 - User Manual

OVERVIEW	1	PLAY VIDEOS	51
GETTING STARTED	3	GALLERY	51
PHONE CALLS	20	SOUND RECORDER	51
CONTACTS	26	GOOGLE APPLICATIONS	52
MESSAGES	32	UPDATING YOUR DEVICE	56
CONNECT TO A COMPUTER	39	TECHNICAL SPECIFICATIONS:	58
CONNECT TO THE INTERNET	40	TROUBLESHOOTING	59
USING THE BROWSER	43	WARRANTY INFORMATION	64
BLUETOOTH	44	SAFETY	65
CAMERA	46	ANDROID QUICK START GUIDE	71

ZTE Australia provides dedicated support with a local call centre and social media outreach. Search 'ZTE Australia' on Facebook , Google+ and Twitter to keep in touch.

© ZTE 2015 Ver 1.1 Sept 2015



The worst case SAR value for this device is 1.33W/Kg in the Body Position

OVERVIEW



GETTING STARTED

INSERT YOUR SIM CARD

This device only supports micro SIM or 3FF size. Do **not** use a nano SIM (4FF) or nano SIM adaptor card which can damage your device.

1. Open the SIM slot cover on the right hand side of the device by lifting the port cover up from the bottom (shown above).
2. Hold the SIM card with the cut corner as shown below and push it fully into the SIM slot until it clicks and locks into place.
3. Make sure to fully close the SIM slot cover to maintain water protection integrity.

INSTALL A MICRO SD CARD (OPTIONAL)

A microSD card can be installed or removed while the phone is turned on. You need to unmount the microSD card before removing it. The device supports microSD(HC) cards up to 32GB. Insert as shown below:

INSERT THE SIM CARD AND EXTERNAL MEMORY CARD (OPTIONAL)

microSD card is an optional accessory to expand your device memory.



Only use micro SIM (3FF) format SIM cards. Do not use an adaptor which may damage your device.



Charge the Battery

1. Check the orientation of the charging jack and gently insert into the handset charging port.
2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.
4. Battery life will improve after a few charge cycles.
5. Do not pull harshly on the USB charging lead as this could damage your device. Be careful not to trip over the charging lead whilst it is plugged in.

Battery Warnings

Do not disassemble the device. The battery is non user replaceable.


Do not dispose of the device in a fire, the battery may explode.

Only use genuine chargers and accessories.

SWITCH YOUR DEVICE ON OR OFF, CHARGE YOUR BATTERY

- Press and hold the Power Key to turn on your phone.
- To turn it off, press and hold the Power Key to open the options menu.

CHARGE THE BATTERY

- Check the correct orientation of the lead, then insert the charger lead carefully.
- Do not force the connector into the charger jack.
- Connect the charger to a standard AC wall outlet.
- Disconnect the charger when the battery is fully charged.
- If the phone is on, you'll see the charging icon  on the status bar.
- If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the lock screen will tell you the battery level each time you wake up your phone.
- On first use please charge the battery for 3-4 hours. It is better to keep your battery topped up than to let it fully discharge.

TIPS TO MAXIMISE BATTERY LIFE

- After 2-3 charge / discharge cycles the battery life will improve. From then on use top up charging to recharge frequently and always charge promptly when flat.
- To avoid the battery entering a deep discharged state charge the battery promptly when flat.

- If the battery is deeply discharged it can take 30 minutes to start charging. Leave it on charge to recover the battery.
- Keep your handset and battery cool. High temperatures degrade the battery more quickly.
- Normal charge time is 3-4 hours. Do not charge more than 24hrs.
- When not using the phone for long periods charge to approx 40% and remove the battery.
- With low network signal conditions battery life is reduced.
- Turn off Bluetooth and Wi-Fi when not in use, and set the screen brightness to automatic to maximise battery life.

GOOGLE ACTIVATION WIZARD: CREATE OR LOG IN TO A GOOGLE ACCOUNT
We recommend you log in or create a Google account to enable on line services.

Follow the on screen wizard to create or log in to an existing Google account.

TIPS

If you set a lock code on your device and then forget the pattern, PIN or password it can be reset using your Google Account. After 5 incorrect unlock attempts you are prompted to enter your Google password to unlock your device.

If you have not set a Google account then you need to do a factory reset. From the lock screen condition, press the Emergency Call button, then enter *983*987# into the dialler. Follow the prompts to reset your phone.

 
WAKE UP FROM SLEEP MODE

- Press the Power key to activate the display.
- Slide the screen Up to unlock.
- Slide the icons on the bottom panel for quick access to the Phone or Camera.

SWITCH YOUR HANDSET TO SLEEP MODE





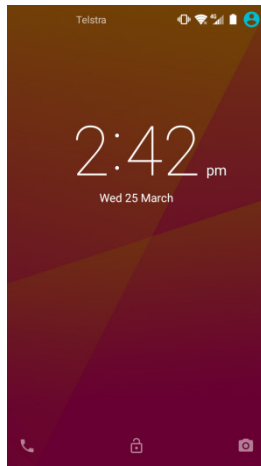



Press the Power key to activate sleep mode.

Sleep Mode activates automatically with the timeout set from Options > System settings > Display > Sleep.



TIP

If you set an unlock pattern, PIN or password you need to enter it to unlock the screen. If you forget your pattern or PIN use your Google Account password to reset the phone. This will only work if you register a Google account with this handset.


Keys	Function
Power Key	Hold down to power on your phone. Press to wake up or activate sleep mode. Hold down for Restart, Power off, Flight mode, Silent, or Vibrate options.
Back 	Press to go to the previous screen. Press to exit applications.
Home 	Press to return to the Home Screen from any screen. Hold down to access Google Search or Google Now.
Options 	Press to get the options on the current screen. Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down
Torch Key	Long press to activate the Torch
	Phone icon – Open the dialler for Calls
	Contacts – Open your Phonebook for all your Contacts
	Apps – Open the Applications menu
	Messages – go to the Messages app, for SMS and MMS
	Open the Chrome browser

THE HOME SCREEN

Slide the Home Screen left or right to view additional pages.

Long press on the screen to change your wallpaper.

 Tap the Google Search bar to search the web, or touch the mic icon to speak your search.

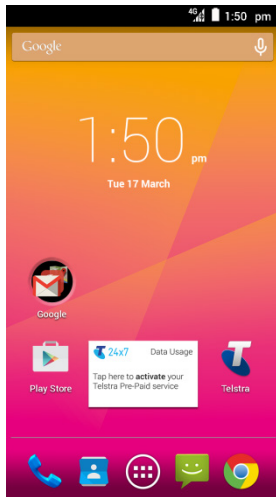

OPTIONS

Press the Options Key for


Wallpaper, set background image for the Homescreen or Lock screen


Manage Apps, view Downloaded, Running and All apps

System settings, shortcut to device Settings

Press and Hold the Options key for Recent Apps

ADD OR REMOVE ICONS & WIDGETS

Press  to go to Apps then long press any icon to add it to the desktop.

- Hold the icon to move it and release to place it on the home screen.
- Drag and drop the item to Remove if you want to delete it.
- Eg, Add the Analogue Clock Widget:
Press  > Select the Widgets tab at the top of the screen
Press and hold on the Analogue Clock
Drag the Clock to the required location on your Homescreen
Release to place the clock in the desired location.
- Larger icons like the Clock and Facebook app require more space on the screen. Delete existing icons or place on a new screen.

TIP

Touch the Clock to access Alarms, Clock, Stopwatch and Timer menu

PHONE STATUS ICONS



Signal strength*



Flight mode



Data in use*



No signal



Emergency Calls only



Connected to a Wi-Fi network



Wifi on, not connected



Wi-Fi Hotspot is on



Battery is low



Battery is full



Alarm is set



Battery is charging



Speaker mode is on



Speaker is muted



Vibrate mode enabled



Microphone is muted



Bluetooth is on



FM Radio is on



Glove Mode is on



USB is connected

* Data disabled mode will show grey signal bars and no arrows

The Notifications Panel at the top of the Home Screen shows useful device and status information. Drag your finger down from the top of the display to open the Notifications Panel.

NOTIFICATION ICONS



New Email



New instant message



New SMS/MMS



Upcoming calendar event



New voicemail



Song is playing



Missed call



Downloading data



Call in progress



Content downloaded



Call on hold



Uploading data



Call forwarding on



More notifications



Problem with SMS/MMS

 


Headset connected


ACCESS THE QUICK SETTINGS PANEL

Swipe down from the top of the home screen to access the Quick Settings panel. Touch the icon to switch on or off, touch Wi-Fi or Bluetooth to configure those features.

THE QUICK SETTINGS PANEL

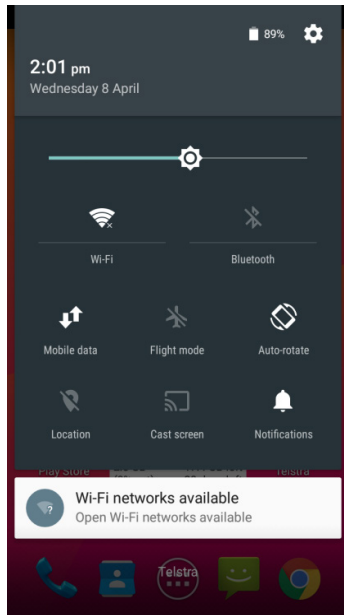

APPLICATIONS

Tap  to access Applications. Flick the screen left or right to scroll through in alphabetical order.

You can install additional applications by going to Play Store

INSTALL APPLICATIONS FROM GOOGLE PLAY STORE



Tap Play Store from the Home Screen to download and install applications from the Google. Select the item and tap Install.

- You need a Google account to access Play Store
- Follow the wizard to sign in to an existing account or to create a new account.

UNINSTALL APPLICATIONS

- From the Home screen tap Options > Manage apps
- Select the application to remove
- Tap Uninstall, tap OK to confirm.


MULTI-TASKING

Run multiple applications simultaneously. Press the Home key from any application to launch, open or view something else. The original application will be suspended until you return to it.

TIPS

If you are finished with an application use the Back key to exit the application. If you leave applications running in the background the system memory will be depleted and the device will become slow to respond. Return to the app and close it, or from the Home screen press Apps > Task Manager and select Close All to shut down any unnecessary apps and processes.

OPEN RECENTLY USED APPLICATIONS

Press and hold the Options Key  from any screen to view recently used applications.

SETTINGS

Tap Options  > System Settings from the Home Screen:

SETTINGS MENU	
Wi-Fi	Connect to Wi-Fi devices and Networks
Bluetooth	Connect to Bluetooth devices and Networks
Call Settings	Configure Ringtones, Vibrate, Voicemail, etc.
Data usage	View your data usage, and control Mobile Data
More...	Flight mode, Default SMS app, Tethering and portable hotspot, VPN, Mobile networks
Sound	Sound levels, ringtones, notifications, vibrate.
Display	Brightness, screen timeout, orientation etc.
Storage	Check available memory. Mount or unmount the SD card.
Battery	See what has been consuming your battery power.

SETTINGS MENU

Apps	Manage applications, set Quick Launch shortcuts, see running services and battery usage.
Connect to PC	Set USB connection default options
Location	Configure Location modes and services
Security	Set screen locks, enable SIM PIN etc
Language & input	Set the language and keyboard options.
Backup & reset	Backup your data on Google servers, and perform a factory reset to remove your default account.
Accounts	Add and remove accounts.
Date & time	Set the date, time, time zone, and formats. Enable automatic time update.
Accessibility	Download a screen reader application and make other Accessibility settings

Printing

Interfaces your handset to Google Cloud Print so you can print directly from your device to any printer located 'in the cloud'

About Phone

Access Storage card updates, Status, software version information and others.




PHONE CALLS

MAKE A CALL FROM THE DIALER



Type name or number



- Press  for the Dial pad or tap Search, type a name or number, tap the Mic to speak a number or press Options  (see later)
- Tap numbers on the dial pad or select from Call Logs or Favourites displayed on screen.
- Tap the call key  to make the call.
- Press End to end the call.

FUNCTIONS DURING A CALL, PRESS OPTIONS:



Speaker mode Mute Dial Pad Hold Conference Call

During a call when you move the handset away from your ear the screen lights up. Use the buttons for the features described:

Speaker – Use Handsfree, Speaker mode


Mute – Mute the microphone

Dial Pad – enter DTMF tones

Hold – Place the caller on Hold

Conference – Dial in another party, the first call is put on hold.


MAKE A CALL FROM CONTACTS

- Tap  from the Home Screen. Contacts are displayed in alphabetical order.
- Slide up or down to scroll through your Contacts list.
- Tap to select the Contact then tap to call.



TIP

Tap  to search for a Contact.

MAKE A CALL FROM CALL LOGS

- Unlock the phone and press the Call Key 
- Call logs such as frequently called numbers and Favorites are displayed on screen.
- Scroll and tap the required number to start the call, tap the arrow button to view the call details if required

MAKE A CALL FROM A TEXT MESSAGE

- Unlock the phone and press  for messages. Tap the thread that contains the phone number to call.
- Tap the number then tap  to call
- Press End to end the call.

TURN THE SPEAKER ON/OFF (HANDSFREE)

Tap Speaker during a call. The speakerphone icon  is displayed.

MUTE A CALL

During a call tap Mute to mute your microphone.



The mute icon  is displayed.

MAKE A CONFERENCE CALL

A conference call can be made between yourself and two or more other parties.


- Call the first number.
- While you are connected, tap Add call.
- Call the second number.
- While you are connected to the second number, tap **Merge**
- To add the third party, tap Add call.
- Dial the number, and when connected, tap **Merge**


MAKING AN INTERNATIONAL CALL

- Press the Call Key  on the home screen to open the dialer.
- Hold down the 0 key to enter the '+' symbol for International Dialling
- Enter the full phone number.
- Tap  to make the call.
- Press End to end the call.

ANSWER AN INCOMING CALL





An incoming call presents two options:

Drag  right to answer the call

Drag  left to reject the call.



INSERT A PAUSE OR WAIT SYMBOL INTO A PHONE NUMBER

- Enter the phone number on the Dial pad. The Options button  is displayed in front of the entered numbers:
- Press Options  > Add 2-sec pause to add a Pause
- Press Options  > Add Wait to wait for the next key press.
- Press Options  > Settings to review Call Settings:

DIALLER > OPTIONS > SETTINGS > CALL SETTINGS

Voicemail

Fixed Dialling numbers

Speed dial

Call Barring Settings

DTMF tones

IMS Account

Call forwarding


Additional settings:


> Caller ID

> Call waiting

CONTACTS



Add contacts to your phone and synchronise them with your Google account. Existing SIM or Google contacts are shown by default.

To see your contacts, touch **Home** > . From there, touch the tabs on the top of the screen to quickly switch between All Contacts or Favourites.

- Touch Home >  and touch the All Contacts tab to access your contact list.
- Scroll through the list to view all your contacts.
- Touch a contact to view its details.

TIP: If you have a lot of contacts stored, you'll see a slider when you touch the right side of the screen. To go directly to a letter, press and hold the slider and drag it to a letter.

Adding a New Contact



- Touch Home >  and touch the All Contacts tab
- Touch  to add a new contact.
- Touch the account to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
- Enter the contact name, phone numbers, email addresses, and other information.
- Touch Add new contact when finished.

Import, Export, and Share Contacts


You can import/export contacts from/to your SIM or Storage (microSD card). This is useful when transferring contacts between different devices.

Import your SIM card Contacts to add more features such as dedicated Ringtone, Photos etc.



Import Contacts From the SIM Card

- Touch Home >  > Options  > Import/export
- Select Import from SIM card
- Select an account to save the contacts
- Tap to select individual contacts, or use the check box in the top right to Select All.


Import Contacts From the microSD Card

- Touch Home >  > Options >
- Touch Import/export > Import from storage
- Select an account to save the contacts.
- Supported vcf files (Vcard) will be imported to the chosen destination.


Export Contacts to the SIM Card

- Touch Home >  > Options
- Touch Import/export > Export to SIM card.
- Tap to select individual contacts, or use the box in the top right to Select All and then touch .

Export Contacts to the microSD Card



- Touch Home >  > Options
- Touch Import/export > Export to storage
- The phone will prompt you with the name of the vCard file. Touch OK to create the file in the microSD card.

Share Contacts




- Touch Home >  - touch the All Contacts tab
- Locate and touch the Contact
- Touch Options > Share
- Choose to share via Bluetooth, Email, Gmail, Messaging, etc
- Share Multiple contacts using Import/export, Share visible contacts.

Add a Contact to Favourites



You can add the contacts used frequently to Favourites, so you can find them quickly.

- Touch Home >  and touch the All Contacts ab.
- Touch a contact and then touch  to add to favourites.


Remove a Contact From Favourites

- Touch Home >  > touch the favourites tab .
- Touch a favourite contact and then touch .


Searching for a Contact

- Touch Home > .
- Touch  on the bottom of the screen.
- Input the contact name to search. The contacts matched will be listed.


Edit Contact Details

- Touch Home > .
- Touch a contact to edit and then touch Options > Edit.
- Edit the contact and touch DONE when finished



Set a Ringtone / Picture for a Contact

- Touch Home > .
- Touch a contact to set a ringtone and then touch the Pen icon to Edit
- Press Options > Set Ringtone > Select a ringtone and touch OK
- Touch the Picture icon to take a picture or Choose a photo.

Delete a Contact

- Touch Home > .
- Touch a contact to delete and touch Options > Delete.
- Touch OK to confirm.


To delete several contacts:

- Touch Home > .
- Touch and hold to select a contact, touch more if required
- Touch  then OK to confirm.

MESSAGES



SMS AND MMS MESSAGES

From the Home screen tap the messages icon  to access SMS and MMS messages.


Unread message(s) display the  (SMS) and  (MMS) icons.

Open new messages from the Notifications Panel or the Messaging Screen. Tap the message to read it.

COMPOSING AN SMS

- If the Messages app opens into an existing thread press the Back key to return to the SMS main menu.
- Tap the messages icon > Compose new message.
- Tap the To field to enter the recipient's number. You can also enter letters to display matching Contacts and select a recipient from the list or tap the Contacts icon to see your Contacts list.
- Tap Type message to compose field to type your message.
- Tap the arrow to Send.

COMPOSING AN MMS

- Tap the Messaging icon > Compose new message
- Enter the first letters of a contact to display matching names or tap 123 to enter numbers manually.
- Tap  to see your Contacts list.
- Tap the paperclip to add an attachment
- Choose your attachment type
- Tap the arrow to Send.

USING GROUP MESSAGES

- When you add multiple Contacts to an SMS it is converted into a Group MMS. All recipients can reply individually, or reply to all.
- You can also compose a Group Message from People > Groups > Options.

Adding or removing the **Subject** or **Attachments** will convert the message from SMS to MMS and vice-versa.

Tap Options > **Add subject** to enter the subject if required.

FORWARDING A MESSAGE

Long press the individual message to get further options such as Forward, Delete, View message details etc.

MANAGING MESSAGES AND MESSAGES THREADS

SMS and MMS messages sent and received are grouped into message threads in the Messaging screen. Message threads show you the history of messages from the specific contact. Threads are sorted by received time, with the latest one at the bottom.

REPLY TO A MESSAGE

- Tap the message (or thread) you want to reply to from the Messaging Screen.
- Tap Type to compose and enter the contents of your message.
- Tap Send when done.

ACCESS DRAFT MESSAGES

Draft messages are automatically saved when you exit the message application without having sent the message. If you have any messages in Draft status they are marked in red with **Draft**

DELETE A MESSAGE (THREAD)

- From the Message app overview press and hold on the thread then choose the delete icon.
- Tap OK.
- To delete an individual message (not a thread) tap and hold the message then press Options > Discard.

MESSAGE SETTINGS

Tap Messages > Options > Settings to configure message settings such as Storage settings, SMS Settings, MMS Settings, Notifications settings and Signature settings.

MULTIPLE SMS MESSAGE CHARGING:

A standard SMS message can contain up to 160 characters. If you exceed this length the message will be sent as more than 1 SMS. You will be charged for multiple SMS messages depending on the length.

SET YOUR EMAIL ACCOUNT



Create an Email account to receive Emails on your phone.

- Tap Apps > Email to set up your email account
- Enter your Email address and Password
- Follow the prompts. You may need to refer to your email service provider to complete the settings.
- Set your required options choosing from the Account options screen.

You can also use web based email accounts or download specific email clients for your email provider.

COMPOSE AN EMAIL

- Tap Apps > Email (First time you need to set up your account)
- Tap the New Message icon (Envelope +)
- Enter the recipient's email address in the 'To' field. Tap Options > Add Cc/Bc to add more recipients if required.
- When you enter the address, the matching addresses saved in your Contacts will be displayed. You can tap the recipient from the list.
- Enter the subject and the content of your Email.
- Tap the arrow to Send.

REPLY, REPLY TO ALL, FORWARD AN EMAIL

- Tap Apps > Email to see your Inbox.
- Press and hold the email
- Select from Open, Delete, Forward, Reply all, Reply, Mark as unread.
- Enter the contents / recipients of your Email. Tap Send.

EMAIL SETTINGS

Tap Apps > Email > Options > Accounts > Long press the account > Account settings

ACCOUNT SETTINGS

- Account name: Set your account name.
- Your name: Set the name displayed on the outgoing message.
- Signature: Edit your signature.
- Inbox check frequency: Set the email checking frequency.
- Default account: Send email from this account by default.

NOTIFICATION SETTINGS

- Email notifications: Status bar notification for new Email
- Select ringtone: Incoming Email notification
- Vibrate: Enable vibrate with ringtones when Email arrives.

SERVER SETTINGS

- Incoming settings: Set the incoming server settings.
- Outgoing settings: Set the outgoing server settings.

CONNECT TO A COMPUTER

Transfer audio, video and picture files between your handset and your computer.

PC

Connect your handset using the USB data lead supplied.

First time, select Install driver on the handset notifications window.

On your PC, use Windows Explorer to open the CD Drive: USB_Driver, then double click Setup to install the handset drivers.

Subsequently, select Media Device (MTP) from the notifications window, which will open the handset in Windows Explorer.

MAC

On your MAC, download and install Android File Transfer.

Connect your handset using the USB data lead supplied.

Select Media Device (MTP) from the notifications window, which will open the handset on your MAC.

CONNECT TO THE INTERNET

You can access the internet through the mobile network or via Wi-Fi. When logged on to a Wi-Fi connection, all data will be sent via your Wi-Fi network.

To disable mobile network data slide down the Quick Settings Panel from the top of the handset screen then tap Mobile data to switch Data on or off.

WI-FI


Wi-Fi provides wireless Internet access over distances of up to 50 meters using compatible home or commercial Wi-Fi hotspots.

- Slide down the Quick Settings Panel from the top of the handset screen then tap the Wi-Fi icon to switch on or off and touch Wi-Fi to configure.
- Alternatively tap Home > Options > System settings > Wi-Fi
- Tap the switch to turn Wi-Fi on.
- Tap a Wi-Fi network to join

CONNECT TO A WI-FI NETWORK

- Tap Home > Options > System settings > Wi-Fi
- The available Wi-Fi network names and security settings (open or secured) are displayed.
- Tap a network to connect.
- An open network will automatically connect,
- If you select a secured network you need to enter a password.

CHECK THE WI-FI NETWORK STATUS

- Check the wi-fi icon  in the status bar.
- Tap Home > Options > System settings > Wi-Fi
- Tap the current wireless network to view the network status.
- From Wi-Fi tap Options > Advanced to access further options such as Network notification to switch off the Wi-Fi notification and Keep wi-fi on during sleep, and other options.

SET UP A WI-FI HOTSPOT

A Wi-Fi hotspot shares your network internet connection with other devices nearby. For example, if you are travelling you can connect your laptop wirelessly to your handset to use the internet.

Options > System settings > more > Tethering & portable hotspot > Set up Wi-Fi hotspot.

Scroll down the active window and check Show password to see the password. Tap the fields to change the Network name or password.

USING USB MODEM TETHERING

Use USB tethering to connect a computer to the internet using your device network connection.


Plug your handset to a computer using the USB lead supplied.

Options > System settings > more > Tethering & portable hotspot > USB tethering. First time select Install drivers then subsequently select Connect to PC software to enable tethering.

USING THE BROWSER

Use the Google Search bar on the Home Screen or the Chrome app.




- Tap the Google Search box on the Home Screen.
- Enter your search request using the keypad.
- Press the arrow when done.
- Tap the microphone icon  to use speech recognition. Speak your request clearly into the handset microphone.

The first time you open Chrome you are guided through how to use by on screen instructions and demos. Enter any search directly in the top bar. Press Options for new Tabs, Incognito browsing, Bookmarks and other Settings options.

BLUETOOTH

Bluetooth enabled devices can exchange information within a distance of about 10 meters without any physical connection. The Bluetooth devices must be paired to share information.

TURNING BLUETOOTH ON OR OFF

- Switch Bluetooth on or off from the quick settings panel or
- Tap Options > System settings > Bluetooth
- Tap the switch to turn Bluetooth on.
- The  icon is displayed in the status bar.
- Tap the switch to turn Bluetooth Off when required.

MAKE YOUR DEVICE VISIBLE TO OTHER DEVICES

- Tap Options > System settings> Bluetooth.
- Tap the switch to turn Bluetooth on.
- Your device is visible to other devices while Bluetooth settings is open.

CHANGE YOUR DEVICE NAME

- Tap Options > System settings > Bluetooth
- Select the Bluetooth check box to turn on.
- Tap Options > Rename this device
- Enter the name and tap OK.

 
PAIR WITH ANOTHER BLUETOOTH DEVICE

- Both devices must have Bluetooth turned on.
- Tap Options > System settings > Bluetooth
- Tap Search for devices to display available devices in your vicinity.
- Tap the device to pair with and enter your PIN if required. The same PIN should be used on both devices.

CAMERA

APPS > CAMERA, OR USE THE SHORTCUT ON THE RIGHT HOMESCREEN

Flash mode Simple/Expert Mode

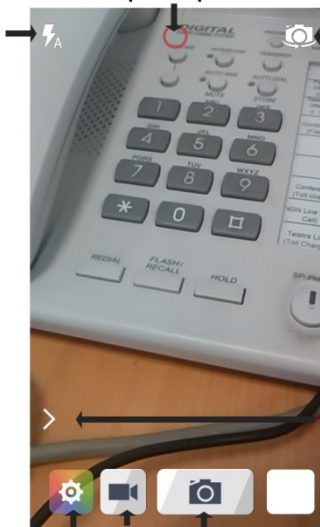

Front/Rear
Camera

Swipe for colour
effects
(eg Sepia / B&W)

Review pictures

 
Settings Video
mode Camera
shutter

- Line up your shot and tap the camera icon button to take the picture.
- Tap the thumbnail in the bottom corner to review the picture.
 - Tap the Settings button for camera settings:


Camera Modes



Camera Settings

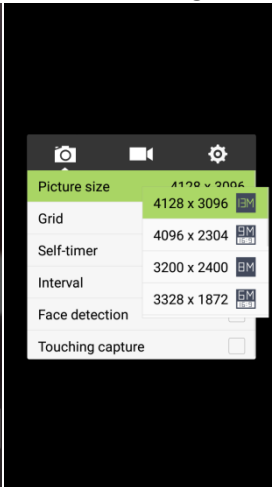

Video Settings

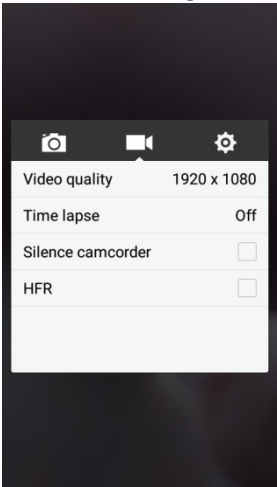 

APPS > CAMERA > VIDEO RECORDER

- Tap the Video icon to start shooting.
- Tap pause or stop
- Tap the icon in the right corner to view the last video clip.
- Tap Settings > Settings to check the video settings.

FM RADIO

To use the FM radio you must insert the headphones as the antenna.

OPEN THE FM RADIO

- Insert the headphones
- Tap Home > Apps > FM Radio
- Touch the arrow controls to scan for available channels
- Press the plus sign to add to favourites
- Press Options to view your all channels list where you can long press on the channel to rename or delete it.
- Press the Power symbol to close the radio, otherwise it will continue to run in the background.

MUSIC

You need to have audio files stored on your memory card. Use downloads, Bluetooth or PC Connectivity to save files onto your memory card.

- Tap Home > Apps > Music
- Select from Songs, Playlists, Folders, Albums, Artists or Genre
- To play continuous tracks, select Songs > Options > Play All
- To play an album select Album then click the first track

CREATING PLAYLISTS

- Select a music file to add to a new playlist.
- Tap and hold on the file until a shortcut menu pops up.
- Tap Add to playlist.
- Tap New.
- Enter the playlist name and tap Save.
- The playlist is created and the selected file is added to the playlist.

MANAGING YOUR PLAYLISTS

- Tap Playlist from the Music Screen to view all playlists.
- Hold on the playlist you want to play or edit until a shortcut menu pops up.
- Tap Play to play the playlist.
- Tap Delete to delete the playlist.
- Tap Rename to edit the playlist name.

SETTING A SONG AS RINGTONE

- Open the folder where the song you want to set as ringtone is.
- Hold on the song until a shortcut menu pops up.
- Select Use as ringtone.

TIPS

You can also set a song as a ringtone when you are playing it by tapping Options > Use as ringtone.

PLAY VIDEOS

Use Gallery or Video Player to view videos.

GALLERY

Use Gallery to view pictures and play back videos. You can also set pictures as wallpaper, contact icons and share them with your friends.

SOUND RECORDER

Sound Recorder enables you to record voice memos that you can also set as a ringtone.

Tap Home > Apps > Sound Recorder.

GOOGLE APPLICATIONS

SIGN IN OR CREATE YOUR GOOGLE ACCOUNT

Sign in to your Google Account to synchronise Gmail, Calendar, and Contacts between your phone and the web.

- Tap a Google application, such as Gmail or Play Store.
- Follow the instructions in the wizard and tap Next.
- Tap Sign in if you have a Google account.
Enter your user name and password, and then tap Sign in.
- Tap Create if you do not have a Google account.

USING GMAIL



Gmail is Google's web-based email service. Gmail is configured when you sign in to your Google account. Depending on your synchronisation settings, Gmail on your phone is automatically synchronised with your Gmail account on the web.

Tap Apps > Gmail to open.

CREATE AND SEND AN EMAIL

- In the Inbox, press Menu and then tap Compose.
- Enter email address in the To field. If you are sending an email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
- Enter the email subject, and then compose your email.
- After composing your email, tap Send.

USING GOOGLE CALENDAR

Tap Home > Apps > Calendar to use Google Calendar. You can use the calendar to schedule appointments, meetings and other events. Your appointments are displayed on the screen as they are scheduled. All appointments are synchronised to your Google account, which enables you to share your schedule, get your entire calendar on the go, and receive Email reminders for your upcoming events.

SECURITY

SET A SCREEN UNLOCK PATTERN, PIN, OR PASSWORD

Protect your phone from unauthorised use by creating a personal pattern, PIN or password. Use a pattern, PIN or password you can easily remember.

- Tap Home > Options > System settings > Security > Screen lock
- Choose from Swipe, Pattern, PIN or Password.
- Example for Pattern:
- Draw a pattern of your choice, tap Continue
- Draw the pattern again and tap Confirm.
- We recommend you register a Google account before setting your unlock pattern, PIN or Password. After five incorrect entries press Forgot Pattern to enter your Google account password to reset the screen lock.

UNLOCK THE SCREEN WITH A PATTERN

- Press Power Key.
- Draw your pattern to unlock the screen. If you make a mistake you can try again up to five times.

If you forget the unlock pattern then after five attempts you can enter your Google account details to unlock your device.

SET A SIM CARD PIN LOCK

- Set a PIN code on your SIM card to prevent others from using your account.
- The initial PIN code is provided by your service operator.
- Tap Options > System settings > Security > Set up SIM card lock.
- Select Lock SIM card. Enter the PIN and tap OK.

CHANGE SIM PIN

Before changing the SIM PIN, you need to enable it.

UPDATING YOUR DEVICE

Your phone can download and install Software updates.

Apps > System updates

The software update service checks an online server to see if any updates are available for your phone. If an update is available you can choose to download and install the update.

Downloading via Wi-Fi is highly recommended. Data usage charges will apply if downloading via mobile networks. International roaming data charges will apply for customers downloading the upgrade on a mobile network whilst travelling outside of Australia.

A firmware update will require a restart of your device.

EXTERNAL ANTENNA PORT

Your phone provides an external RF antenna port for connecting to suitable patch leads and antennas. Only used approved ZTE patch leads as other generic leads can damage your device. The RF port can be damaged by rough use, excessive force, bending or twisting on the connector so always take care to insert and remove the connector correctly and gently.

The phone's internal antenna connects to the external RF port. Damage to the RF port can result in the internal antenna being disconnected which will render your device unusable. Physical damage to the external RF port is not covered under warranty.

HEADPHONE AND USB CHARGING PORT

The headphone and the USB charging port are both internally waterproof. If the device is dropped in water it is possible for water to remain in the socket which may affect your device. In the event of device submersion, blow or tap any liquid out of the ports and leave in a warm place to dry for a few hours.

TECHNICAL SPECIFICATIONS:

Size and Weight	142.9 × 71.9 × 12 mm.	163g with battery
Networks	4G LTE 700, 1800, 2600. 3G UMTS 850, 2100 MHz. 2G 900, 1800, 1900 MHz.	150M Down / 50M Up HSPA+ 42Mbps data
Display	TFT 4.7",HD 720 x 1280, Capacitive touch. Corning Gorilla glass 3.	
Camera	13.0MP Rear, 5.0MP Front	
CPU & Memory	Quad core Snapdragon 1.2GHz CPU with 2GB RAM. 16GB ROM with approx 11GB storage. Expandable external storage microSD(HC) [™] up to 32GB	
IP RATING	IP67 waterproof to 1m depth for 30 minutes.	
Operating system	Android 5.0.2	
Battery	Capacity	2500mAh Li-ion non user replaceable
	Charge Time	3-4 hrs with AC Charger
	Standby time	390 hours (subject to network)

Voice talk time	9 hours (subject to network)		
Connectivity	Bluetooth 4	Wi-fi 802.11b/g/n	3.5mm jack NAHJ
External RF	External RF antenna port		

TROUBLESHOOTING

PLEASE CHECK THE MANUAL THOROUGHLY BEFORE CONTACTING YOUR SERVICE PROVIDER.

Symptom	Solution
How do I check the software version?	Menu > Settings > About phone > Build number
How do I reset to factory defaults?	Menu > Settings > Backup & reset > Factory data reset
How do I check the SMS service centre number?	Messages > Options > Settings
How do I configure the MMS Settings?	Messages > Options > Settings

Symptom	Solution
How do I configure Email settings?	Apps > Email, or Menu > Settings > Accounts
How do I copy Contacts to or from my SIM card?	Contacts > Options > Import/Export > Follow the directions on screen
How do I select Network mode?	Menu > Settings > More > Mobile Networks > Preferred network type
How do I manually select a carrier?	Menu > Settings > More > Mobile Networks > Network operators > Search networks
How do I enable USB tethering?	Menu > Settings > More > Tethering and Portable hotspot > USB tethering. (Connect as CDROM to install drivers)
How do I configure APN's	Menu > Settings > More > Mobile Networks > Access Point Names > Select + to add new APN
How do I enable Flight Mode?	Long press on the power key > Flight Mode

Symptom	Solution
How do I clear my Browser?	Chrome > Options > History> Clear Browsing Data
How do I check Call forwarding etc	Calls > Options > Settings > Call Settings > Call forwarding
How do I check for Software Updates?	Apps > System updates
How do I get more technical support?	Visit zte.com.au or call 1300 789 475 during office house AEST.
How do I change the Ringtone?	Menu > Settings > Sound & notifications > Phone ringtone
The battery discharges quickly	Possible network coverage issue. Check the signal level. With only 1 or 2 bars, the battery has to work harder to maintain network contact. Limit multi-media to save power. The battery may be worn out.
The handset turns on by itself.	An alarm or calendar event switches the handset on automatically.

Symptom	Solution
No incoming ring or alarm tone	Hold the power key to check the phone is not in silent mode. Check the ringtone and ring volume settings.
The handset switches off after charging.	The handset is charging in the off state. Press and hold the Red key to switch the handset ON.
I cannot charge the phone	Confirm the charger is properly inserted. Remove the battery, clean the contacts and check it is inserted correctly. The battery may be worn out. Tip: Charge the phone using the supplied USB cable.
I cannot connect to other Bluetooth devices	Turn Bluetooth on. Set visibility to Show. Make sure the pass-code is correct. Possible compatibility issues. Not all functionality is supported between different Bluetooth devices and standards.

Symptom	Solution
My data usage is excessive	Check Settings > Data usage to determine which apps are consuming your data. Google+ can use large amounts of backup data. Review under Google+ > Options > Settings

ERROR MESSAGES

Message	Solution
No SIM Card	Check a valid SIM card is inserted. See the <i>Getting Started</i> section
Enter PIN code	You have set a SIM PIN. Please enter your SIM PIN code.
Enter PUK code	Contact your Service Provider to get the PUK code
Enter Unlock Code	Contact your Service Provider to obtain the network unlocking code.

WARRANTY INFORMATION

The warranty does not apply to defects or errors caused by:

- (a) Normal wear and tear, mishandling, physical damage, improper installation.
- (b) Water, exposure to solvents or any other liquid damage while the port covers are open.
- (c) Any unauthorised disassembly, repair or modification.
- (d) Power surges, lightning, fire, flood or other natural events.
- (e) Use of the product with unauthorised third party products such as generic chargers.
- (f) Any other cause beyond the range of normal usage for products.
- (g) Physical damage to the antenna port, SIM slot or screen caused by improper use.

The End User shall have no right to reject, return, or receive a refund for any product under the above-mentioned situations. The End User's statutory rights are not excluded by these terms and conditions.

Note: Consult the warranty card for full information.

SAFETY

GENERAL STATEMENT ON RF ENERGY

The phone is a low-power radio transmitter and receiver. When switched on it intermittently transmits radio frequency (RF) energy (radio waves). The transmit power level is optimised for best performance and automatically reduces when there is good quality reception. Maximum power is only used at the edge of network coverage so under most circumstances the power output is very low. Under poor network conditions the phone transmits at a higher power, may get hot and have a shorter battery life.

SPECIFIC ABSORPTION RATE (SAR)

The phone is designed not to exceed the limits for exposure to radio waves recommended by the ICNIRP. The limits include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines measure the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2W/Kg. This device has been tested and approved to be lower than the maximum allowed SAR value. The worst case SAR value for this device is 1.33W/Kg in the Body Position.

PRODUCT SAFETY INFORMATION



Please read all instructions before use



This device may produce bright or flashing lights



Do not use while driving



Do not dispose of in fire



Do not use while re-fuelling



Avoid contact with magnetic media



Small parts may be a choking hazard



Avoid Extreme Temperatures



This device may produce loud sounds



Avoid any contact with liquid, keep it dry



Keep away from pacemakers and other personal medical devices



Only use approved accessories



Obey warning signs in hospitals
and medical facilities



Do not attempt to
disassemble



Switch off when flying



Do not rely on this device
for emergency
communications



Switch off in explosive
environments

microSD™ is a trademark of SD Card Association