 
 


M1250

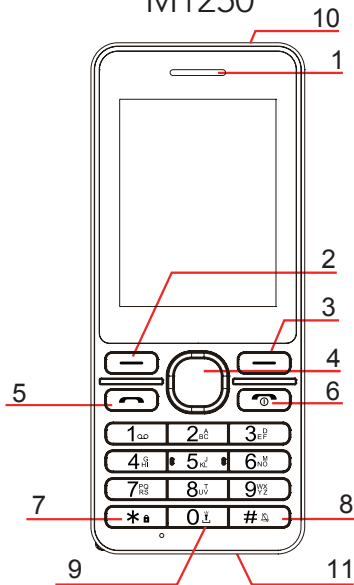 


AEG


Insert SIM2 Card first

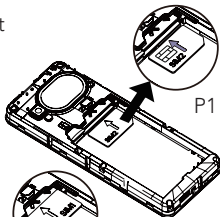


Insert SIM1 Card

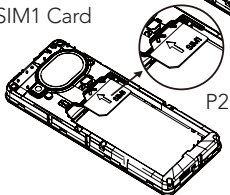

 To remove SIM2,
pull back this
metal plate out

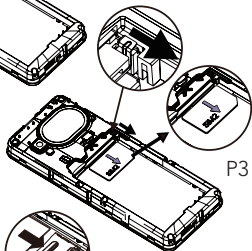

Insert Micro-SD Card

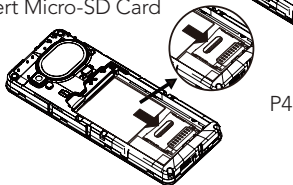 

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the amount of paper used and therefore save trees to be cut for making this paper. Thank you for supporting us to protect our environment. You can find the full user guide on **www.aegtelephones.eu**.

2 SAFETY AND PRECAUTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Switch off the phone in the vicinity of chemical plants, gas stations and other locations containing explosive objects.
2. When driving, if you have to make or receive a call, please use a hands free calling device (to be purchased separately) to improve safety. Please park the car on the roadside for communication except in case of emergency.
3. Switch off the phone when boarding an airplane and do not switch the phone on

during the flight, unless the airline specifically allow it.

4. Be careful when using the mobile phone in the vicinity of devices such as pacemakers, hearing aids and other electro-medical equipment, which may be affected by mobile phones.
5. Never attempt to disassemble the phone by yourself.
6. Do not recharge the phone without battery being installed.
7. Charge the phone in well-ventilated environment and keep away from inflammable and highly explosive elements.
8. Keep magnetic discs or credit cards away from the phone to avoid demagnetisation.
9. Keep the phone dry. If soaking occurs, take the battery out and contact the supplier.
10. Avoid using the phone in extreme temperatures and never leave it exposed to direct sunlight, high humidity or a dusty environment.
11. Do not use liquid or anything wet with strong detergents to clean the handset.

2.1 Medical units

The use of equipment that transmits radio signals, e.g. mobile phones, can interfere with insufficiently protected medical apparatus. Consult a doctor or the manufacturer of the apparatus to determine if it has adequate

protection against external radio signals, or if you have any questions. Wherever there are notices to forbid use of mobile phones, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

2.2 Pacemaker

Pacemaker manufacturers recommend a distance of at least 15 cm. between a mobile phone and a pacemaker to avoid the risk of interference with the pacemaker. These recommendations are in accordance with independent research and recommendations from Wireless Technology Research. People with pacemakers should:

- not carry the unit in a breast pocket
- hold the unit against the ear on the opposite side from the pacemaker to reduce the risk of interference

If you suspect that there is a risk of interference, turn off the unit and move it further away.

2.3 Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion and follow all signs and instructions. An explosion risk exists in the places that include areas where you are normally requested to turn off your car engine. Within such an area, sparks can cause explosions or fire which can lead to personal injuries or even death.

Turn off the unit at filling stations i.e. near petrol pumps and garages. Follow the restrictions that are in force on the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often, but not always, clearly marked. This also applies to below decks on ships: the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

2.4 Emergency calls

Important!

Mobile phones use radio signals and the mobile phone network. This means that connection in all circumstances cannot be guaranteed.



Important Safety Instructions

To prevent possible hearing damage, do not listen at high volume levels for long periods.

3 BOX CONTENT

In the box you will find:

- 1 mobile handset
- 1 earpiece

- 1 main power adapter
- 1 handset back cover
- 1 rechargeable battery pack
- 1 quick start guide

Keep the packing materials in a safe place in case you later need to transport the device.

IMPORTANT

Your handset is not supplied with a SIM card, you will need to insert a SIM card for the handset to work correctly.

4 SET HANDSET LANGUAGE

- Press **Menu** (☰) then (⬆)/ (⬇)/ (⬅)/ (➡) to select **"Setting"**, and then press **OK**.
- Press **OK** to select **"Phone settings"**.
- Press (⬆)/ (⬇) to select **"Language settings"**, then press **OK**.
- Press (⬆)/ (⬇) for **"Display language"** or **"Writing language"**, then press **Select**.
- Press (⬆)/ (⬇) to select your language, and press **OK** to confirm.
- Press **Back** to return to the **Phone settings** menu.

5 GETTING TO KNOW YOUR PHONE






 







5.1 Keys and parts (see P1)

#		Meaning
1	Earpiece	
2	Left Soft Key	Perform function displayed on screen above the key.
3	Right Soft Key	Perform function displayed on screen above the key.
4	Up/Down/Left/Right and Enter Key	<ul style="list-style-type: none"> • Press to adjust receiving volume during a call. • Press to step through names, phone numbers, menus and settings. • Press centre key to enter or confirm a selection.
5	Talk key	<ul style="list-style-type: none"> • Press to answer a phone call. • Press to enter the Call logs.
6	End Call / Power On-Off key	<ul style="list-style-type: none"> • Press to end or reject a call. • Press to return to the Home Screen / Standby mode. • Press and hold to switch the phone on or off.

7	* Key	<ul style="list-style-type: none"> • When dialling : repeat press to input "*" / "+" / "P" / "W". • In edit mode : press to input symbols.
8	# Key	<ul style="list-style-type: none"> • In Standby, press and hold to switch user profiles. • In edit mode : press to change input method.
9	Torch key	<ul style="list-style-type: none"> • Press and hold "0" to turn on/off the torch. <p>Warning: The torch uses a high-brightness LED - do not shine directly into eyes or view with optical instruments.</p>
10	Headset socket	<ul style="list-style-type: none"> • For headset listening/call. Requires 3.5mm, 4-pole plug.
11	Micro-USB socket	<ul style="list-style-type: none"> • For charging handset batteries and connection to computer for data transfer.

5.2 Display icons and symbols

The default standby screen shows the following information:

	Meaning
	Meeting sound profile on
	Outdoor sound profile on
	Indoor sound profile on
	New SMS Indicates you have new unread text .
	Missed call
	Radio link (for SIM1 and SIM2) On with signal strength when linked.
	Battery charge level Internal segments cycle during charging.
	Alarm On if alarm is set.
	Silent sound profile on.
	If one or both SIM card not inserted.
	A headset is plugged in.
	Bluetooth is turned on.
	SD card is installed.

6 INSTALLATION AND SETUP

The phone requires a valid 2G type SIM card to work correctly, and can operate with two SIM cards, if required.

Also, a micro-SD card (up to 16GB) can be installed in the handset to allow storage of photos, recordings or other data.

6.1 Install the SIM/SD card and battery

- Switch off the phone, disconnect the power adaptor and remove the battery.
- Remove the backcover by prising open from the bottom right corner.
- Remove the battery by lifting the top in the middle.
- Carefully slide one or both SIM cards into their holders, as shown P1/P2/P3 on page 2, and slide a Micro-SD card, if required, into its holder as shown on page 2.
- Replace the battery by aligning the gold connectors on the battery with those on the phone, and push the battery down until it clicks into place.
- Replace the back cover by placing it flat on the back of the handset and pushing down until it clicks into place.

6.2 Charge the battery

Warning:

Use only supplied/approved battery and charger. Using others may be dangerous and will invalidate approvals or warranty. A battery must be fitted. Do not charge with the back cover removed.



- Connect the charger lead firmly into the micro-USB socket in the bottom edge of the handset.
- Plug the mains power adapter into a mains socket. If the handset is turned on, "**Charger connect**" displays for a few seconds, and the battery symbol bars scroll to indicate that charging has started. If the handset is turned off, a battery symbol appears briefly with the segments cycling to indicate charging has started.
- Charging the battery may take up to 3 hours.
- If "**Charger connect**" does not display, disconnect and retry.
If charging still fails, contact the helpline.
- The battery is fully charged when the bars within the battery symbol are continuously on. Disconnect the charger from the phone and the mains socket. "**Charger removed**" displays briefly to indicate the charging has stopped.

Note:

The phone can also charge from a computer USB port, and transfer files if **USB mass storage** is selected.

6.3 Switching on and off

To switch the phone on and off:

- To switch on, press  and hold until the display turns on.
- To switch off, press  and hold until the display turns off.

Warning:

Do not switch on when mobile phone use is prohibited or if it may cause interference or danger.

6.4 To unlock handset keypad

- To unlock, press **Unlock** then " * ".
- To lock manually, press **Menu** then " * ", or if **Setting>Security>End key locks keypad** is set, just press the **End Call** key.




Note:

When the keypad is locked, you can dial the Emergency Services number 112 or 999, and operate the phone as usual during a call.







7 MAKING AND ANSWERING CALLS

7.1 To make a call

Ensure the phone is switched on and in service.

-  Key in the telephone number including area code. (To add prefix “+” press the “*” key twice quickly).
- Press  to dial the number on the display.
- To end calls press .



7.2 Last number redial

- In idle mode, press  to see the **Dialled calls log** – a list of the last 10 numbers dialled.
- Press  /  for **Missed**, **Received** or **Rejected** call logs.
- Press  /  to go to the number you want.
- Press  to dial the number.

7.3 To answer a call

- When the phone rings, press  to answer it.

7.4 Earpiece volume

- During a call, press  /  to alter the volume. The volume level displays and stays for future calls.




8 USING THE PHONEBOOK & SPEED DIAL KEYS

You can store names and phone numbers in the Internal phone book (up to 300) and in the SIM phone book (SIM dependant).



8.1 To access the phonebook

- In idle mode, press **Names** (Right Soft Key) **OR**
- Press **Menu**, select **Phonebook**, and **OK**.

Note:

- >  Indicates entries in the SIM1 phone book.
- >  Indicates entries in the SIM2 phone book.
- >  Indicates entries in the Internal phone book.

8.2 To add a new phonebook entry

- In phonebook, press **Options** then **OK** to select **New**.
- Select store **To Phone** or **To SIM1** or **SIM2** from the menu list, and press **OK**.
- Press **Edit** to modify or add an **Icon**, and / then **Edit** to add a **Name**, **Mobile**, **Classification** and **Ringtone**. When complete press **Save** to store the entry.

Note:

When writing the name, use **#** to switch cases, between title case (**Abc**), upper case (**ABC**), lower case (**abc**) or Numerals (**123**), or select a different writing language.

8.3 To call a stored number

- Press **Names** (Right Soft Key) OR
- Press **Menu**, select **Phonebook**, and **OK** once.
- Press \uparrow/\downarrow to find the name you want, or key the first letter of the name then \uparrow/\downarrow .
- Press \leftarrow to dial the number.

8.4 To edit (change) a phonebook entry

- Press **Names** (Right Soft Key), then \uparrow/\downarrow to find the entry you want to change.
- Press **Enter** key, select the name or number to edit.
- Press **Options** and then **Done** to confirm the name or numbers.
- Press **Options** then **Save** the change(s).


8.5 To delete a phonebook entry

- Press **Names** (Right Soft Key), then \uparrow/\downarrow to find the entry you want to change.
- Press **Options** then \uparrow/\downarrow to show **Delete**.
- Press **Enter** key, then **OK** to confirm the **Delete**.







9 CALL LOGS

- If a call is not answered, **1 missed call(s)**.

9.1 To view the call log entries

- From the home screen/idle mode, press  to show the **All Calls** – a combined list of received calls, dialled calls and missed calls.

OR

- View via the **Menu** and **Calls**, where you can view separate lists for **Missed calls**, **Dialled calls**, **Received calls**, or **Delete call logs**.
- Press **Menu**, then / to show **Calls**, and then press **OK** to open the call logs menu.
- Press / to select the calls log you wish to view, and press **OK** to show the selected list.
- When in a list, press / to find the call entry you want.

10 SMS TEXT MESSAGING



- Send and receive text messages. These are saved in the phone memory (up to 100) or on the SIM card (SIM dependant, but a maximum of 100). Received SMS are stored in the **Inbox**.

10.1 To access the Message menu

- Press **Menu** to show **Message**.
- Press **OK** to display the options:

Write message	to write a new message.
Inbox	to go to your inbox to read received texts.
Outbox	to go to your outbox (includes saved drafts).
Drafts	to view messages in draft.
Sent box	to view the sent messages.
Templates	Select templates

10.2 To write and send a text message

- Press **Menu** then  /  to show Message.
- Press **OK** to show **Write message**
- Write your message using the digit /letter keys.

Note:

- When writing text, use # to switch cases, to Upper case (**ABC**), lower case (**abc**) or Numerals (**123**).

Note:

Use navigation key to move the cursor, **Clear** to delete letters and the * key for symbols or punctuation, or repeated pressing of the 1 key

- To send, press **Send** key .

10.3 To read your messages

- Press **Menu** then \uparrow/\downarrow to show **Messaging** and **OK** to select.
- Press \downarrow to choose **Inbox** and **OK** to select it.
- Press \uparrow/\downarrow to step through the messages
- Press **Options** to show a list of options: **Delete, Reply, Forward, Call, Move, Copy, Add sender to, Details.**

11 CAMERA

- Press **Menu** to select Camera and open the camera.

11.1 Capture photos

- Aim the object and press OK, photo is capture.
- Press left soft key to access Options. More options you can set.
- **Camera mode:** You can select camera mode or video recorder mode.

- **Flashlight:** You can select flashlight off activated or auto.
- **Size select:** You can select 960x1280, 480x640, 240x320, brightness.
- **Contast:** You can select adjust contast.
- **Exposure bias:** You can select adjust exposure.
- **Shots :** You can select disable ,3 shots,6 shots
- **WB:** You can select auto, incandescence, fluorescent, sunny day, cloud, color .
- **Effect:** You can select normal, B&W, bule.

11.2 Image viewer You can viewer image.

- **Select Menu -> Camera -> options --> Image viewer,** you can view images, press Options:
- **Set as wallpaper :** You can use them set as wallpaper .
- **Set as contact icon:** You can use them set as contact icon
- **Delete:** You can delete the photo.
- **Share:** You can share the bluettooth.
- **Mark:** You can mark the photo.
- **Rename:** You can rename the photo
- **Silde play:** You can silde play the photo.
- **Deatails:** You can deatails the photo.

11.3 Setting You can set:

- **Quality** : You can select Low Normal ,Advanced.
- **Banding**: You can select banding 50HZ or 60HZ.
- **Shutter sound**: You can shutter sound Off or Activate
- **Auto save**: You can auto save Off or Activate.
- **Storage**: You can select the storage Memory Card.

12 APPLICATIONS

- Press **Menu** to enter Applications and find the applications you want :
- **Bluetooth**:
- **Power**: To power Activated/close the Bluetooth.
- **Bluetooth visibility**: Set the Bluetooth. Device is visible by other Bluetooth devices.
- **Paired device**: To find available BT devices and open your device to pair
- **Device name**: Display the Bluetooth name.
- **Bluetooth file storage**: To select Memory card
- **Help**: You can view the bluetooth specification

Note:

The connection can be subject to interference from obstructions such as walls or from other electronic devices.

- **Alarm:** You can set 5 alarm.

12.1 In the edit alarm interface, you can set On or Off, Time , Repeat, Snooze and Alert type.

- **Word clock:** You can select word clock.
- **Torch :** You can activated /off torch
- **Calculator:** You can calculator
- Press up and down key to enter "+", "-", "x" and "/".
- "#"key: To enter "-".
- OK key: To enter "=".
- Right soft key: To clear the input character one by one.
- **Unit Conversion:** You can unit conversion
- **Currency Converter:** You can currency converter.
- **Stopwatch:** You can stopwatch
- **Clock:** You can clock
- **Folder Lock:** You can folder lock
- **SIM toolkit:** You can toolkit sim.

- **Image viewer:** You can Image viewer
- **Sound recorder:** You can sound recorder.

13 SETTINGS

- Press Menu to enter setting and press to find the settings you want

13.1 Phone settings :

- Press Menu to enter setting list:
- Time & date
- **Set time:** You can set time..
- **Set Date:** You can set date ..
- **Update time settings:** You can select Auto update time, Manual Update time, Help.
- **Time Format:** You can select 12-hour or 24-hour. Pressing up and down to select.
- **Date Format:** You can select Date Format.
- **Language settings:** You can select display language and input language.
- **Dedicated keys:** You can select dedicated keys.
- **Auto power on/off:** You can settings auto power on/off .
- **Power management:** You can power management.

- **Restore factory settings:** You can restore factory setting use password number: 0000

13.2 Display

You can set Wallpaper, Idle display settings, Contrast, Backlight, Keypad backlight.

- **Wallpaper:** You can set your phone to display a background picture, when the phone is in idle mode.
- **Idle display settings:** You can idle display settings
- **Contrast:** You can setting contrast
- **Backlight:** You can setting backlight.
- **Keypad backlight:** You can setting keypad backlight.

13.3 Security

- **PIN lock:**

You can set SIM lock to on or off need enter PIN code.

- **Modify PIN2:** You can Auto keypad lock.
- **End key locks keypad:** You can end key locks keypad.
- **Mobile tracker:** You can set mobile tracker.
- **Fixed dial number:** You can select fixed dial number.

- **Block list:** You can view and edit block list
- **Whitelist:** You can view and edit whitelist

13.4 Call settings

- **Dual SIM:** you can select Standby mode, Reply by original SIM, Set SIM name.

- **Call divert:**

You can set divert Call forwarding unconditional, Call forwarding on busy, Call forwarding on no reply, Divert If unreachable, Cancel All Diverts.

- **Call waiting**

To set the network to notify you of a new incoming call while you have a call in progress.

To request the network to activate call waiting, select Activate.

To request the network to deactivate call waiting, select Off.

To check whether the function is active, select Query Status.

- **Call barring**

Call barring allows you to restrict the calls that you make and receive with your phone. You can set All outgoing calls, All incoming calls, Incoming calls when roaming, ISD calling, Dial when INTL roaming, Cancel all barring, change password.

- **Hide ID:** You can settings Hide ID, Display own ID, Display ID by network.
- **Others:** You can settings Call time minute reminder, Auto redial, Vibration when connected, Reply SMS after reject, Auto record voice call, Auto quick end.

13.5 Connections

- Network settings. You can select Auto select , Manual select.

14 INTERNET

- Press Menu to enter Internet
- **Book marks:** To display the bookmark, you can select Goto, Edit, Send, Delete, Delete All, Add Bookmark.
- **History:** to view history. list
- **Offline pages:** to view offline pages list.
- **Homepage:** You can access the homepage.
- **Input URL:** To enter address of webpage.

15 FILE MANAGER

15.1 Can insert SD card function. Press Menu to File Manager and press the left soft key "Option" you can open list :

- **New folder:** You can create new folder.
- **Delete:** You can delete folder
- **Details:** You can see the folder details.
- **Edit:** You can edit folder Rename, Copy or Move.
- **Search:** You can search folder .
- **Sort:** You can sort folder
- **Mark:** You can mark folder.
- **Memory status:** You can view Memory card capacity, Format Memory card or Rename Memory card .

16 CALENDAR

Press Menu to Calendar and press options list :

- **Add new schedule:** You can add new schedule:.
- **View schedules:** You can view tasks list of today.
- **All schedules:** You can view all tasks list of all days.
- **Clear today's tasks:** You can clear today's tasks:

- **Clear all:** You can clear all event
- **Go to date:** Input date today
- **Weekly:** You can switch go to monthly view and go to weekly view.
- **Daily:** You can daily

17 USER PROFILE

Profiles allow quick changes to your M1250 phone sounds, and to customise them to suit your situation.

There are 6 preset profiles – General, Silent, Meeting, Indoor, Outdoor, Earphone .

You can set the profile mode Rename, Ring setting, Adjust volume, Ring type, Other alert rings. The Earphone mode can not be activated until you plug into headset.

18 FM RADIO

- Press Menu to FM radio interface :
- Press ok key to turn FM on/off.
- Press left key to adjust the frequency..
- Press the right key to adjust the frequency.
- Press the side key to adjust the volume.
- Press the left key for Options list:

18.1 Auto search and save :

To start automatic tuning the radio station and save them.

- Channel List: You can edit channel name and frequency.
- Save :You can save the channel.
- Manual search : You can input the frequency of the radio station.
- Open speaker: You can open / close speaker when you plug into headset.
- Background play: You can play the frequency in background.
- Schedule FM Record : You can record the schedule.
- Record file list: You can view the record file list.

19 GAME

Press Menu to Game interface and select game list:

- Sokoban
- Snake
- Tetris

In the game interface press left key "OK" select list:

- New Game: To play new game.
- Continue: To continue the current game.

- **Select level:** You can select game level.
Help: Display the introduction about how to play the game. If the game has not end, you can select Resume to continue the game.

20 GUARANTEE AND SERVICE

The phone is under warranty for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales receipt; this is your proof of guarantee.

20.1 While the unit is under Guarantee

- Pack up all parts of your phone system, using the original packaging.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

20.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via **www.aegtelephones.eu**

Standard	GSM Mobile
Frequency Band	GSM 850/900/1800/1900
System	Phase 2+
Operating Time (with fully charged battery)	Standby: > 200 hours Talking: > 4 hours
Charging Time	< 3 hours
Temperature range	Operating: 0°C to 40°C Storage: -20°C to 60°C
Electrical power Handset battery	BL-25C Li-ion 3.7V DC, 1000mAh Battery Pack
Travel charger	UK adaptor: CSGN-CSC01-500-L Input 100-240V AC 50/60Hz MAX 0.15A Output 5.0V DC:500mA
SAR value	Maximum Head: 0.59W/Kg Body: 0.902W/Kg

* Variation in operation times may occur depending on SIM card, network, and usage settings, usage style and environments.

22 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on:
www.aegtelephones.eu



23 DISPOSAL OF THE DEVICE

(ENVIRONMENT)



At the end of the product lifecycle, you should not throw this product into the normal household garbage but take it to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user guide and/or box indicates this. Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

