

**General
Edition
User Manual**

Introduction

NKTEL Limited would like to thank you for purchasing this mobile phone.

Dual SIM card

Your phone support dual sim cards and these two sim cards be on line at the same time.

Power media applications

- Music player & FM Radio
- Video player & recorder
- Webcam

Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

FM radio

Your phone is equipped with a radio with RDS functionality. You can use the application as a traditional radio with saved channels. You can listen to it while running other applications.

Contents

1 General Information	6
1.1 Introduction.....	6
1.2 Safety	7
1.3 Warning and Notice.....	7
1.3.1 Basic Notices	7
1.3.2 Notices of Your Phone.....	8
1.3.3 Notices of Battery Use.....	9
1.3.4 Notices of Charger Use.....	10
1.3.5 Care and Maintenance.....	11
1.3.6 General Notices	11
2 Getting Started.....	14
2.1 The Display Screen.....	14
2.2 Keys	14
2.3 Battery	15
2.5 Network Connections.....	16
2.5.1 SIM Card.....	16
2.5.2 Insert and Remove the SIM Card	17
2.5.3 Turn Your Phone On or Off.....	17
2.5.4 Phone unlock.....	17
2.5.5 Unlock the SIM Card	18
2.5.6 Connect to the Network.....	18
2.5.7 Make Calls.....	18
2.5.8 Make Domestic Calls	19
2.5.9 Dial Extension.....	19
2.5.10 International telephone Calls.....	19
2.5.11 Dial the Numbers of Phonebook.....	20
2.5.12 Emergency Number	20
2.5.13 Answer Calls	20
2.5.14 Call Records	21
2.5.15 Call Menu.....	21
3 Function Menus	22

3.1 Use of Function Menus	22
3.2 Introduction of Function Menus	22
3.3 Phonebook	28
3.4 Messaging	29
3.4.1 SMS	30
3.4.1.1 Write Message	30
3.4.1.2 Inbox	31
3.4.1.3 Outbox	31
3.4.1.4 Templates	32
3.4.1.5 SMS Settings	32
3.4.2 MMS	32
3.4.3 Voice Mail Server	34
3.4.4 Broadcast Message	34
3.5 Call Center	35
3.5.1 Call history	35
3.5.2 General call settings	36
3.6 Settings	37
3.7 Multimedia	40
3.8 File Manager	43
3.9 Fun & Games	43
3.9.1 Game	43
3.9.2 Motion sensor	43
3.9.3 Vibratory feel	43
3.10 User Profiles	43
3.10 Organiaer	44
3.10.1 Calendar	44
3.10.2 To do	45
3.10.3 Alarm	45
3.10.4 World clock	45
3.11 Services	45
3.11.1 WAP	45
3.11.2 Date Account	46
3.12 Extra	47
3.12.1 Calculator	47

3.12.2 Currency converter.....	47
3.12.3 Health	47
3.12.4 Stopwatch	47
3.12.5 Ebook reader	47
3.12.6 Bluetooth.....	48
3.14 Dual SIM settings.....	48
4 Input Method.....	48
General Outline.....	48
Screen Key values.....	48
5 T-flash Card and USB	49
5.1 Insert and Remove T-flash Card.....	49
5.2 Use of T-flash Card.....	49
5.3 USB	50
6 Troubleshooting	50

1 General Information

Internet address: www.nktel.cc

Services: contact with your supplier or go to our Internet site. On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

Your telephone is a transceiver that operates on GSM networks with 850, 900, 1800 and 1900 MHz bands. This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Protection against theft (1)

Your telephone is identified by two IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering “ * # 0 6 # “ and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

(1) Contact your network operator to check service availability.

1.1 Introduction

The phone is designed for GSM/GPRS network environment. Apart from calling, it also provides some practical functions, such as associative English input method, card-folder phonebook, individualized sound and pictures of incoming calls, 64 polyphonic ringtone, SMS & MMS, camera & video recorder, music & media player, voice recorder, clock, alarm clock, calculator, automatic turn-on & turn-off, scheduler management, T-flash, GPRS, STK, keypad lock, USB, pickup camera, Bluetooth. Moreover, its individualized user interface and functional design can meet your various requirements.

The phone is designed in accordance with the technical specifications of GSM/GPRS. It also obtains authentication of domestic and international authorities.

Manufacturers reserve the right to revise this manual without giving advance notice.

1.2 Safety

If your phone has been lost or stolen, contact telecommunication department or its agencies so as to forbid the use of your phone and SIM card. Your prompt action can prevent others from personator calls which will result in your pecuniary loss.

When you contact telecommunication department or its agencies, they will require IMEI code. The IMEI code is printed on the label of the phone back and you can see it when you remove the battery. You should copy the code and keep it properly for future need.

In order to avoid the misuse of your phone, you shall take the following measures:

- ◆ Set PIN code of your SIM card and alter it before others have known it.
- ◆ Do not put your phone in the visible places before you leave the car. You'd better keep it with you or lock it in the boot.
- ◆ Set Call Barring.

1.3 Warning and Notice

For your safe and proper use of the phone, read these guidelines before you use the phone.

1.3.1 Basic Notices

- ◆ Do use the batteries and chargers approved by the manufacturer. The disapproved products may cause battery leakage, overheating, burst or fire.
- ◆ Do not strike, shake or sling your phone. It can prevent damage or fire.
- ◆ Do not place your phone, battery or charger in microwave oven or

- ◆ Do not place your phone, battery or charger in microwave oven or high-voltage equipment; otherwise it may cause accidents, such as circuit damage or fire.
- ◆ Do not use your phone in the place where there is inflammable and explosive gas; otherwise it may cause your phone failure or fire.
- ◆ Do not put your phone in the place of high temperature, high humidity or the place where there is a lot of dust; otherwise it may cause your phone failure.
- ◆ Keep your phone out of the reach of children. It can prevent children from playing your phone as a toy and the subsequent body injury.
- ◆ Do not place your phone at the unsmooth or unstable table; otherwise your phone may fall from the table and get damage.

1.3.2 Notices of Your Phone

- ◆ Turn off your phone in any facility where using mobile phone is forbidden. These facilities may include airplanes and hospitals. The phone can influence the regular operation of electronic devices and medical devices. Therefore, any use of the phone must be in accordance with applicable regulations of the facility. Your phone is of automatic turn-on function. You should check the setting of clock alarm in order to ensure your phone will not be automatically turned on while the airplane is flying.
- ◆ Do not use your phone in the place of poor signal or near the electronic devices of high definition. The interference of radio wave may cause electronic devices' misoperation or other problems, especially to audiphones, pacemakers and other medical electronic devices, fire detectors, automatic doors and other automatic control devices. You can consult the manufacturer or seller of the medical device about the influence of the phone on the pacemaker or other medical devices.
- ◆ Do not press the LCD strongly or strike other things with your phone; otherwise it can cause damage to LCD or leakage of LCD liquid. If LCD liquid accidentally gets into your eye, you may become blind. At this very moment, do not knead your eye. You should immediately wash your eye with water and then go to hospital.

- ◆ Do not dismantle or refit your phone; otherwise it will cause damage to your phone, leakage of electricity and circuit failure.
- ◆ In few situations, your phone may have bad influence on electronic devices in some car. Do not use your phone so as not to lose security.
- ◆ Do not press the keys with sharp things, such as needle or nib; otherwise it may cause damage to your phone or misoperation.
- ◆ Do not use your phone if its antenna is damaged; otherwise it may cause injury to the person.
- ◆ Do not put your phone too near magnetic objects, such as the magnetic card; otherwise the radiation wave of the phone may eliminate the information stored in floppy disk, debit card and credit card
- ◆ Do put the small metal objects such as thumbtack far away from the earphone because the loudspeaker is magnetic while it is working and it can attract these small metal objects. It may cause injury to the person or damage to the phone.
- ◆ Keep your phone dry. If water or other liquid gets into the phone, it may cause overheating, leakage of electricity or failure of your phone.

1.3.3 Notices of Battery Use

- ◆ Do not cast the battery into the fire; otherwise it can cause fire or burst.
- ◆ Do not install the battery strongly; otherwise it can cause leakage of electrolyte, overheating, burst or fire.
- ◆ Do not short-circuit the battery with metal objects, such as electrical wiring or needle. Do not put the battery together with metal objects such as necklace; otherwise it may result in leakage of electrolyte, overheating, burst or fire.
- ◆ Do not weld the positive (+) and negative (-) of the battery; otherwise it may result in leakage of electrolyte, overheating, burst or fire.
- ◆ If battery electrolyte accidentally gets into your eye, you may become blind. At this very moment, do not knead your eye. You should immediately wash your eye with water and then go to hospital.
- ◆ Do not dismantle or refit the battery; otherwise it can cause leakage of electrolyte, overheating, burst or fire.

- ◆ Do not use or put your phone near the fire or in the place where is of high temperature; otherwise it can cause leakage of electrolyte, overheating, burst or fire.
- ◆ If the battery is calefactive, color-changing or transformative while is it is charging, using or preserve, do stop using it and change a new battery.
- ◆ If battery electrolyte contacts skin or clothes, it may burn the skin. Do wash the skin with water immediately and go to hospital if necessary.
- ◆ If electrolyte leaks out of the battery or send out strange smell, put the battery far away from the fire immediately in order to avoid fire or burst.
- ◆ Keep the battery dry; otherwise it can cause overheating, smoking or erosion of the battery.
- ◆ Do not use or put the battery in the places of sunlit or high temperature; otherwise it can cause leakage of electrolyte or overheating. Moreover, it can reduce the capacity and lifetime of the battery.
- ◆ Do not charge the battery continuously over 24 hours.

1.3.4 Notices of Charger Use

You can use **Charger** or connect it to PC for your phone with **USB cable**.

- ◆ Do use alternating current of 220V. Using other voltage can cause leakage of electricity, fire or damage to your phone and the charger.
- ◆ Do not short-circuit the charger; otherwise it can cause electric shock, smoking or damage to the charger.
- ◆ Do use the charger while the power line is damaged; otherwise it can cause fire or electric shock.
- ◆ Do wipe the socket and remove the dust in time
- ◆ Do not place the container filled with water near the charger; otherwise it can cause overheating, leakage of electricity and failure if water spills out.
- ◆ If the charger accidentally contacts water or other liquid, you should immediately unplug the charger so as to avoid overheating, fire, electric shock or failure of the charger.
- ◆ Do not dismantle or refit the charger; otherwise it can cause electric shock, fire, damage to the charger or injury to the person.

- ◆ Do not use the charger in the place of high humidity, such as bathroom; otherwise it can cause electric shock, fire or damage to the charger.
- ◆ Do not touch the charger, power line and socket with wet hand; otherwise you can get an electric shock.
- ◆ Do not put heavy things on the power line or refit the wire; otherwise it can cause electric shock or fire.
- ◆ Do unplug the charger before you clean and maintain it.
- ◆ Do Hold the charger if you unplug it. Do not pull the power line. It may damage the wire and cause electric shock or fire.

1.3.5 Care and Maintenance

- ◆ Your phone, battery and charger are not waterproof. Therefore, do not use them in the place of high humidity, such as bathroom. They should also avoid shower.
- ◆ Do clean your phone, battery and charger with the soft and dry cloth.
- ◆ Do not wipe your phone with alcohol, diluents or benzene.
- ◆ Do wipe the socket regularly. The dirty socket can result in bad contact, unsteady power and no recharge.

1.3.6 General Notices

The Phone

- ◆ Your phone must be used in the places where the temperature is below 40°C and above 5°C and the humidity is below 85% and above 35%.
- ◆ Do stay way from telephone, television, and radio and office automatic instrument while you are using the mobile phone. It can prevent the interference of your phone and the abovementioned instruments.

The Battery

- ◆ Do put the battery in the ventilated place and keep it away from the sunlit place.
- ◆ The battery is of limited lifetime and frequent charging can reduce its capacity. If the battery cannot be charge, change a new approved battery.
- ◆ Do not dispose of the battery as household waste. The battery must be disposed of in accordance with the regulations.

The Charger

- ◆ Do not charge the battery in the following places: the sunlit place, the place where the temperature is below 40°C and above 5°C, the place of humidity, dust or severe shake and the place near the television, radio or other electrical appliances.

Radio waves

- ◆ Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC(R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international requirements(ICNIRP) (1) and by the Council of the European Union (Recommendation 1999/519/EC) (2).These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue.

The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to

a base station antenna, the lower the power level required by the mobile phone.

(1) The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.

(2) The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 1.08 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site:

<http://www.who.int/peh-emf>.

Although no danger relating to the use of telephone was ever proved, the World Health Organisation advises as a precautionary measure to use your telephone with a good level of network reception as indicated on the telephone display (4 to 5 bars). It is also advised to keep the telephone, during communications, away from the belly of pregnant women and from the lower abdomen for teenagers.















Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 2cm away from the body.

2 Getting Started

2.1 The Display Screen

In idle mode the LCD may display the following icons.

Icon	Description
	SIM Card 1 Signal Strength
	SIM Card 2 Signal Strength
	Vibrator is activated
	SIM Card 1 New SMS
	SIM Card 2 New SMS
	SIM Card 1 New MMS
	SIM Card 2 New MMS
	Alarm clock is activated
	Headset is inserted
	SIM Card 1 missed call
	SIM Card 2 missed call
	The keypad is locked.
	Battery Level
	Bluetooth is activated

2.2 Keys

Name	Description
Left/Right Function Key	These two function keys depends on the menu at the bottom of screen, like OK, Return.
Power Key	Terminate call Press down and hold to switch on or off To return to idle screen from function list

Dial1& Dial2 Key	Making call out(sim1 or sim2) or answer incoming calls To browse call history from idle screen.
OK Key	Confirm function in some menus.
Direction Keys	To scroll in function list or phone book. To scroll cursors in user edit status To enter the specific function from idle screen
Number Keys	To input numbers, letters and symbols.
# Key	To switch between current mode and silent mode in idle screen. To switch input modes in user edit status To increase the volume in MP3 /FM playing.
* Key	To input symbols in user edit status. To input "+", "P", "W" when dialing numbers. To decrease the volume in MP3/FM playing.

2.3 Battery

The initial state of battery charge of about 50% the electricity. The first three complete charge please run out of power after the full use of this battery easy to achieve the best use of state.

Install and Remove the Battery

You should follow these steps to remove the battery: Open the battery back;

Remove the battery from back-end mobile phones.

You should follow these steps to install the battery: Insert the front-end of the battery into the phone; Put the rear cover back.

Charge the Battery

- ◆ Plug in the charger.
- ◆ Insert the connector plug into the connector port on the bottom of your phone.
- ◆ Then the Battery Level icon displays in top right corner of the screen will flicker regularly. If your phone is power off, a charge indicator will display in the screen and indicates that the battery is charging. If the battery is too

low the charge indicator will display in the screen for a moment.

- ◆ When the icon is full and does not flicker, it indicates that the battery is completely charged. If your phone is power off, the system will display “charging complete”. The charging process usually spend 3-4 hours. In the process of charging your phone, battery and charger will become hot that it is a normal phenomenon.

Notice:

The phone must be charged with the approved charger in the ventilated places where temperature is below 40°C and above 5°C. The use of any other disapproved battery may invalidate any warranty, and may be dangerous.

When your phone is automatically turned off or indicates the power will be exhausted, you should charge the battery in time. If the battery is not exhausted, the charging time will be shorter than the normal time.

The data of suspended time and talk time is provided by manufacturer is based on the ideal working environment. But actual working time depends on the network environment, working environment and usage method.

Do check if the battery has been well installed before charging. Do not remove the battery while charging.

Remove the connection between charger and batter after the battery is completely charged.

If you do not remove the connection between charger and batter, the battery will be charged in 5-8 hours. We suggest that you don't do it, because it can shorten battery lifetime .

2.5 Network Connections

2.5.1 SIM Card

You must insert an effective SIM card into your phone before you use the phone. SIM card into your digital GSM network key.

All the information of network connection and the initial call record is stored in the metal area of SIM card. It also stores your phonebook and SMS. SIM

card can be removed from your phone and used in any mobile phone of GSM network. (The new phone will automatically read the SIM card)

In order to avoid the SIM card information will be lost, you should put SIM card far away from the place of electricity or magnetism and do not touch the metal area of SIM card. Once SIM card is damaged, you cannot logging in GSM network.

Caution: Do turn off your phone before you remove SIM card. Do not insert or remove SIM card when the phone is power on; otherwise SIM card can be damaged.

2.5.2 Insert and Remove the SIM Card

SIM card is usually placed in a card. You should take it out carefully before you insert it into your phone.

- ◆ Turn off your phone and remove the battery or external power.
- ◆ Insert SIM card into the card slot as shown below
- ◆ When you want to remove SIM card, turn off your phone and remove the battery. Then you can take out SIM card.

2.5.3 Turn Your Phone On or Off

Press and hold Power Key to turn on your phone. Do the same thing to turn off your phone.

If you have not installed SIM card, your phone will request you to insert SIM card. The phone check if the card can be used after the card has been installed. Then the screen will display the following indications sequentially.

- ◆ **Input SIM1(2) PIN:** was set up SIM password..
- ◆ **Input Phone lock code:** was set up cell phone password.
- ◆ **Searching:** phone will search until found a suitable network connention.

2.5.4 Phone unlock

In order to prevent the illegal use your mobile phone can be set up password-protected. Elected to user this feature, you must enter a password so you can unlock the phone when you turn on phone every time, and send or receive calls. You can remove passwords(see the "Security setting").In this case, the phone can not prevent the illegal use of.

- ◆ Enter the password phone, Delete key can clear input error. For example,

if the phone password is set to 1122, you must enter “1122”.

- ◆ If you forget your phone password, you must contact your local retailer or authorized service center, in order to unlock your phone password.

2.5.5 Unlock the SIM Card

In order to prevent the illegal use, SIM card PIN1 (personal identification number) code encryption protection. Elected to use this feature, you must enter PIN 1 code to unlock SIM card when you turn on phone every time, and send or receive calls. You can remove the S protection IM card (See Security setup). In this case, the SIM card can not prevent the illegal use of.

- ◆ By hanging up the phone key to open.
- ◆ Enter PIN 1 code and then select Confirm. Delete key can clear input error. For example, if the PIN 1 code is set to “1234”, you should enter “1234”.

If three consecutive input error, your SIM card will be locked Network. Phone will be asked whether the PUK 1 code. If you do not know PUK 1 code, do not enter on its own, SIM card should be paid to deal with network operators(See **Security setup**)

Notice: The network operator suppliers for you SIM card to set a standard of PIN1(4 to 8), You as soon as change to your private password(See Security setup)

2.5.6 Connect to the Network

If SIM card is success in unlock, phone will automatically search for an effective network. Once contacted, the network provider’s name will appear on the screen.

Notice: If the screen displays “ EMERGENCY” , Means that you don’t in network service’s coverage area. But you can still send an emergency call according to the signal strength.

2.5.7 Make Calls

When the network provider’s logo appears on the screen, you can call or answer the phone. The icon be displayed in the top left corner of screen is the network signal strength.

The barrier can influence call quality. Therefore, You can mobile in small area so that effectively call quality.

2.5.8 Make Domestic Calls

Press Number Keys to enter the phone number and then press send button to begin to call. If you want to change the number, press Delete Key to delete the number. The screen will show animation while dial-up call. After answer each other, the screen will show call state. If you have set extra tone , you will hear ring tone.(network support)

Press End Key to hang up the call.

Dialing Code Phone Number Dial-up button

2.5.9 Dial Extension

Some fixed-line extensions can not dial directly, You need to dial the switchboard, dial extension. If you insert “P” between the switchboard number and the extension number while entering the phone numbers, the phone will automatic dial-up extension. Press and hold “ * ” Key to input “ P ”.

Dialing Code fixed-line telephone number P extension number
Dial-up button

For example, if you have a number 8880000 to use a dial-up voice-mail system, mail for the 6666 and 8888 for the password, well ,you can dial in the following manner:

8880000 P 6666 P 8888

The first part of number is dial-up voice-mail system.

After telephone response, send 6666 to choice voice-mail.

Before number 8888 is sent out the second “P” will have a 5 seconds delay.

2.5.10 International telephone Calls

When you want to make international call, you may keep pressing “*” key till the screen displays international long-distance telephone prefix symbol "+". his allows you to dial a number from any country even unknowing prefix number (e.g. which in china is “86”)

With prefix number inputted ,input your desired district number and complete phone number. The country code in accordance with usual practice. For example, district number of Germany is 49 , that of UK is 44 , and of Sweden is 46, etc.

For example: to dial hotline for service, you should dial:

+86 21 114

+ County Code Phone Number Dial-up button

2.5.11 Dial the Numbers of Phonebook

Every call you dialed or received can be saved and listed in your phone. The recent dialed and received calls are on the top of the list (See **3.5 Call Center**). Every dialed call, received call or missed call is listed in dialed calls group, received calls group or missed calls group respectively. You can view all the call records. When the groups are full, the old records will be automatically deleted. You should follow these steps to view the list.

- ◆ Press Call Key to view Call history
- ◆ All the numbers in the list can be directly dialed by pressing Call Key.

You can select **ok** to view detailed information of the chosen number. Enter **Options** and select **Save to Phonebook** to save the chosen number in your phonebook.

2.5.12 Emergency Number

If you are in network service's coverage area (check the upper left corner of the screen mobile phone network signal strength), you can make an emergency number. If your network provider fails to provide roaming service on such location, the screen will display "EMERGENCY" and you can only make an emergency numbers. If you are in the network coverage area, you can call emergency numbers without SIM card.

2.5.13 Answer Calls

If you set "press any key to answer a call", then pressing any key will answer a call (but don't press the "Back key" and "end key"), Otherwise, you have to press Call Key or OK Key to answer call. If the headset has been inserted, you can press the headset button to answer the call. If it's not convenient for you press button, can be set to auto answer. Then your phone, if the headset has been inserted, in the ringing tone or vibration after 5 seconds, telephone automatically connect

2.5.14 Call Records

Your phone can record the latest call record and the total call duration.

2.5.15 Call Menu

Select **H-Free** to activate **Hands-Free** function or **Options** to enter **Options Menu**. The operation is the same as that of function menu. Such call menu can only be seen during a call , and call waiting, call holding, and multi-parties conference need network support, please contact your network service provider.

Select Options Menu to perform the following operations.

- ◆ **Hold/Retrieve single call:**
Hold a current call or resume a held call.
- ◆ **End single call:**
End a current call.
- ◆ **New Call:**
Call new call(s).
- ◆ **Phonebook:**
Allow you to search a number in your phone book.
- ◆ **Message Center:**
Edit and send a message.
- ◆ **Sound recorder:**
For audio record, long press “volume up key” to activate recorder function during a call.
- ◆ **Mute:**
Not to send (send) local voice.
- ◆ **DTMF:**
Press “left soft key” to activate or deactivate dual

3 Function Menus

3.1 Use of Function Menus

Scroll Searching and Selection Function

Press MENU key to enter **Function Menus** in idle mode.

In all the main menu or submenu level, the OK key to choose functions.

Exit Menus

Generally, you can press Back Key to exit from some menu item. Press End Key to return to idle mode.

Note: In the idle interface, press the back key to enter the phonebook contact list

3.2 Introduction of Function Menus

The default menu function is structured as follows:

PIM (Personal Information Management)

1. Phonebook

1.1 Quick Search

1.2 Search Contact

1.3 Add New Contact

1.3.1 To SIM 1

1.3.2 To SIM 2

1.3.3 To phone

1.4 Copy All

1.4.1 From SIM 1 to phone

1.4.2 From phone to SIM 1

1.4.3 From SIM 2 to phone

1.4.4 From phone to SIM 2

1.4.5 From SIM1 to SIM2

1.4.6 From SIM2 to SIM1

1.5 Delete

1.5.1 From SIM 1

- 1.5.2 From SIM 2
- 1.5.3 From phone
- 1.5.3 One by one
- 1.6 Caller Groups
 - 1.6.1 Friends
 - 1.6.2 Family
 - 1.6.3 VIP
 - 1.6.4 Business
 - 1.6.5 Others
- 1.7 Extra number
 - 1.7.1 SIM1 owner number
 - 1.7.2 SIM2 owner number
- 1.8 Settings
 - 1.8.1 Memory Status
 - 1.8.2 Preferred Storage
 - 1.8.3 Fields
 - 1.8.4 My vCard
 - 1.8.5 vCard version
- 1.9 Caller Picture
- 1.10 Caller Ringtone
- 2.Messages
 - 2.1 SMS
 - 2.1.1 Write Message
 - 2.1.2 Inbox
 - 2.1.2.1 SIM 1 Inbox
 - 2.1.2.2 SIM 2 Inbox
 - 2.1.3 Outbox
 - 2.1.3.1 SIM 1 Outbox
 - 2.1.3.2 SIM 2 Outbox
 - 2.1.4 Templates
 - 2.1.5 SMS Settings
 - 2.1.5.1 SIM 1 message Settings
 - 2.1.5.1.1 Profile settings
 - 2.1.5.1.2 Common settings

2.1.5.1.3 Memory status

2.1.5.1.4 Preferred storage

2.1.5.2 SIM 2 Message Settings

2.1.5.2.1 Profile settings

2.1.5.2.2 Common settings

2.1.5.2.3 Memory status

2.1.5.2.4 Preferred storage

2.2 MMS

2.2.1 Write Message

2.2.2 Inbox

2.2.3 Outbox

2.2.4 Drafts

2.2.5 Templates

2.2.6 MMS Settings

2.2.6.1 Compose

2.2.6.2 Send

2.2.6.3 Retrieve

2.2.6.4 Filter

2.2.6.5 Server profile

2.2.6.6 Memory status

2.3 Voice Mail Server

2.3.1 SIM 1 voicemail server

2.3.2 SIM 2 voicemail server

2.4 Broadcast Message

2.4.1 SIM 1 broadcast message

2.4.1.1 Receive mode

2.4.1.2 Read Message

2.4.1.3 Languages

2.4.1.4 Channel Settings

2.4.2 SIM 2 broadcast message

2.4.2.1 Receive mode

2.4.2.2 Read Message

2.4.2.3 Languages

2.4.2.4 Channel Settings

3.Call center

3.1 Call history

3.1.1 SIM 1 call history

- 3.1.1.1 SIM 1 missed calls**
- 3.1.1.2 SIM 1 dialed calls**
- 3.1.1.3 SIM 1 received calls**
- 3.1.1.4 Delete SIM 1 call logs**
- 3.1.1.5 SIM 1 call times**
- 3.1.1.6 SIM 1 call cost**
- 3.1.1.7 SIM 1 SMS counter**
- 3.1.1.8 SIM 1 GPRS counter**

3.1.2 SIM 2 call history

- 3.1.2.1 SIM 2 missed calls**
- 3.1.2.2 SIM 2 dialed calls**
- 3.1.2.3 SIM 2 received calls**
- 3.1.2.4 Delete SIM 2 call logs**
- 3.1.2.5 SIM 2 call times**
- 3.1.2.6 SIM 2 call cost**
- 3.1.2.7 SIM 2 SMS counter**
- 3.1.2.8 SIM 2 GPRS counter**

3.2 General Call settings

3.2.1 SIM 1 call settings

- 3.2.1.1 Caller ID**
- 3.2.1.2 Call waiting**
- 3.2.1.3 Call divert**
- 3.2.1.4 Call barring**
- 3.2.1.5 Line switching**

3.2.2 SIM 2 call settings

- 3.2.2.1 Caller ID**
- 3.2.2.2 Call waiting**
- 3.2.2.3 Call divert**
- 3.2.2.4 Call barring**
- 3.2.2.5 Line switching**

3.2.3 Usage Call Time

3.2.4 Magic Voice

3.2.5 Auto redial

3.2.6 Speed dial

3.2.6.1 Enable speed dial

3.2.6.2 Set number

3.2.7 IP dial

3.2.8 More

3.2.8.1 Call time display

3.2.8.2 Call time reminder

4. Settings

4.1 UI Effect Settings

4.2 Phone setup

4.2.1 Time and date

4.2.2 Schedule power on/off

4.2.3 Language

4.2.4 Preferred input methods

4.2.5 Display characteristics

4.2.6 Greeting text

4.2.7 Dedicated key

4.2.8 Misc. settings

4.3 Network setup

4.3.1 SIM 1 network setup

4.3.1.1 Network selection

4.3.1.2 Preferred networks

4.3.2 SIM 2 network setup

4.3.2.1 Network selection

4.3.2.2 Preferred networks

4.4 Security setup

4.4.1 SIM 1 security setup

4.4.2 SIM 2 security setup

4.4.3 Phone lock

4.4.4 Auto keypad lock

4.4.5 Message lock

4.4.6 Guard lock

- 4.4.7 Change password
- 4.5 Restore factory settings
- 4.6 Sound effect
- 5. Multimedia
 - 5.1 imiChat
 - 5.2 Camera
 - 5.3 Image viewer
 - 5.4 Video recorder
 - 5.5 Video player
 - 5.6 Audio player
 - 5.7 Sound recorder
 - 5.8 FM radio
 - 5.9 Melody composer
- 6. File manager
 - 6.1 Phone
 - 6.2 Memory card
- 7. Fun&Games
 - 7.1 Game
 - 7.2 Motion sensor
 - 7.3 Vibratory Feel
- 8. User profiles
 - 8.1 General
 - 8.2 Meeting
 - 8.3 Outdoor
 - 8.4 Indoor
 - 8.5 Headset
 - 8.6 Bluetooth
 - 8.7 Power saving mode
- 9. Organizer
 - 9.1 Calendar
 - 9.2 To do
 - 9.3 Alarm
 - 9.4 World clock
- 10. Services

10.1 WAP

10.2 Data account

11. Extra

11.1 Calculator

11.2 Currency converter

11.3 Health

11.4 Stopwatch

11.5 E-Book reader

11.6 Bluetooth

11.6.1 Power

11.6.2 Inquiry audio device

11.6.3 My device

11.6.4 Active devices

11.6.5 Settings

11.6.6 About

12. Dual SIM settings

12.1 Dual sim open

12.2 Only sim1 open

12.3 Only sim2 open

12.4 Flight mode

3.3 Phonebook

Phonebook allows you to store some important people's name, phone number, home number, company name, etc. From the main menu to select the phonebook or press back soft key in idle mode. Your phone can store 200 phone numbers.

In the phonebook menu you can see quick search, search contact, add new contact ,copy all,Delete,etc

Select **Options** to perform following operations.

◆ **Quick Search:**

Choosing quick search option, You can input the first letter of the name for quick search.

Search Contact:

To search for contacts, start entering the contacts's name in the search filed. The operation is same to Quick Search.

◆ **Add New Contact:**

To add a new directory to telephone book, we can choose to storage in SIM card or the phone.

◆ **Copy All:**

To choose from phone to the SIM card or SIM card to the phone to copy all records of SIM cards and phones.

◆ **Delete:**

Delete Choose from the phone /from SIM 1 /from SIM 2

◆ **Caller Groups:**

The mobile phone offer you five incoming call groups that friends, family, VIP Business and others. You can personalized set name changing, ring type, Incoming call pictures, Incoming call films and calls members of the groups for every group.

◆ **Extra numbers:** You can edit owner number of SIM1/SIM2.

◆ **Settings:** The settings of Phonebook.

Memory Status: SIM card 1/SIM card 2 and phone phonebook store information

Preferred Storage: Select priority storage location. Phone or SIM 1/SIM 2.

Fields: You can edit Fields of phonebook

My vCard: You can edit record of phonebook and send it.

VCard Version: You can select vCard Version.

◆ **Caller Picture:** Choose different pictures to distinguish different caller.

◆ **Caller Ring Tone:** Choose different ring tones to distinguish different caller.

3.4 Messaging

If your network support message service and you have applied to network service providers for this business, you can arbitrarily send and receive English message and multimedia information by the message service center.

3.4.1 SMS

When you receive a new message, your phone will vibrate (if vibrator is activated) or ring (if ringing mode is activated); meanwhile your phone show animation. If you do not read it at once, the message will be stored in SIM card or phone, the new message icon appears in the screen.

Enter **Inbox** to read the new message.

3.41.1 Write Message

Select **Write message** and write a new message (See **Input Method**)

- ◆ **Done:** End write message and start the next step.
- ◆ **Use Templates:** Add common phrases in the text message.
- ◆ **Insert Object:** Insert picture, sound and animation.
- ◆ **Insert Number:** Insert the phone number in the message.
- ◆ **Insert contact:** Insert the name of your phone memory in the message.
- ◆ **Inset bookmark:** You can edit URL and insert it to SMS.
- ◆ **Input method:** Change the input method when editing message.

After you have finished the new message, select **Done**. Then you can select **Send Only, Save and Send, Save, Send to Many** or **Send By Group** to deal with the new message through touchpen or keypad.

- ◆ **Send Only:** Send the current message
- ◆ **Save and Send:** Send the current message and save the message to outbox at the same time.
- ◆ **Save:** Save the current message
- ◆ **Send to Many:** Send the message to several people.
- ◆ **Send By Group:** Select one group, send the message to all members of this group.

Notice: In some city or region the SMS center can not send or receive messages of over 70 Chinese characters or 160 English letters.

3.4.1.2 Inbox

Enter **Inbox** you can Choose card 1 or card 2 Inbox , Or Look through the contents of card 1 or card 2 SMS. Open view a particular message , The screen will show the date of receiving the news and the number or names when you view SMS in the inbox. You can use Navigation Key or to select message. Select **OK** to view the chosen message.

According to the options do the following:

- ◆ **Reply:** Send messages to the current message sender.
- ◆ **Delete:** Delete the current message.
- ◆ **Del Same Num msg:** Delete the current sender of all messages
- ◆ **Forward:** Forward the current message.
- ◆ **Copy to SIM (Copy to phone):** Copy the current message to SIM (phone).
- ◆ **Move to SIM (Move to phone):** Move the current message to SIM (phone)
- ◆ **Delete All:** Delete all the messages in **Inbox**.
- ◆ **Copy All:** You can copy all the messages to SIM card or you phone memory.
- ◆ **Move All:** You can move all the messages to SIM card or you phone memory.
- ◆ **Use Number:** You can collect the phone number and choose to dial the number , save to Phonebook or Send SMS.
- ◆ **Use URL:** You can connect web.
- ◆ **Chat:** Set chatting with the sender of the message.

3.4.1.3 Outbox

Enter **Outbox** you can view have been send SMS. You select **OK** to view the chosen message. Select **Options** to perform following operations on the chosen message.

- ◆ **Send from SIM1/SIM2:** Send the current message from SIM1/SIM2.
- ◆ **Edit:** Edit the current message.
- ◆ **Delete:** Delete the current message.
- ◆ **Del Same Num msg:** Delete the current recipients of all messages

- ◆ **Copy to SIM (Copy to phone):** Copy the current message to SIM (phone).
- ◆ **Move to SIM (Move to phone):** Move the current message to SIM (phone).
- ◆ **Delete All:** Delete all have been send SMS.
- ◆ **Copy All:** Copy all the messages to SIM card or you phone memory.
- ◆ **Move All:** Move all the messages to SIM card or you phone memory.
- ◆ **Use Number:** You can collect the phone number and choose to dial the number or save it in Phonebook.
- ◆ **Use URL:** You can connect web.

3.4.1.4 Templates

Create some common sentences in common messages to avoid repeating input when sending message; edit or delete after finishing it.

3.4.1.5 SMS Settings

You have to make some necessary settings before you use the message function. Enter **Messaging Settings** and perform the following settings.

- ◆ **Profile Settings:** Choose an appropriate mode for phone text message. Enter different modes to set responding names of files, message center number, message expiration and format of message to be sent.
- ◆ **Common Settings:** perform On/Off settings for Delivery report and replay path.
- ◆ **Memory Status:** Browse storing conditions of messages stored in SIM card or in the phone.
- ◆ **Preferred Storage:** Save the message to your phone memory or SIM card.

3.4.2 MMS

Write Message: Write a new MMS. You have to enter receiver, copy, bcc, theme and text.

Inbox: You can view the received MMS.

- ◆ **View:** View the MMS.
- ◆ **Reply :** Sender of current MMS sending a MMS.
- ◆ **Reply by sms:** Send a SMS to current MMS sender.
- ◆ **Reply all:** Send a MMS to current MMS sender and all receivers.
- ◆ **Forward:** Forward current MMS to other people.
- ◆ **Delete:** Delete the current MMS
- ◆ **Delete All:** Delete all the MMS in **Inbox**.
- ◆ **Save as template:** The MMS saved as templates
- ◆ **Properties:**To see the details of the current MMS
- ◆ **User Details:**User number in MMS.

Outbox: Display list of MMS under sending or those failed to be sent out.

- ◆ **View:** View the chosen MMS.
- ◆ **Forward:** Send the chosen MMS to other people.
- ◆ **Edit:** Edit the current MMS.
- ◆ **Delete:** Delete the current MMS.
- ◆ **Delete All:** Delete all the MMS in Outbox.
- ◆ **Save as template:** The MMS saved as templates
- ◆ **Properties:** View the information of the chosen MMS.
- ◆ **User Details:** User number in MMS.

Drafts: MMS not send out at once can be stored here. A MMS after being sent out will be transferred to Sent Items.

- ◆ **View:** View the current MMS.
- ◆ **Send:** Send the current MMS.
- ◆ **Edit:** Edit the chosen MMS.
- ◆ **Delete:** Delete the current MMS.
- ◆ **Delete All:** Delete all the MMS in draft.
- ◆ **Properties:** View the information of the chosen MMS.
- ◆ **User Details:** This function can view the number of recipients

Templates: Create some common picture in common messages to avoid repeating input when sending message;

MMS Settings: Where relevant parameters of sending and receiving

concerning multimedia can be set.

- ◆ **Compose:** Set editor
- ◆ **Send:** Set send. For example: Send report, send time, priority, etc.
- ◆ **Receive:** Set Receive. For example: roaming Network, Web, allowed to send report, etc.
- ◆ **Filter:** Filter some MMS.
- ◆ **MMS storage:** Save the MMS to your phone memory or T-flash card.
- ◆ **Server profile:** Select the proper server.
- ◆ **Memory Status:** Browse memory space of MMS

3.4.3 Voice Mail Server

You receive voice mail will be stored in the network. If you want listen to the message, you must call the voice mail number.

- ◆ **Edit:** You can Add/Edit the voice mail number. Thus it is more convenient for you to dial the number
- ◆ **Connect to Voice:** Dial voicemail service number and conduct operations by following prompts.

3.4.4 Broadcast Message

- ◆ **Receive Mode:** Enable and disable.
- ◆ **Read Message :** Read a message received.
- ◆ **Languages :** Select a language used in receiving message.
- ◆ **Channel Settings :** Select a channel for receiving message send by cell broadcast.

Notice: Voice Mail and Cell Broadcast service depend on the support of the network service operators. Contact them about detailed information.

3.5 Call Center

3.5.1 Call history

3.5.1.1 Missed Calls: Select **OK** to view the list of missed calls.

3.5.1.2 Dialed Calls: Select **OK** to view the list of dialed calls.

3.5.1.3 Received Calls: Select **OK** to view the list of received calls.

Select **OK** to view the information of the chosen entry, such as date, duration, number and dial times. Select **Options** to perform following operations on the chosen entry.

- ◆ **Delete:** Delete this record.
- ◆ **Save to phonebook:** Save this number to the SIM card or mobile phone.
- ◆ **Call:** Dial this number.
- ◆ **Edit:** Edit this number and save it to Phonebook.
- ◆ **Send Text message:** Send message to the number.
- ◆ **Send Multimedia message:** Send MMS to the number.

3.5.1.4 Delete Call Logs

- ◆ **Missed Calls**
- ◆ **Dialed Calls**
- ◆ **Received Calls**
- ◆ **Delete All**

3.5.1.5 Call Times

- ◆ **Last Call :** Browse last call duration.
- ◆ **Dialled calls:** Browse all calls dialed.
- ◆ **Received calls:** Browse all calls received.
- ◆ **Reset All :** Clear all call lists.

3.5.1.6 Calls Cost

- ◆ **Last Call Cost:** Browse last call cost.
- ◆ **Total Cost:** Browse accumulated call charging.
- ◆ **Reset Cost:** Input PIN2 to clear charger.
- ◆ **Max Cost:** Browse, alter and cancel can be performed. Alter and cancel require for inputting PIN2 code.
- ◆ **Price Per Unit:** Browse, alter and cancel can be performed. Alter and cancel require for inputting PIN2 code.

Notice: some operation needs PIN2 code. Please contact with your local network supplier.

3.5.1.7 SMS counter

- ◆ **Sent:** Record number of messages sent.
- ◆ **Received:** Record number of message received.

You can press Left Soft Key to reset the data.

3.5.1.8 GPRS counter

- ◆ **Last sent:** Record latest transmitted data bytes.
- ◆ **Last Received:** Record latest received date bytes.
- ◆ **All Sent:** Record all data bytes transmitted.
- ◆ **All Received:** Record all data bytes received.
- ◆ **Reset Counter:** Clear all records.

3.5.2 General call settings

3.5.2.1 Call settings

- ◆ **Caller ID:** Send my phone number or not as system default
- ◆ **Call waiting:** To open or close the call waiting feature. Select status inquiry to check the current status of call waiting.
- ◆ **Call Divert:**
 - **Divert All Voice Calls** : With this option on, any incoming call will be forwarded to the number you set.
 - **Divert If Unreachable** : With this option on, the incoming call will, when you are unreachable, be forwarded to the number you set.
 - **Divert If No Answer** : With this option on, the incoming call will, when there is no reply, be forwarded to the number you set.
 - **Divert If Busy** : With this option on, the incoming call will, when you are on the phone with other person, be forwarded to the number you set.
 - **Divert All Date Calls** : The incoming call will, if it is data call, be forwarded

- **Cancel All Diverts** : Cancel all call forward.
 - ◆ **Call barring:**
 - **Outgoing Calls** : Bar any outgoing call or international call or international exclusive of national call.
 - **Incoming Calls** : Bar any incoming or roaming call.
 - **Activate all** : Start all the Call barring
 - **Cancel All** : Cancel all barred call settings(password required) to allow normal calls.
 - **Change Barring password** : Change password.
- This function requires support from your network operator.**
- ◆ **Line switching:** Switch to line 1 or 2 lines for use.

3.5.2.2 Usage Call Time

To turn on or off display the period of communication that the left energy can support.

3.5.2.3 Magic Voice

To choose the magic voice type when you are talking on the phone, that means you can change your voice on the phone.

3.5.2.4 Auto redial

With this option on, this phone will automatically redial if any call fails.

3.5.2.5 Speed dial

To turn on or off Speed dial.

3.5.2.6 IP dial

You can IP dialing after turn on this function

3.5.2.7 More

3.5.2.7.1 Call time display

To turn on or off the call time display.

3.5.2.7.2 Call time reminder

To set the call time reminder.

3.6 Settings

3.6.1 Effect Select

You can set the screen switch effect and main menu effect.

3.6.2 Phone settings:

◆ **Time and date**

- **Set time zone:** choose a city for the time settings of the phone. Choose City through the UP and DOWN keys.
- **Set Time/Date:** set the current time and date. Choose to open or close the daylight-saving time through left and right keys.
- **Set Format:** set the display format of time and date. Set the formats of the time and date through left and right keys.
- **Update with time zone**

◆ **Schedule Power On/Off**

You can set four different time intervals to edit and define the automatic switch on/off of the phone.

◆ **Language**

Your phone can support languages: English, etc.

◆ **Preferred Input Methods**

You can preset the word-entering methods for text.

◆ **Display characteristics**

- **Wallpaper:** Select interface standby wallpaper
- **Screen Saver:** The main standby screen interface selection screen image or animation, and set the wait time
- **Power On Display:** Choose the opening animation.
- **Power Off Display:** Choose the closing animation.
- **Show date and time:** Choose to open or close the idle interface shows the current time.
- **Show owner number:** Choose to open or close the idle interface shows the sim card number.

◆ **Greeting Text**

you can set the greeting words when it powered on. Choose <close> to un-display.

◆ **Dedicated key**

you can set the shortcut menu to dedicated key while the phone is idle interface.

◆ **Misc. settings**

Settings the LCD brightness and time delay.

3.6.3 Network settings

◆ SIM1/2 Network setup

- **New search:**to automatic search and connect to the first available network.
- **Select network:** Research the network which belong SIM card.
- **Selection mode:** Select of manual or automatic network selection

3.6.4 Security Settings

◆ SIM1/2 security settings

You may set for your phone security options in this menu to avoid unauthorized use of phone of SIM card, and PIN code may serve the purpose.

If currently the PIN code is disenabled, select Enable to actuate PIN code protection, and the PIN code will be demanded in the next power-on, if this code is currently enabled, select Disenable to cancel PIN code , or Change PIN number to set a new one, please follow the prompt to input old PIN code, new and repeat new.

Notice: Upon three incorrect inputs of PIN code in a row , the SIM card will be locked up, by then, you need to input PUK code to unlock the SIM card, both codes might have been provided along with the SIM card to you, if not, please contact your network operator. The PIN code default is normally 1234, please change it into your own code.

◆ Phone Lock

Phone lock is provided to prevent your phone from unauthorized use. Select Phone lock to enable the protection by phone password which will be demanded in the next power-on, press the selection again to disenable the protection.

Notice: The password default of phone lock is 1122, please change it into your own password.

◆ Auto Keypad Lock

Set idle time of keyboard, when set as desired, if the phone is not used in the specified time, the keyboard will be automatically locked up.

◆ Message Lock

Message lock is provided to prevent your message from unauthorized

read. Select message lock to enable the protection by phone password which will be demanded in the next power-on, press the selection again to disable the protection. The password default of message lock is 1122.

◆ **Guard Lock**

Guard lock is provided to prevent your phone only can use with your sim card. If somebody change the sim card in your phone, it will send a SMS to the number you had settings when the phone is power on. Select guard lock to enable the protection by phone password which will be demanded in the next power-on, press the selection again to disable the protection. The password default of message lock is 1122.

◆ **Change Password**

Change password including Phone lock and private lock codes.

3.6.5 Restore factory settings.

The password default of phone lock is 1122.

3.6.6 Sound effect.

Choose the audio effect when player.

3.7 Multimedia

3.7.1 imiChat

imiChat is a comprehensive mobile application platform for mobile phone, including various types of cell phone use.

3.7.2 Camera

Your mobile phone has camera function. To capture an image you can press 0 key.

Select **Options** to perform following operations.

- ◆ **Photos:** Enter Album.
- ◆ **Camera Settings:** Setting the parameters.
- ◆ **Image Settings:** Setting Image size and quality.
- ◆ **White Balance :** Setting the white balance.
- ◆ **Scene mode:** Select scene mode
- ◆ **Effect Settings:** Select the effect of taking pictures.
- ◆ **Storage:** Save the files to your phone memory or T-flash card.
- ◆ **Reset Default:** Reset all the settings to default.

Notice: In the viewfinder camera interface pressed the corresponding number key on the corresponding image set.

3.7.3 Image Viewer

Photos can be related to the operation, such as: view, browse style, send, rename, etc.

3.7.4 Video recorder

Your phone has video recording function. Select animation recorder icon and press <ok> or Click the icon to enter animation recorder interface. In animation recording interface, press the Central Key or animation recording key to start recording. Press the key once again to pause; or Click corresponding icon to start/pause recording; Press Right Soft Key or press corresponding icon to stop recording. Meanwhile, in animation recording interface, regulate exposure compensation and foci by direction keys or Click corresponding icons. Press <Options> to enter submenus and perform the following operations:

- ◆ **Camcorder Settings:** Settings for animation recorder.
- ◆ **video settings:** Quality video and other related parameters set.
- ◆ **Effect settings:** Setting video effect.
- ◆ **Storage:** Choose to store phone or memory card.
- ◆ **Restore default:** All the settings to their default values.

Notice: In the viewfinder camera interface pressed the corresponding number key on the corresponding image set.

3.7.5 Video player

Your phone has Video playing function which supports 3GP , mp4 , avi formats. Inserting the memory card , connecting the phone and computer with USB and copying video files to memory card , then disconnect the U disk and enter video player menu list; Select an animation to enter Video playing interface where you can play, transmit, rename, delete, delete all, ordering and store animation.

3.7.6 Audio player

Your phone has music player function (only Support mp3 format) . Inserting the memory card , connecting the phone and computer with USB and copying the Mp3 format to memory card menu list to enter MP3 Music Player interface;. The functions of each key are as follows:

- ◆ **Play** : Play current song.
- ◆ **Details** : View the details of the song.
- ◆ **Add To Rings**: Add current song to ring bank of situation modes.
- ◆ **Refresh List** : Update play list.
- ◆ **Settings** :
 - Pre. Play List: Select from phone or memory card with left/right key.
 - List Auto Gen: Automatically produce play list.
 - Repeat : Activate the feature to repeat song playing. Select repeating songs with left/right keys.
 - Shuffle : Activate the feature to repeat song playing randomly. Open/close the feature with left/right key.
 - Background Play: Activate the feature, and the music will not stop along with exit of menu. Open/close the feature with left/right keys.
 - BT stereo output: Open the Bluetooth stereo output
 - BT stereo headset: Choose Bluetooth Headset
 - Lyrics display: In the playback interface display lyrics

3.7.7 Sound Recorder

Press “OK” to enter the submenu to choose the audio record. To choose any record, press “Options” to enter the submenu to do the following operations: Record, Play, Append, Rename, Delete, Delete all, Setting, and forward

- ◆ **Record**: Create a new record.
- ◆ **Play**: Play the record.
- ◆ **Append**: Add a new voice to the chosen record.
- ◆ **Rename**: Rename the current record.
- ◆ **Delete**: Delete the current record.
- ◆ **Delete all files**: Delete all records.
- ◆ **Settings**: Set the format of the voice file.
- ◆ **Use as**: Added to the recording scene mode
- ◆ **Send**: Via MMS or Bluetooth send recordings

3.7.8 FM radio

Press “OK” to enter FM radio player interface, you select right soft key can exit FM. If you select **options**, it will show below menu:

- ◆ **Channel list**: Save search channels, and can be edited.

- ◆ **Manual input:** Manually enter the frequency.
- ◆ **Preset auto search:** Auto search channels and auto save channel list.
- ◆ **Settings:** Rename the current record.
- ◆ **Record:** Record current radio.
- ◆ **Append:** Have been recorded in the document, additional audio recording, and the final recordings will all be saved to the current document.
- ◆ **File list:** Can view all of the recording paper.

Note: Listen to the radio plug in your headphones before

3.7.9 Melody composer

You can edit the melody by yourself.

3.8 File Manager

Save user documents, into the Folder Options

Open: View the contents.

New Folder: Create new folder..

Format: Format phone or memory card

Rename: Will rename the file name

Details: View document details

3.9 Fun & Games

3.9.1 Game

The mobile phone have some games to play.

3.9.2 Motion sensor

You can use the camera light sensor to control your phone, such as switch wallpaper, music, Dice game.

3.9.3 Vibratory feel

Set the key vibration on or off.

3.10 User Profiles

Your phone provides 7 kind of phone mode for you to select or edit. They are **General, Meeting, Outdoor, Indoor, Headset, Bluetooth,Power saving mode.**

- ◆ **General**

Enter Normal Mode and select **Activate** or **Customize**.

Activate: Activate Normal Mode.

Customize: Edit the settings of Normal Mode. The editable settings include Tone setup, volume, Alert type, Ring type, Extra tone and answer mode.

◆ **Meeting**

The operations are the same as Normal Mode.

◆ **Outdoor**

The operations are the same as Normal Mode.

◆ **Indoor**

The operations are the same as Normal Mode.

◆ **Headset**

When you insert headset, your phone will automatically activate Headset Mode.

◆ **Bluetooth**

When you insert Bluetooth headset, your phone will automatically activate Bluetooth Mode. The operations are the same as Normal Mode.

◆ **Power saving mode**

Set the mode on or off.

3.10 Organiaer

3.10.1 Calendar

Enter submenu of tool box, select calendar and press "OK" to display the calendar. Press Up,Down,Left,Right keys to set date, and press "Options" to enter submenu before proceeding with the following operations :

- ◆ **View** : Look up the current routing.
- ◆ **View all**: View all schedules
- ◆ **Add event** :Create a new schedule and set it as a Reminder, Meeting, Course as needed. The editable items are date, time, remarks and alarm reminder added. You may set the reminder type as one of the five including once, everyday ,Custom, weekly, monthly by pressing the Left and Right keys.
 - Once : Remind you this schedule once
 - Everyday : Remind you this schedule everyday at specified time

- Custom : Set when the alarm will go off in a week.
- Weekly : Remind you weekly at set time.
- Monthly : Remind you monthly at set time.
- ◆ **Jump To Date** : Set the current date of the schedule as the specified date.

3.10.2 To do

This phone is capable of storing 50 pieces of memo messages. Select Memo in the submenu to browse, add, edit and delete memo message.

3.10.3 Alarm

This phone allows you set five alarms. Select one to edit and set it. Under the alarm setting option menu you can set alarm on or off, alarm time, ring type, ring setting and lingering time, press left or right key to select the ring type as once, everyday or self-definition; with self-definition option on, you can set your alarm by pressing the left and right keys to go off in any day from Mon to Sun.

3.10.4 World clock

Cities around the world to see the local time

3.11 Services

3.11.1 WAP

Your phone supports services subject to WAP. You can access the services provided by network service operator. You can acquire the information about news, weather forecast, flight, etc.

Notice: GPRS service needs the support of network. You can enjoy it in the coverage areas of GPRS network.

- ◆ **Homepage:** Access the Home page. Home page is your preset website of WAP. If you do not set the Home Page, your phone will access the default website.

- ◆ **Bookmarks:** View the bookmarks. You can select one of them to access the website.
- ◆ **Recent Pages:** the option will record the web addresses you viewed before.
- ◆ **Input address:** This function for the input you want to connect the web site
- ◆ **Service inbox:**View the messages which are sent by the service providers.
- ◆ **Settings:** Some settings of surfing the Internet
 1. **Select SIM: Select SIM 1 or SIM 2**
 2. **Edit account:** Select the service groups and some settings of browsing websites.

3.**Browser options:** Setting parameters of visit website.

4.**Service message settings:** Open or closed services news

5.**Clear cache:** Delete the cache.

6.**Clear cookies:** Clear personal data.

7.**trusted certificates:** select trusted certificates.

3.11.2 Date Account

GSM Data

Select one account and enter it.

1. **Account Name:** the name of the account

2. **Number:** the number of the account

3. **User Name:** the name of dial-up server

4. **Password:** the password of dial-up server

5. **Line Type:** Select **Analogue/ISDN**.

6. **Speed:** Select the proper speed.

7. **DNS:** IP address

GPRS

Select one account and enter it.

1. **Account Name:** the name of the account

2. **APN:** Enter APN.

3. **User Name:** the name of dial-up server
4. **Password:** the password of dial-up server
5. **Auth. Type:** Select the identified manner of encryption.

3.12 Extra

3.12.1 Calculator

Enter Calculator and it can do some simple calculation. Enter the calculated number through keypad . Press Right Soft Key to cancel the result or exit from Calculator. Press Left Soft Key to output the result.

3.12.2 Currency converter

This phone support currency converter.

3.12.3 Health

This phone support you check your body BMI and a women's menstrual.

3.12.4 Stopwatch

- ◆ **Typical Stopwatch** includes **Split Timing** and **Lap Timing**, select "View record" to see timing records.
- ◆ **nWay Stopwatch** press left soft key "Start", and then press the **navigation key** to record time of 4 ways.

3.12.5 Ebook reader

You can use e-book. Select **Option** and enter:

- **Open E-book:** You can open the e-book.
- **Global Settings:** You can set the style, font and page of the e-book system before you read the e-book.
- **Book Info :** There is e-book information, include the name , size and format of e-book. .
- **Delete :** You can delete this e-book.
- **Delete All files :** You can delete all e-book.
- **Sort by :** You can sort e-book by name, format, time or size.
- **Apply global settings :** You can restore default of e-book system.
- **Help :** You can read manual of e-book.

3.12.6 Bluetooth

Enter the menu of Bluetooth and select **OK**.

Power: Activate Bluetooth.

Inquiry Audio Device: Inquiry Bluetooth headset. (See Bluetooth headset user's manual.)

My Device: You can read list of all linked Bluetooth.

Active Device: You can see the linking Bluetooth.

Settings: Set Bluetooth.

About: Service List.

3.14 Dual SIM settings

- ◆ **Dual SIM open:** Open to be dual-card dual-function
- ◆ **Only SIM 1 open:** Only open SIM 1
- ◆ **Only SIM 2 open:** Only open SIM 2
- ◆ **Flight mode:** Close SIM 1&SIM 2

4 Input Method

General Outline

This mobile phone provides many input methods. Character entry functions permitted by this mobile phone are:

- Inputting and editing of short messages
- Inputting and editing of names in the phonebook
- Looking up the phone entry by name

Screen Key values

The keyboard values are as follows:

Generally the **OK Key** indicates confirmation; the **Back key** is to return.

Navigation keys (up/down and left/right keys): Generally used to move the cursor or candidate characters for inputting.

SMS key+Blank key or shift key: to switch between different input methods.

Number keys from **2** to **9**: in the English input modes, indicate the letters on the corresponding key

5 T-flash Card and USB

You can purchase a compatible Tflash card and use it as extra storage space to save the memory on your phone.

5.1 Insert and Remove T-flash Card

The card slot is on the right-upper of the battery. Insert the card in the slot and ensure that the contact area on the card is facing up. Press the card to release it from the slot. Do not pull the card directly; otherwise the card slot and T-flash card can be permanently damaged.

Notice: Your phone supports plug and play. However, you'd better turn off your phone to insert or remove T-flash card when your phone is on. It can ensure the normal usage of the information. Generally speaking, you'd better not insert or remove T-flash card.

5.2 Use of T-flash Card

T-flash, which is one kind of phone storages, is set as the default storage. You do not make any setting and use it directly.

When you first insert T-flash card, you have to set it as the default storage of **Music Player, Media Player, Camera, Voice Recorder**, etc. Then you can use it to store or read the information.

When you phone is connected to the computer with USB line, you can copy the data between your phone and the computer. Your T-flash is used as USB flash drives.

(MP3 is discovered by **Mp3 player** just when it is saved in **My Music** folder;

E-book is discovered just when it is saved in **E-book** folder;

Video is discovered by **Mp4 player** just when it is saved in **Videos** folder;

Picture is discovered by **Album** just when it is saved in **Photos** folder.)

5.3 USB

You can connect the USB to phone or PC with USB cable.

usb portable drive

Power off: You can copy the data between your phone and the computer. (See the usb portable drive user's manual)

Power on: Select **Pocket** and copy data from PC.

Webcam

Power on: Select webcam, you can use MSN etc.

6 Troubleshooting

If your phone does not work normally, read the following problems and solutions for reference. If you still can't solve the problems, consult the seller or service centre.

Problems	Reasons	Solutions
Bad reception	Use the phone in bad reception areas such as near the high buildings or in the basement where radio wave can not be transmitted effectively.	Try to avoid it.
	Use the phone in busy-line period.	Try to avoid it.
	It has something to do with the distance of the base stations built by the network service provider.	Request the network service provider to provide the map of service areas.
Echo or noise	Bad trunk line of network	Hang up the phone and redial the number or change the line.
	The line of some area is bad.	

Standby time becomes short.	Standby time is related to the setting of network.	Turn off the phone temporarily in the areas of poor signal.
	The battery needs to be changed.	Change for a new battery.
	In the poor signal areas, the phone has to consume more power to search the base station. It shortens the standby time.	Move to the areas of good signal or turn off the phone temporarily.
The phone can not be turned on.	The battery is out of power.	Check the battery level or charge the battery.
SIM Card Error	SIM card is damaged.	Contact your network service provider.
	SIM card is not well inserted.	Ensure SIM card is well inserted.
	There is filth on the metal area of SIM card.	Wipe the metal area with a clean cloth.
The phone can not connect to network.	SIM card is invalid.	Contact your network service provider.
	Out of GSM service areas	Consult the network service provider about the service areas.
	Poor signal	Move to the areas of good signal.
The phone can not make calls.	Call Barring is activated.	Inactivate Call Barring.
	Fixed Dial is activated.	Inactivate Fixed Dial.
Incorrect PIN Code	Enter an incorrect PIN code 3 times in a row	Contact your network service provider.
The phone can not be	The battery or charger is damaged.	Change for a new battery or charger.

charged.	The temperature of charging environment is below -10°C or above 55°C.	Change the charging environment.
	Bad contact	Check the connection of the connector.
New entries can not be added to the phonebook.	The phonebook is full.	Delete some entries of the phonebook.
Some functions can not be set.	The network service provider does not provide this service or you do not apply for this service.	Contact your network service provider.

Video recorder

Your phone has video recording function. Select animation recorder icon and press <ok> or Click the icon to enter animation recorder interface. In animation recording interface, press the Central Key or animation recording key to start recording. Press the key once again to pause; or Click corresponding icon to start/pause recording; Press Right Soft Key or press corresponding icon to stop recording. Meanwhile, in animation recording interface, regulate exposure compensation and foci by direction keys or Click corresponding icons. Press <Options> to enter submenus and perform the following operations:

- ◆ **Camcorder Settings:** Settings for animation recorder.
- ◆ **video settings:** Quality video and other related parameters set.
- ◆ **Effect settings:** Setting video effect.
- ◆ **Storage:** Choose to store phone or memory card.
- ◆ **Restore default:** All the settings to their default values.

Notice: In the viewfinder camera interface pressed the corresponding number key on the corresponding image set.