

Infinix



JOYPAD⁷

User Guide / Manuel d'utilisation / دليل المستخدم


Features and parts



Getting started

Inserting SIM card

1. Power off the pad and remove the card cover.
2. Insert the SIM card properly in the card slot.

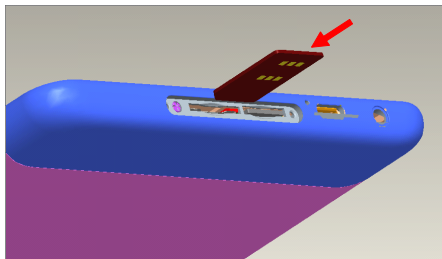


SIM card

3. Finally, replace the card cover.

Inserting memory card

1. Power off the pad and remove the card cover.
2. Insert the Micro SD card into the slot.
3. Finally, replace the card cover.

Note: Only use compatible memory cards with the device. Incompatible memory cards may damage the card or device and corrupt the data stored on the card.

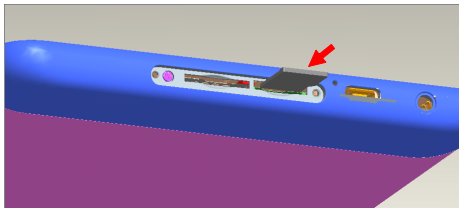

Micro SD card



Charging the device

You can charge the device with a charger or connect it to a computer through a USB cable (included with the pad).

Note: Only use the charger provided to avoid risk of explosion.

Locking and Unlocking the Screen

Press the power button to put the device in Sleep mode and lock the screen. Press the power button again and swipe the lock icon to the right to unlock the screen.

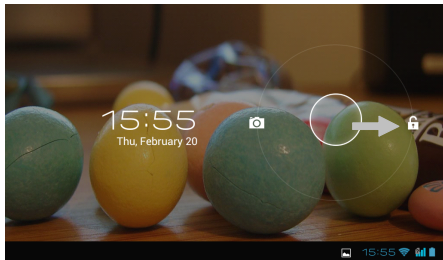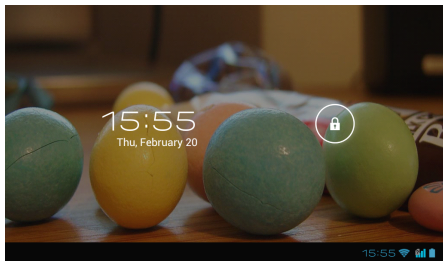

Adding Widgets and Icons on the Home Screen


Adding widgets and icons on the home screen

Open the Launcher and press and hold an application until the application is displayed on the home screen before releasing your finger.

Rearranging or removing widgets and icons from the home screen

a) Press and hold the widget or icon that you wish to move. When the Remove option appears, drag the widget or icon to a new location on the screen.


b) Press and hold the widget or icon that you wish to remove for several seconds and drag to the Remove option at the top to remove it!

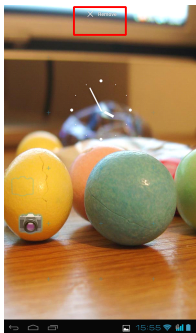

Opening the Launcher

Opening and switching between applications

The launcher shows all the applications on the device, including any application that you have downloaded from the Android Market and other sources. At the home screen, tap the Launcher icon to open the main menu.

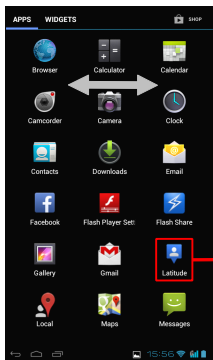


Swipe the screen to the left or right to see more applications.

Tap an application to open it.

Press the home or back button to close the Launcher.


Switching to a recently used application


Press and hold the  icon for a few seconds.

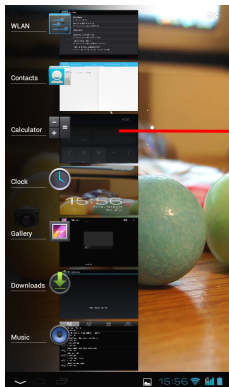

Tap to open the application.

Making a call

On the start screen, tap  and enter a complete phone number to make a call.

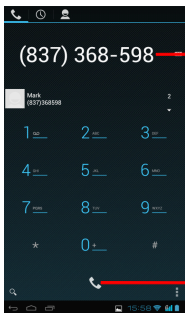

Enter a complete phone number.




Make a call.

End the call.

Sending and receiving messages

Enter **Messaging**, and then compose new message. You can open the keyboard by touching a text field where you want to input text.

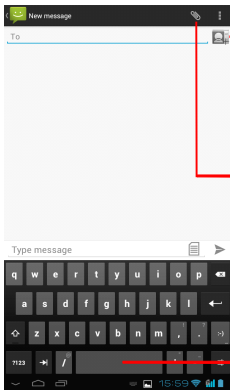

a. When you are composing a new text message, you can select the text for cutting or copying. The selected text will be highlighted in blue.

- Touch and hold the text field or portion that contains the text.
- You can select all text, copy, cut and paste.

b. When a new message comes, you can read by dragging the notification panel and clicking the message, or by entering **Messaging** directly.

 
Getting connected

GPRS/EDGE

The device will automatically connect to a network service (WCDMA or GPRS) when you turn it on with a SIM card inserted. If the device cannot connect to a network, you can press and hold on the notification panel. To check the network you are connected to, tap the Main Menu icon on the Home screen, then select **Settings\More\Mobile networks \Access Point Names** or **Network operators**.

Wi-Fi

You need to turn on Data connection in other to access the internet. You can also connect to a Wi-Fi network if one is available. Some networks may require a password.

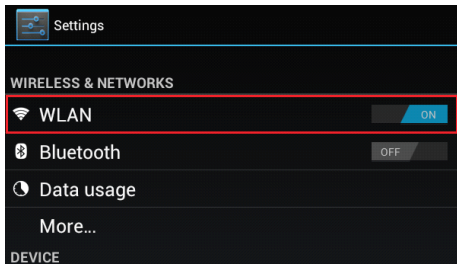

Bluetooth

Remember to stay within 10 meters (33 feet) of the other



Bluetooth device to stay connected. Take note that walls and other electronic equipment will cause interference to your Bluetooth connection.

Browser

You can access the internet through the Browser. To use this function, tap the Main Menu icon on the home screen and select Browser.


Going to a web page

On Browser screen, tap the URL box at the top, enter the address of the web page and press confirm. Some websites may hide the URL box automatically, you can scroll down the web page to display it again.

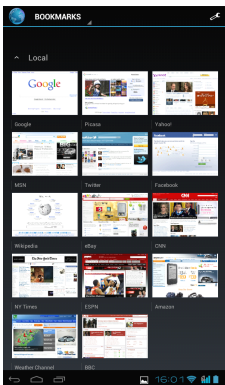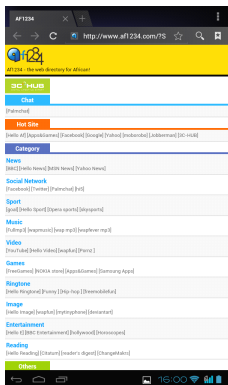


Enjoying Music

The Music player searches for music files inside the device's internal storage and builds a library based on the information of each file.

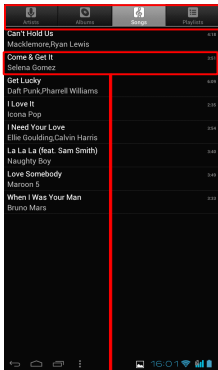



Tap to view your library in four different ways.

Tap to open an album, song or playlist.


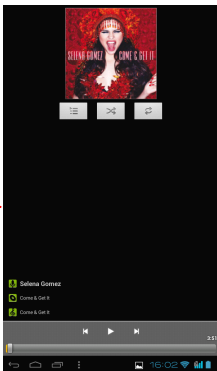


Downloading Applications From Google play

A、 Add a Google account .

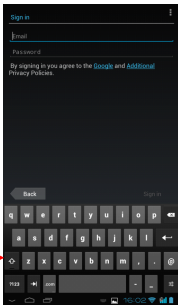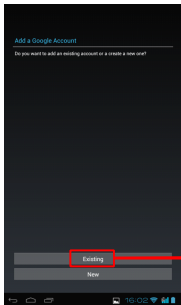

B、 Enter Google Play and download applications.

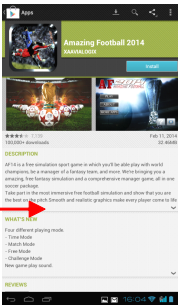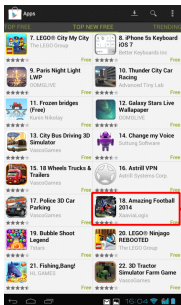

Resetting the device

Manually restart


The device can be restarted by holding the power button for 10 seconds.

Restoring factory settings

Tap the Main menu icon on the Home screen and select **Settings \reset**.

Tap **Factory data reset**

Resetting the device will erase all your personal data from the internal USB storage, including information on your email and any other accounts, system and application settings, as well as any downloaded applications. Resetting the device does not erase any system updates you have downloaded and the files on your SD card, such as music or photos. If you reset the device this way, you will be prompted to re-enter your information just like when you first started using it.

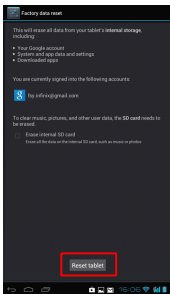

Infinix