

BRIGMT **N**



BPHONE-450QC

Manual de Instrucciones

CONTENIDO

- 1. CONTROLES**
- 2. USO COMO DISCO DE ALMACENAMIENTO**
- 3. WI-FI**
- 4. BLUETOOTH**
- 5. LLAMADAS**
- 6. E-MAIL**
- 7. CALCULADORA**
- 8. NAVEGADOR**
- 9. GRABADORA DE SONIDOS**
- 10. CALENDARIO**
- 11. AJUSTES**
- 12. RELOJ**
- 13. RADIO**
- 14. CONTACTOS**
- 15. GALERÍA**
- 16. CAMERA**
- 17. MENSAJES**
- 18. MUSIC**
- 19. ADVERTENCIAS Y PRECAUCIONES**

1. CONTROLES

Button	Function
Volver (derecha)	<ul style="list-style-type: none">• Pulse para volver a la pantalla anterior
Home (central)	<ul style="list-style-type: none">• En cualquier aplicación, pulse para volver al menú principal• Mantenga pulsado Home para ver las aplicaciones abiertas
Menú (izquierda)	<ul style="list-style-type: none">• Para ver las opciones
Encendido (lateral)	<ul style="list-style-type: none">• Mantenga pulsado para encender o apagar. Además podrá seleccionar modo avión, sonidos, etc.• Una vez encendido pulse para apagar o encender la pantalla.
Volumen (lateral)	<ul style="list-style-type: none">• Para aumentar o disminuir el volumen.

2. USO COMO DISCO DE ALMACENAMIENTO

Para transferir música, fotos y otros archivos a la tarjeta de memoria, inserte una tarjeta de memoria en la unidad y conéctelo vía USB al PC.

- 1) Una vez conectado se mostrará el icono de notificación
- 2) Abra el panel de notificaciones.
- 3) En el panel de notificaciones seleccione conexión USB y active "Activar almacenamiento USB".

Nota: Si desconecta la opción de conexión de almacenamiento USB, podrá usar otras funciones de la unidad en su PC.

3. WI-FI

Active la función Wi-Fi, en el menú de ajustes:

- 1) Pulse toque Configuración del sistema > Conexiones inalámbricas.
- 2) Active la función Wi-Fi. El teléfono buscará automáticamente las redes inalámbricas disponibles.
- 3) Seleccione configuración Wi-Fi. A continuación aparecerá una lista de redes Wi-Fi, elija la red deseada.
- 4) Cuando se selecciona una red abierta, el teléfono se conectará automáticamente a la red. Si selecciona una red WEP, WPA/WPA2, primero debe introducir la contraseña correspondiente para conectarse.

Nota: Cuando el teléfono está conectado a una red inalámbrica, la barra de estado mostrará el icono Wi-Fi y la intensidad aproximada de la señal.

Nota: Además puede obtener conexión a la red a través de GPRS. Para ello inserte la tarjeta SIM y seleccione su uso en el menú inicial (debe disponer de un plan de datos con su compañía telefónica)

4. BLUETOOTH

- 1) Vaya al menú de configuración y encienda el modo Bluetooth.
- 2) Seleccione buscar dispositivos y la unidad buscará dispositivos dentro de su alcance automáticamente.
- 3) Los dispositivos encontrados se muestran en la parte inferior de la lista. Seleccione el dispositivo deseado. NOTA: Para que otros dispositivos Bluetooth dentro del alcance puedan encontrar el teléfono, deberá hacerlo visible seleccionando la primera opción del menú de búsqueda de dispositivos.

Emparejamiento de dispositivos:

- 1) Realice los pasos anteriores de búsqueda de dispositivos Bluetooth.
- 2) Seleccione el dispositivo al que se quiere conectar. Una vez seleccionado siga los pasos. Normalmente deberá introducir una clave de conexión (0000 ó 1234).
- 3) Una vez conectado la barra de estado mostrará el icono de Bluetooth en azul, lo que indica que la unidad está conectada a un dispositivo.

Cancelar una conexión

- 1) En el menú Bluetooth, seleccione o mantenga el dispositivo al que está conectado.
- 2) Seleccione eliminar y confirme la selección.

5. LLAMADAS

Icono de llamadas: Seleccione el icono de teléfono para acceder al menú de llamadas.

Llamar: Introduzca el número de teléfono y seleccione llamar.



Si el número se encuentra grabado en la agenda, cuando comience a escribir el número le aparecerá en pantalla con la información completa del contacto.

Registro de llamadas: Seleccione el icono de registro de llamadas (icono de reloj) en el menú de llamadas, para acceder al registro de las llamadas. Se mostrarán las llamadas realizadas, las no respondidas, las rechazadas, las perdidas, etc.


Responder a una llamada:



Finalizar una llamada:

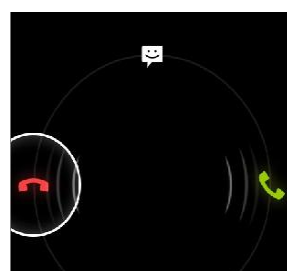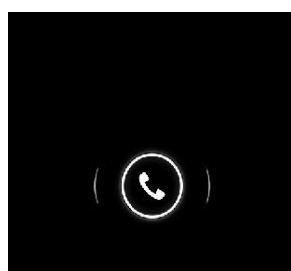

Finalizar una llamada y enviar mensaje:

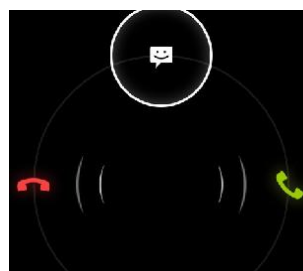

Sensor de proximidad

El dispositivo cuenta con un sensor de proximidad, que mide la distancia de la unidad al cuerpo, de forma que puede ajustar la luz de fondo de la pantalla.

Cuando descuelgue una llamada y acerque el dispositivo al oído, la retro-iluminación de la pantalla del teléfono se apagará automáticamente

Grabación durante la llamada: Durante una llamada, pulse el botón menú para iniciar la grabación.

6. E-MAIL

G-mail es el correo web gratuito de Google. Por favor use una cuenta de Gmail para acceder a todas las opciones que proporciona Android.

7. CALCULADORA

En el menú de aplicaciones seleccione el icono de la calculadora. Pulse el

botón menú para acceder a opciones avanzadas de cálculo.

8. NAVEGADOR

Seleccione el icono del navegador. A continuación escriba la dirección (URL) del sitio que desea visitar.

9. GRABADORA DE SONIDOS

Seleccione la grabadora de sonidos en el menú de aplicaciones. Podrá grabar sonidos y enviarlos por SMS o servicios de mensajería. Presione el botón rojo para comenzar la grabación. Presione stop para parar y seleccione si quiere guardar o descartar el sonido. Todas las grabaciones se guardan por defecto en la carpeta Sound Recording.

10. CALENDARIO

Seleccione el icono del calendario en el menú de aplicaciones. La pantalla por defecto mostrará el mes. Hay cuatro tipos de modo de visualización:

- 1) Día.
- 2) Semana.
- 3) Mes.
- 4) Agenda.

11. AJUSTES

A) Conexiones inalámbricas y redes

- Gestión de SIM: Seleccione esta opción para configurar el uso de las tarjetas SIM.
- Wi-Fi: Revise el contenido Wi-Fi de este manual.
- Bluetooth: Revise el contenido Bluetooth de este manual
- Uso de datos: Puede conectar o desconectar el uso de datos y comprobar el tráfico de datos.
- Modo avión: Cuando active el modo avión se desconectarán los servicios de voz y datos.
- Redes móviles: Puede configurar una red móvil introduciendo uso de datos, punto de acceso, operadores modo de red y red.

B) Dispositivo

- Perfiles de audio: Seleccione el sonido deseado, vibración, etc.
- Pantalla

Brillo: Ajuste el brillo de la pantalla. Fondo de pantalla: Puede establecer un fondo de pantalla entre imágenes de la galería, wallpapers, fondos de pantalla de vídeo, fondos de pantalla, etc.

Pantalla giratoria: Para activar el giro de la pantalla.

Inactividad: Define el tiempo de apagado de la pantalla.

Tamaño de letra: Para configurar el tamaño de fuente.

- Almacenamiento: Compruebe el espacio ocupado por cada aplicación o conjunto de aplicaciones, tanto en teléfono como en SD.

Tarjeta SD y el uso de memoria del teléfono.

Desactivar tarjeta SD y borrar la tarjeta SD.

- Batería: Ver el estado de la batería.
- Aplicaciones: Administrar y eliminar las aplicaciones instaladas.

C) Personal/Cuentas

- Cuentas y sincronización: Las aplicaciones pueden sincronizar, enviar y recibir datos en cualquier momento

- Seguridad

Desbloqueo de pantalla : Use el patrón, PIN o contraseña de bloqueo de pantalla .

Bloqueo de la tarjeta SIM: Use el código PIN proporcionado por la tarjeta SIM.

- Idioma y entrada: seleccione el idioma deseado.

- Copia de seguridad y restablecimiento

Restablecimiento del DRM: Borra todas las licencias DRM.

Restablecer datos de fábrica: borra todos los datos del teléfono.

D) Sistema

- Fecha y hora: Establezca hora y fecha.

- Programar encendido y apagado

- Accesibilidad

Texto grande: para que muestre el tipo de letra grande.

Botón de encendido para finalizar llamada

Pantalla giratoria

Inicio rápido

- Opciones de desarrollo:

Depuración USB: Utilice esta función al estar conectado con un PC para depurar datos.

- Acerca del teléfono

12. RELOJ

Seleccione el icono del reloj. Podrá ajustar la alarma, elegir el formato del reloj, etc.


13. RADIO

Introduzca unos auriculares para conseguir señal de antena e inicie el icono de radio FM. A través de este programa, se puede escuchar la radio FM en el dispositivo debido.

14. CONTACTOS

Seleccione el icono de contactos. Se mostrarán los contactos del teléfono y de la tarjeta SIM, por orden alfabético.

Haga clic en el icono buscar, para realizar búsquedas de contactos.

Seleccione el icono  para crear un nuevo contacto.

Marcación rápida: en el menú del teléfono, vaya el icono del teléfono y pulse el botón menú. Seleccione marcación rápida y configure cada una de las teclas numéricas para cada contacto.

15. GALERÍA

Seleccione el icono de la galería. Aparecerán las fotografías y vídeos tomados según su origen. Para ver los archivos seleccione la carpeta y posteriormente el archivo deseado. Arrastre a izquierda o derecha para pasar de un archivo a otro. Mantenga pulsada una imagen y podrá usarla como:

- Establecer como icono de contacto\Wallpaper
- Recortar la fotografía
- Enviar por Bluetooth, mensajería, correo electrónico, etc.

Reproducción de vídeos: EN galería seleccione los videos disponibles. En la pantalla se mostrarán las funciones de reproducción.

16. CAMERA

Una vez instalada la tarjeta de memoria SD, podrá seleccionarla como destino para guardar imágenes y vídeos realizados por la cámara del dispositivo.

Seleccione el icono de la cámara. Podrá tomar una fotografía directamente pulsando el botón de disparo. Puede cambiar a la cámara delantera con el selector de cámaras. Pulsado el icono de la cámara de vídeo pasará al modo de vídeo.

Una vez realizada una fotografía, esta se guardará con el nombre de la hora y fecha automáticamente.

Pulse el botón de ajustes de cámara para seleccionar los ajustes de cámara deseados.

17. MENSAJES

Enviar SMS: Seleccione el icono de mensajes y seleccione crear nuevo mensaje. Seleccione el destinatario y redacte el mensaje con el teclado de la pantalla. Si supera el número de caracteres permitidos en un SMS, el mensaje pasará automáticamente a MMS. Una vez terminado pulse enviar.

Puede adjuntar archivos al mensaje pulsando el icono del clip.

NOTA: EL mensaje sólo puede soportar 100 destinatarios.

18. MUSIC

El reproductor de música puede reproducir archivos de audio digitales

almacenados en la tarjeta de memoria de la unidad. La música es compatible con los siguientes formatos de archivo de música: AMR, M4A, MIDI, MP3, WAV, OGG.

19. ADVERTENCIAS Y PRECAUCIONES

- 1) Mantenga el dispositivo lejos del alcance de los niños pequeños.
- 2) Mantener la unidad siempre seca, proteger de la lluvia, humedad y cualquier líquido que pueda contener minerales que corroan los circuitos electrónicos.
- 3) Asegúrese que cuando realiza la operación de carga de batería no tiene las manos mojadas ya que esto puede provocar una descarga eléctrica, lesiones a personas o daños en la unidad.
- 4) Evite exposiciones de la unidad a altas temperaturas. Las altas temperaturas pueden acortar la vida de los dispositivos electrónicos, dañar las baterías y deformar o derretir piezas de plástico.
- 5) Evite exposiciones de la unidad a bajas temperaturas.
- 6) No guarde el dispositivo en lugares sucios, polvorientos, etc.
- 7) Aleje el dispositivo de cualquier fuente de calor.
- 8) No intente desmontar la unidad, esto supondría la pérdida automática de la garantía.
- 9) Evite golpes, caídas, etc.
- 10) No pinte la superficie de la unidad ni añada adhesivos a la misma, ya que puede provocar obstrucciones que provoquen el funcionamiento inadecuado.
- 11) Limpie la unidad con un paño suave y seco. Nunca use productos químicos nocivos, detergentes, productos de limpieza, etc.

"Las especificaciones pueden cambiar sin previo aviso"

IMPORTADO

I.R.P., S.L.

AVDA. SANTA CLARA DE CUBA 5

SEVILLA, SPAIN

BRIGMT**N**



DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN60950-1:2006/A11:2009/A1:2010

EN 62311: 2088

EN 301 489-1 V1.9.2:2011-09

EN 301 489-17 V2.1.1:2009-05

EN 300 328 V1.7.1: 2006-10

ETSI EN 301 489-1 V1.9.2(2011-09)

ETSI EN 301 489-17 V2.1.1(2009-05)

Descripción del aparato:

Modelo BRIGMTON **BPHONE-450QC**

Dispositivo de conexión a internet

Importador: I.R.P., S.L.

Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.

BRIGMT **N**



BPHONE-450QC

Instruction Manual

- 1. CONTROLS**
- 2. USE AS DISK STORAGE**
- 3. WI-FI**
- 4. BLUETOOTH**
- 5. CALL**
- 6. E-MAIL**
- 7. CALCULATOR**
- 8. BROWSER**
- 9. SOUND RECORDER**
- 10. CALENDAR**
- 11. SETTINGS**
- 12. CLOCK**
- 13. RADIO**
- 14. CONTACTS**
- 15. GALLERY**
- 16. CAMERA**
- 17. MESSAGES**
- 18. MUSIC**
- 19. WARNINGS AND PRECAUTIONS**

1. CONTROLS

Button	Function
Back	<ul style="list-style-type: none">• Into the back interface can return to a layer of directory
Home	<ul style="list-style-type: none">• On any application or interface, press the button to return to the Home interface
	<ul style="list-style-type: none">• Press and hold the application window can be opened recently executed
Menu	<ul style="list-style-type: none">• Access to menu options
Power	<ul style="list-style-type: none">• Press to lock the screen• Long presses POWER key, choose to Power off, Airplane mode, Silent Mode, Meeting mode, General mode.
Side key	<ul style="list-style-type: none">• Adjust the volume

2. USE AS DISK STORAGE

To the computer to transfer music, photos and other files to your memory card, you must first mobile phone memory card is set to U disk.

The phone memory card set to U disk

Using the USB cable to connect your phone to the computer. The status bar will show the notification icon. Open the Notifications panel. In the notification panel, touch USB connection, and then in the pop-up page, touch the "Turn on USB storage". Connected as USB Storage: USB storage, Media device, Camera(PTP).

Note: If you connect your phone to your computer, select Open the USB storage device, the phone will not recognize the memory card. You will not be able to use certain applications, such as camera phone.

U disk to uninstall from the computer

Open the notification panel.

3. WI-FI

Turn on Wi-Fi and connect to a wireless network:

- Press menu, then touch System settings> Wireless and network.
- Select the Wi-Fi check box to turn on the Wi-Fi. The phone will automatically scan for available wireless networks.
- Touch the Wi-Fi settings. Then the Wi-Fi network list will show the Wi-Fi network to find the network name and security settings (open network or WEP, WPA/WPA2 encryption).
- Touch one of the Wi-Fi network to connect to. When you select an open network, the phone will automatically connect to the network. If you select WEP, WPA/WPA2 encrypted network, you must first enter the appropriate password, and then touch the connection.

Note: When the phone is connected to a wireless network, the status bar will display Wi-Fi icon and shows the approximate signal strength. If you

touch the phone is currently connected wireless network, it displays the name of the Wi-Fi network, status, signal strength, security and IP address. If you want to remove the phone's wireless network settings, touch this window is not saved. If you want to connect to this network, you must re-enter these settings.

Note: Unless you choose not to save encrypted network, otherwise the next phone to connect to the encrypted wireless network previously connected, do not need to re-enter the appropriate password. Wi-Fi networks on their own search, which is the phone without having to perform additional steps can be connected to the Wi-Fi network.

Connection to other Wi-Fi networks

- Wireless and network on the screen, touch the Wi-Fi settings. Find Wi-Fi networks will be displayed in the Wi-Fi network list.
- Touch other Wi-Fi networks can be connected to the network.

Note: In addition, the phone is also available on the Internet via GPRS. GPRS SIM card in our current default boot is open, the user can manually select the specific location in the Settings> SIM card management> data connection, touch the "data connection" to close the current SIM card data connection.

4. BLUETOOTH

Turn on Bluetooth or set the phone can be detected:

- Press menu, then touch System settings.
- Touch the wireless network, and then select the Bluetooth check box to turn the Bluetooth function. Turned on, the status bar will appear Bluetooth. Touch the "SEARCH FOR DEVICES" will begin to search for Bluetooth devices within range.
- Touch the Bluetooth settings, all discovered devices are displayed in the bottom of the list of Bluetooth devices. (Click on the Bluetooth name, Bluetooth set to can be detected. So that other Bluetooth devices within range will be able to find the phone.)

Important: The phone can detect the most short time of two minutes.

Pairing and connecting Bluetooth headset:

- Press menu, then touch Settings.
- Touch the "SEARCH FOR DEVICES" will begin to search for Bluetooth devices within range. If the list cannot find your device, touch the scanning equipment, re-scan again.
- Make sure that you want to pair with Bluetooth devices is set to the detection mode
- Touch the headset in the device list to match.

NOTE: Bluetooth devices generally need to enter a password to pair. More

than "0000" as the default password. The pairing and connection status will be displayed below the headset in the list of Bluetooth devices. When Bluetooth headset is connected to the phone, the status bar will display the Bluetooth connected icon. You can start using the headset to make or receive calls.

Interrupt the connection with the Bluetooth headset

- Press the Menu> System settings> Wireless and Networking> Bluetooth Settings.
- In the list of Bluetooth devices, touch or tap and hold hands-free headset is connected.
- Touch the icon settings. Then you choice the "Unpair".

5. CALL

Start the dial-up: Open the main application interface to touch the dial. Enter the phone number in the dial box.

- Call: In the dialer interface, enter the number you want to call. Click to dial to let you choose to use that SIM card dialing. Fuzzy matching based on the input number to search for local contacts and contact information, enter the number displayed in the query results. Fuzzy matching phonetic including contact number and contact name. Click a search results will recall the number. For more information call the extension; can click on the bottom of the screen after the call is connected, the dial pad to open the input interface, enter the extension number, or directly on the menu select "pause time of 2 seconds and extend the waiting time to dial the extension.

- Phone call log: Set aside and then heard a phone number in the menu of the phone call records. The lower left corner of each phone records will show the phone inbound and outbound. Can call the situation: inbound, outbound and missed screening the call records.

Click on the single records, direct dial a phone number. Click on the small arrow of the right side of the phone records, you can view the details of the section record. Press and a call log to bring up the Edit menu: Remove from call log, edit number before call.


- Answer call



- End call



- End call and send a text message

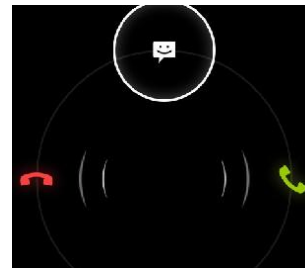

- Proximity sensor: According to the distance of the phone with the human body, and automatically adjust the phone backlight switch. During a call, the phone to your ear, the phone screen backlight will automatically turn off can be a good power-saving and prevent inadvertently.

6. E-MAIL

G-mail is Google's free webmail service. Can permanently keep your important messages, files and pictures, use the search quickly and easily find any desired content.

Note: multiple functions need to use a G-mail account, such as: synchronize contacts and calendar.

7. CALCULATOR

Calculator can carry out some simple arithmetic.

Touch the number keys followed by a blank box display.

The calculator interface, press the MENU button, select the Advanced panel, or hold down the screen to the left sliding switch to high-level panel.

8. BROWSER

You can visit the website and download songs, pictures, video, games, etc.

- On the browser screen, then touch the address bar enter the URL.
- Use the keypad to enter a web address. You enter the address at the same time, in line with the web address will appear on the screen. You can touch the URL to go directly to that page or continue to enter the URL.

9. SOUND RECORDER

The recorder can record sound, and quickly send via MMS or Bluetooth, can also be recorded sound as ringtones.

- 1) Click on the program recorder.
- 2) Keep the cell phone microphone near the sound source.
- 3) Click the recording or start recording the sound, click on the stop or playback.

All recordings are saved in the default music program in Sound Recording folder.

10. CALENDAR

Into the calendar program. The default display to the month the way.

There are four kinds of display mode:

- 1) Day
- 2) Week
- 3) Month
- 4) Agenda

11. SETTINGS

A) Wireless and network

SIM management: Touch to select the SIM card or disable the SIM card, disable the status bar shows the flight mode. The default SIM card, you can choose the voice telephony, video telephony, information and data connection is turned on or choose to use that SIM card.

- Bluetooth
- Data usage: Open or close the data connection of the SIM card, view the SIM traffic usage.
- Airplane mode: Open the airplane mode, the mobile phone mobile network related services be banned.
- VPN settings
- Mobile networks
- GPRS transfer prefer

B)DEVICE

- Audio profiles: This option for you provide the mobile phone in incoming call, announcement of the bell ring set state. Include: vibrate volume, phone ringtone, notification ringtone. In order to adapt to the users in various environment.
- Display

Brightness: The brightness to adjust the screen brightness.

Wallpaper: Set wallpaper, choose wallpaper from gallery, live wallpapers, video wallpaper, wallpapers.

Auto-rotate screen: Rotating the phone changed direction.

Sleep: Screen standby time.

Font size: Set the phone to the font size.

- Storage

Default write disk: USB storage, SD Card.

SD card & phone memory usage.

Unmount SD card and erase SD card.

- Battery: Display the battery.

- Apps: Manage and remove installed applications.

C) PERSONAL

- Accounts and sync

Applications can sync, send and receive data at any time

Applications sync data automatically.

- Security

Screen unlock: Use pattern, PIN or password lock screen.

SIM card lock: The SIM card lock to enter the PIN (4-8 digits) can be set SIM-locked.

The SIM card PIN (Personal Identification Number) is to prevent the illegal use of SIM card. The PIN code is usually provided with the SIM card. The initial value provided by the service provider.

Modify the PIN code is locked, you need to open the "SIM lock", then enter the Change Password interface, the phone will automatically prompt the old PIN code input, and asked to enter two new PIN code, the last phone will be prompted for your PIN modified successfully. Three times in a row to enter the PIN code has errors, the SIM card PIN code will be automatically locked and the PUK code is usually provided with the SIM card. If you do not, should go to the service provider to obtain this password.

- Language and input: Select language

5) Backup and reset

DRM reset: Deletes all DRM licenses.

Factory data reset: Erases all data on phone.

C) SYSTEM

- Data and time: Set a time and date.

- Schedule power on/off: Set time turns on/off the phone time.

- Accessibility:

Large text: Set the phone to display the font is large.

Power button ends call: During a call, pressing power ends call instead of turning off screen.

Auto-rotate screen: Rotating the phone changed direction.

Quick boot: enable/disable quick boot.

- Developer options

USB debugging: USB debugging only for development. Use this function can be in computer and mobile duplicate data between devices.

Stay awake: After open charging screen will not be dormancy.

Allow mock locations

- About phone: Check status information and use electricity, etc.

12. CLOCK

Click the "set alarm" to enter alarm, press the menu:

Desk clock: Return desk clock.

Add alarm: Add an effective alarm clock.

Settings: Edit the settings of the alarm clock.

13. FM RDIO


Through this program, you can listen to FM radio on the device due to the FM radio through the wired headset as an antenna to receive signals, before the use of this procedure make sure that access to the original equipment of headphones, listen to when you can switch the sound output way for a speaker or wired headset.

14. PEOPLE

- Open the main application interface> People.

The default display phone contacts and the SIM card contacts, the contacts are sorted according to the first letter of the alphabet.

Click the Search icon, enter the contact search interface.

Click " " sign to create a new contact.

- Search for a contact

Enter numbers or letters and the list name part of the agreement will be displayed in the search results.

If there is no search to match the contact, the interface will appear "None found".

- Speed Dial

1 for voice mail.

2-9 numbers, click you can add a speed dial number, select the contacts as speed dial, caller.

State: Successfully set up the dialer interface and long press the number keys to dial the contact number.

15. GALLERY

- Open the gallery: Open the main application interface, the Touch Gallery. The Camera screen, press the Menu key to open the menu, then select Gallery

- Use a photo: Take a picture, you can also view photos or photos to share

with friends.

- View photos:

In the picture on the screen, touch the album to view pictures in the albums.

Touch the thumbnails to view pictures full screen.

You can choose to display small or large thumbnails. Hold down the screen to drag to the left to view the next photo or drag to the right to view the previous photo.

The list of albums or photos, press and hold the photo to the left scroll to view a photo, or right to scroll through a photo. Can make the following operation

- 1) Set as Contact icon\Wallpaper
- 2) Crop picture
- 3) Use Bluetooth, Messaging, Email to send pictures
- 4) Use video. After shooting video, you can also view the video or will video and close friends to share.
- 5) Play videos:

In the gallery screen, touch the video album, and then touch you want to watch the video, you can start playing the video.

Touch screen will display the player control keys.

16. CAMERA

- Prepared in advance : Installed before using the camera or video camera memory card. All the photos taken by camera phone or video will be stored in the memory card.


- Turn on the camera: Open the main application interface, touch the camera. If you want to photography, sliding control is switched to the shooting mode.

Touch the icon() switch taken before and after.

- Take a picture


- 1) Touch the icon()
- 2) After shooting the photo automatically to the camera time for the file name, save to library default camera pictures folder.
- 3) Touch the preview pane button to view photos.
- 4) Touch the Settings button on the interface of the camera to select camera settings.


17. MESSAGES

Send SMS: APPS>Messaging , touch the icon() to compose new message. Write message:

a. Click the "receiver" input box to start the input method, click the "type message" input box to start the Input Method, you can input characters.

b. Touch the icon(),sending the edited information.

c. Touch the icon(),enter the "people" select contacts.

Touch the icon(),can attach many types of attachments, additional attachment, the message is automatically converted into MMS.

Note: At present, the mobile phone mass can only support up to 100 recipients.□

18.MUSIC

Music can play digital audio files in the phone memory card. The music supports the following music file formats: AMR, M4A, MIDI, MP3, WAV, OGG.

19. SECURITY WARNINGS AND PRECAUTIONS

- 1) Mobile phones and their parts in the reach of children.□
- 2) Phone to keep dry, rain, humidity and all types of liquid can contain minerals that will corrode electronic circuits.
- 3) When charging the battery do not use wet hands to reach the phone, it will cause electric shock, injury to person or damage to the phone.
- 4) Avoid put the phone in the high temperature environment. High temperatures will shorten the life of electronic devices, damage batteries, and distort or melt some plastic parts.
- 5) Avoid placing the phone in low temperature environment. When the temperature rises inside the phone will be able to produce water vapor to cause damage to the electronic circuit.
- 6) Avoid putting the phone in dusty, dirty place, or cell phone parts may be damaged
- 7) Avoid phone in the vicinity of lighted cigarettes, open flame or any heat source.
- 8) Do not disassemble the phone, non-professional approach will result in damage to the phone.
- 9) Do not drop, knock, or shake the phone from a height, rough handling can damage internal circuit boards.
- 10) Do not paint the phone, as paint can clog the headphones, microphones or other removable accessories, and lead to not work properly.
- 11) Use a clean, soft, dry cloth to clean the camera. Prohibit the use of harmful chemicals, detergents, liquid cleaners mobile phone, etc.

"Features can change without notice"

Imported: I.R.P., S.L.
Avda. Santa Clara de Cuba 5
41007 Sevilla
Spain



BRIGMTON

DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN60950-1:2006/A11:2009/A1:2010
EN 62311: 2088
EN 301 489-1 V1.9.2:2011-09
EN 301 489-17 V2.1.1:2009-05
EN 300 328 V1.7.1: 2006-10
ETSI EN 301 489-1 V1.9.2(2011-09)
ETSI EN 301 489-17 V2.1.1(2009-05)

Description of apparatus:

BRIGMTON Model **BPHONE-450QC**
Mobile Internet Device

Importer: I.R.P., SL
Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.