Dear Customer!

Congratulations on buying this emporia mobile telephone! You have made the right decision.

Scope of delivery: Mobile telephone, charging device, battery, instructions

1 Controls

Speaker

Display (= Screen)

Arrow Keys
- On standby:
△: Favourites (pre-set: Alarm Settings)
▽: Enter phone book contact list
- In menu and phonebook: scrolling

[ok] Pick-up/OK/Call list-Key
- Calling: Enter the number, then press [ok]
- Answering an incoming call: Press [ok]
- In menu: Confirm selection
- On standby: Enter call list (dialed, received, missed)

M1, M2, M3 -quick dial button
- long press or short press + OK for calling

1 Voicemail

*** - Key**
- In standby:
• Press twice: + (for international prefix, e.g +44 for UK)
- For SMS: Special characters:
(, . ‘ ‘ ? ; : ! “ ’ @ _ ~ & + - ( ) < > { } [ ] % = / \ # * $ § ...)

0 - Key
- Press and hold to connect with voicemail (= answering maschine)
- For SMS: Space

 # - Key
- SMS: Switch between capital, small letters & numbers
- Silent mode activate/deactivate

16 SAFETY INSTRUCTIONS

Switch off mobile telephone in **hospitals** or near medical devices. There should be a minimal distance between pacemakers and switched-on telephones.

Do not drive a **vehicle** while holding a mobile phone in your hand. Follow the laws and traffic rules of the country you are in.

The mobile phone must be switched off while you are in an **airplane.**

The telephone must be switched off near **petrol stations** or other areas with explosive materials.

Never direct **LED flashlight** into the eyes of humans or animals! (Protection class 3)

SAR-value: The maximum weight determined by the EU is 2.0 W/kg. This model has a maximum of 0,354 W/kg.

17 INTENDED USE

This mobile telephone is robust and intended for mobile use. It is to be protected from moisture (rain, bathroom...) and impacts. Do not expose to prolonged direct sunlight.

Other use as described above leads to damage of product and furthermore is associated with hazards such as electrical shock, fire and so on. The entire product may not be altered nor rebuilt nor can the housing be opened.

The power adapter is designed for use in household wall outlets to public electricity grids with 230 volts / 50 Hz (10/16A) voltage.

18 TECHNICAL DATA

Dual band GSM 900/1800MHz
size: 103 x 51 x 18,5
weight: 110 g

Battery: Li-Ion 3.7V / 1000mAh
standby: 320 h
talktime: 240 min

Hotline: UK: 0800 472 5400 IR: 066 77 17535
emporia Service Center Industriezeile 36 4020 Linz Austria www.emporia.at
PartNo: 36132-ENG, ENGLISH, V32_V1.2TL_201109

emporia CLICK

End/Back/Delete/Menu/ On/Off-Key
- In standby: Enter the menu
- In menu: One step back
- Writing numbers or text: Delete
- During a call: Terminate
- On/ Off: Press for 2 sec.

LED-lamps:
Envelope: New Message
Earphone: Missed call
Battery:
- Blinking: Low battery, Charging

Camera

Torchlight

Camera-key
-Trigger button

Emergency button

Volume Control + & −
Control the handset volume
− incoming call: turn ringer off

Battery door

2 INSERT SIM CARD

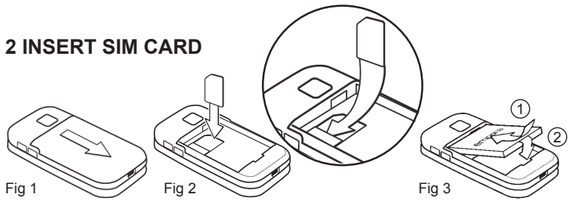

Fig 1 Fig 2 Fig 3

Fig. 1: Remove battery cover (as shown).
Fig. 2: Slide SIM card in with the gold contact facing down.

3 INSERT BATTERY AND CHARGING

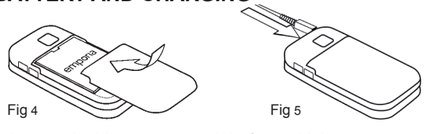

Fig 4

Fig 5

- Fig. 3: Insert battery (gold contacts on right front side).
- Fig. 4: Close battery door: slide cover to closed position with a ‘click’.
- Fig. 5: Plug charging cable into the socket on the side of the phone
- Charging: Battery indication bars in upper right corner of the display are moving and the LED on the upper side of the closed phone is on.
- Full battery: Bars in upper right display corner are solid.

Note: Charge battery for at least 2 hours before first use!

4 DISPLAY SYMBOLS (SCREEN)

battery strenght | signal strenght | roaming mode
new SMS | alarm on | call diversion
ringtone off | missed call
Bluetooth on | Bluetooth headset connected
profile „maximum“ ON (rington volume very loud)
profile „Meeting“ ON

5 FIRST STEPS

Switch on the phone: press power on/off-key for 2 sec.
Switch off by pressing power on/off for 2 seconds again.
When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with [ok].
PIN-Code: The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.
• Switch off your PIN-Code: In menu: **Settings → Security Settings → PIN → PIN off.**

Standby mode:
In standby mode the phone is turned on, but no active applications (calling, messaging, etc.) are running. To get into standby mode, when you are e.g. in the settings menu, press repeatedly.

Entering Menu:
• Press - key.
• Scroll through menu points: with ▽ and △.
• Confirm: with [ok].

Note: due to inactivity phone lights and screen turn off after a while. To turn on again, press any key.

Pick up call: Press [ok]- key.
End call or **Reject call:** Press - key.

Dial: Enter the telephone number via the keypad (including area code with 0) - start call with [ok].

Redial list: press [ok] - key, scroll through call list with ▽△ (all dialled, missed and received calls), select a number and start call with [ok].

Handsfree Speaking: To talk without holding the phone to your ear, switch on/off the handsfree function during a call: press [ok] **Handsfree.**
Note: if you stay at a menu point without confirming ([ok]), a help text with explanations pops up. To leave this, press .

6 PHONE BOOK

Save names and numbers (start with international prefix, e.g. +44 for UK) by entering menu in standby mode (Standby-Mode: chapter 5) with , then ▽,▽,▽,[ok] → Menu-Points: **Search name, Add contact, Own Number, Emergency numbers** (add, change, delete, status on/off), **Quick dial keys, Copy All, Edit Contact, Delete, Send contact by SMS, SMS in PhoneBK, Settings;**

Storing phone book entries (Name & Number): Enter menu with → continue to **Phone book:** △,△,△,[ok] → continue to **Add contact:** ▽, [ok] →Enter name via the keypad (See chapter 8 *Write SMS* for text entry) ▽, →Enter number, ▽ and to **Save**.

Searching phone book entries:
In standby mode: open the phone book with ▽ :
• Scroll through the entries with ▽ and △ or:
• Search names: enter the initial letters of the searched name via the keypad (scroll through with ▽). When the requested name is shown, press [ok] to start a call.

Add phone book entry via SMS:
In menu **phonebook → SMS in PhoneBK** to turn function to receive phonebook entries via SMS message **on/off,** or specify that **only phone book contacts** can send entries to you. The phone number will be saved automatically in your phone book when you receive a SMS with the following content: #name#number# e.g.: #Tom#+491509876543#

Buttons M1, M2, M3:
Store or change your favorite numbers: Enter menu → **Phone book → Quick Dial keys** → select M1, M2 or M3 →[ok] (Ok). To add: enter new name and number or press [ok] (Search) to access the contact list and store an existing contact. To edit: Delete and enter new name and number.

7 EMERGENCY FUNCTION

You can store a total of 5 emergency numbers (family, neighbours, friends, emergency services). In case of emergency these preselected numbers will be dialed automatically in a sequence, if the emergency key on the back of the phone gets pressed and held.
A continuous warning tone then starts in “loudspeaker mode” during emergency, so you and people nearby are warned due to the emergency! If the first number cannot be reached, the second number will be called automatically.
If the second number in row cannot be reached, the third will be called. (max. 3 rotations of the 5 numbers).
Note: To avoid getting caught on a mailbox, the reached person has to confirm your emergency by calling back.

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 112 will be dialed.

Saving emergency numbers: Enter Menu → **Phone book → Emergency numbers → Add Emerg. No.** → choose Emergency number (1-5) → set if it’s a private number or a help organisation → pick contact from phone book → done
Note: select emergency number: private number (has to confirm as explained above) or official service number, e.g.: ambulance, police, etc. (no confirmation call required).

Switch emergency function On / Off: Enter menu: **Settings → Emergency numbers → On/Off.**
Note: If you want to save numbers from official services, police, fire department, etc. as emergency numbers, you have to clarify this with these institution. No liability will be assumed for possible costs incurred if you dial accidentally.

8 SMS MESSAGES

SMS (Short Message Service) are written messages with a maximum of 160 characters.

Receive SMS: A short signal and a written information on the display inform you about a new, incoming SMS message. Read the message immediately by pressing [ok]or see a list of messages which have already been received in the menu → **Messages → SMS → Received SMS.**

Write SMS: With Enter menu: → **Messages → SMS → Write new SMS:** The text entry is done by the keypad.

1 . , ! ? ‘ “ @ : 1	5 j k l 5 £	9 w x y z 9 ý þ
2 a b c 2 ä æ å à	6 m n o 6 ö ø ó	0 space; 0
3 d e f 3 è é ê	7 p q r s 7 ß $	* special character: , . ? ; : !
4 g h i 4 ì í î ï	8 t u v 8 ü ù ú	“ ’ @ _ ~ & + - ( ) < > { } [ ] ...

Switch between different entry methods by pressing #
abc: only small; **Abc:** first letter capitalized; **ABC:** all CAPITAL; **123:** Numbers

Send SMS: Select **Send** with 2x [ok] and enter number or select from phone book (2x [ok], select contact with [ok]). Press [ok]. to send SMS.

9 MMS MESSAGES

MMS (Multimedia Message Service) are messages incl. pictures, audio, etc.
First time use: Menu →**MMS →MMS Settings →MMS account →choose operator**

Send MMS: enter Menu with **Messages → MMS → Create new MMS:**

1. [ok] **(Edit)** → [ok] Add number: Enter number/ select phone book entry [ok]→ [ok] .
2. ▽ to **Subject** (this will be the headline of the message) → [ok]**(Edit)** → Insert message text → [ok]**(Done).**
3. Edit content: 1x ▽→ [ok] **(Edit)** → Insert text or picture: [ok]**(Options)** → ▽ to **Add picture:** [ok]→ open **phone:** [ok] → open **photos:** [ok]→ scroll to picture with ▽ △ →choose picture with [ok] [ok] **(done).**
If you have problems at the first time sending MMS, contact your operator to check MMS settings.

10 CAMERA:

Take picture: **press** camera-button to start camera → press to take picture, store with [ok].
Camera settings: , ▽: shutter sounds, image size, white balance
Picture gallery: menu → select **Pictures,** scroll to next picture with ▽ and view with 2x [ok].
• Pictures: → **Option: View, Send as MMS, Use as background, Use for contact,** (choose the phone book entry, [*note: only contacts from phone memory, not from SIM-card*]. Calls to/from this contact will then show the linked picture on the display), **Rename, Delete, Delete all pictures.**

11 UTILITIES:

Bluetooth:
• Switch on: In menu → **Settings** [ok] → **Bluetooth** [ok] → **Bluetooth on/off** [ok].
• Pairing: menu **Settings** [ok] → **Bluetooth** [ok]→ **Connections** [ok]→ **Search for new device** [ok]→ select the device you want to pair, [ok]. Next time you turn on Bluetooth, connection will start automatically.

Alarm:
Standby mode 1x △ → **Status** On/Off: to switch Alarm clock on or off → , ▽ **Time:** set the time, ▽ , **Repeat:** set repetition (once, daily, customized).
If the alarm rings, end with [ok] . Use mute function with to reactivate the alarm after 1 minute.

12 OTHER FUNCTIONS IN SETTINGS

Enter menu with → continue to **Settings:** △, [ok] →
- **Sound & Alert:** To choose a phone profile (e.g. silent) and configure your personal settings.
- **Call waiting:** You can activate/deactivate and check status to get a notification about an incoming call while having a phone talk.
- **Network settings:** Choose **automatic** (automatic boot in a network) or **manual** selection (select a network manually).
- **Favorites** ▽ : your favorite functions pressing 1 button
- **Auto power on/Auto power off.**
- **Voicemail number:** Change the voicemail number.
- **Security settings:** Activate, deactivate or change PIN and phonecode (default phone code: 1234).
- **Restore Factory:** Reset the phone to factory settings.

13 DISPOSAL

- Disposal of packaging: Packaging materials are recyclable and shall enter the recycling process.
- Disposal of battery: Do not insert battery into household trash for disposal! You are obligated to return used batteries. These can be handed into local collection areas or to specialty shops.
- Disposal of Device: Take care of the environment: When this product is taken out of service, do not throw it into the household trash, but dispose it, where old devices are accepted and brought into an eco-friendly disposal/recycling procedure.

14 FREQUENTLY ASKED QUESTIONS

- **Screen shows “Insert SIM card! Only emergency call 112“:** Check the direction of the SIM card
- **A call failed:** Check the selected telephone number and area code again for accuracy (area code entered?).
- **The mobile telephone display is blank/black: Telephone is in energy saving mode (press any key) or it is switched off** (press for 2 seconds to switch on).
- The mobile phone **does not react:** Remove battery, re-insert and switch on the device. If there is still no reaction, refer to the service centre.
- **The charging procedure does not begin:** This can take several minutes. If there is no reaction after 10 minutes, refer phone to service centre.

15 DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Productions- and Sales-GmbH & Co.KG., hereby declare that the design of the device conforms to the relevant EU directives described below.

Item Description: Dual Band Mobile Phone Item Number: V32
Relevant EU Directives for Radio /Telecommunication Systems 1999/5/EU

R & TTE Directive 1999/5/EC CE **1313**

Harmonised EN Professional and Basic Standards:
The item corresponds to the following norms:
Health: EN50360 :2001
Radio: ETSI EN 300 328 V1.7.1. (2006-10)
ETSI EN 301 511 V.9.0.2. (2003-03)

Safety: EN 60950-1 :2006 +A11 :2009
EMV: ETSI EN 301 489-17 V2.1.1. (2009-05)
ETSI EN 301 489-7 V1.3.1. (2005-11)
ETSI EN 301 489-1 V1.8.1. (2008-04)

Signed:
Eveline Pupeter
General Manager

Issue date: 01.07.2011
Area of Issue: Linz/Austria