Infinix

RACE
MAX Q

User Guide / *Manuel d'utilisation* / دليل المستخدم

Contents

About Android

An Android phone can perform many of the same functions as a computer. But you can also adjust it to better suit your needs, to receive the information you want, and have fun at the same time. You can add and delete applications, or enhance them to improve functionality. At Android Market you can download a range of applications and games from a constantly growing collection. You can also integrate applications on your Android phone with your personal data and online accounts. For example, you can back up your track of your appointments, and engage in as much social networking as you like.

Applications

An application is a phone program that helps you perform a task. For example, there are applications to make calls, take photos and download more applications.

Getting started

Assemble & charge

SIM card in

Please according to the label on the phone. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

SD card in

Slide SD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

Battery in

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Charge up

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

Touch screen & keys

Touch tips
Here are some tips on how to navigate around your phone.
Touch
To choose an icon or option, touch it.

Touch & hold
To open special functions or additional options. Try it:
From **Application menu**, touch **Music** icon to enter
Music library, then touch and hold an artist, a song,
or an album, some options will be available to you.
For example: play, add to playlist, delete, etc.

Drag
To scroll through a list or move slowly, drag across
the touchscreen. Try it: on the Home screen, touch
Contacts icon to enter contacts list, you can drag
contacts list up or down to scroll list.

Slide
To slide by moving your finger up or down on the
touch screen quickly. Scroll through a list or move
quickly, slide across the touchscreen (drag quickly
and release).

Double-touch
Touch quickly twice to zoom in/out. For example,

double-touch a picture in Gallery to zoom in/out.

Zooming tips

When looking at maps, webpages or photos, place two fingers on the touch screen at once and pinch them together to zoom out or spread them apart to zoom in.

Note: Use the zoom function when you view photos, maps or when you browsing the web.

Rotate the screen

On some screens, the orientation of the screen rotates with the phone as you turn it from upright to its slide and back again. You can turn this feature on and off.

Key tips

Power/Lock key

- When powering off status, press and hold to turn on the phone;
- When powering on status, press and hold to enter phone options (Power off, Airplane mode, and so on);
- To save your battery, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing Power/Lock key;

- To wake up the touch screen, just press Power/Lock key again, and then drag the fingerprint icon downwards on the screen to unlock according to the indication on the screen.

Menu key
- Opens a menu with items related to the current screen/application.

Home key
- Press Home key to close any menu or app and return to the Home screen. If you are viewing the left or right Extended Home screen, open the central Home screen.
- Press and hold Home key to view the applications you have used recently.

Back key
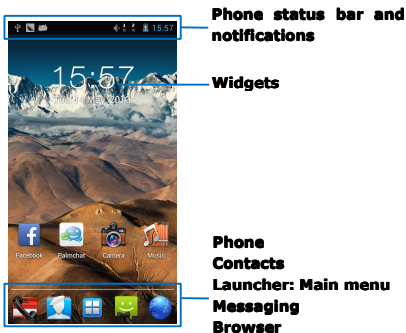- Press Back key to return to the previous screen you were working on.

Volume keys
- Press Volume keys to change the volume. When playing music or video files, press Volume keys to adjust media volume.

Home screen

Quick start: Home screen
The Home screen gives you all your latest information in one place. It's what you see when you turn on the phone. It is the equivalent of the desktop on a computer. It's your gateway to the main features in your phone. You can customize your Home screen with shortcuts, widgets, folders, and wallpapers.

Phone status bar and notifications

Widgets

Phone
Contacts
Launcher: Main menu
Messaging
Browser

You need slide the Home screen left or right to view more content in other panels on the Home screen. You can add shortcuts, widgets, folders, etc. to Home screen.

Note: Your Home screen might look a little different.

8

Application menu

Application menu
The Application menu, which you open from your Home screen, contains the applications that come installed with your phone.
The Application menu extends beyond the screen width, so you need to slide left and right to view all content.
To open the Application menu
1. On Home screen, touch **Launcher** icon.
2. Touch **APPS** tab.
To browse the Application menu
Open the Application menu, then slide the screen right or left.

Phone status bar and notifications

The status bar at the top of the screen contains icons that tell you about messages and phone status and shows what's going on in your phone. At the top you get notifications when there is something new or ongoing. For example, new message, missed call, signal strength, battery status and other information appear here.

Checking notifications and ongoing activates
You can drag down the status bar to open the

Notification panel and get more information. For example, view missed calls from Notification panel. You can also open running applications, such as the music player.

To open the Notification panel

Drag the status bar downwards.

To close the Notification panel

Drag the bottom of the Notification panel upwards.

To open a running application from the Notification panel

From the Notification panel, touch the icon for the running application to open it.

Dial pad

Make a call

Touch **Phone** icon on the Home screen.

In dialing screen, input number and touch **Dial** icon to dial the inputted number.

Options available during a call

During a call, there are some call options available to you. These call options can be seen only during a call. When a call is in progress, you can put it on hold, initiate a phone conference, mute your microphone etc.

Press **Volume keys** to adjust the call volume.

Text entry

On-screen keyboard

Touch the keys of the on-screen QWERTY keyboard to enter text conveniently. You can open this keyboard by touching a text field.

Communication

Messaging

Find it: Application menu > Messaging

You can compose, send and receive text messages from your phone, and also can compose, send and receive multimedia messages, which contain media files such as pictures, videos and audios.

When you view your messages, they appear as conversations, which means that all messages to and from a particular person are grouped together.

● **Compose new message**

1. From your Home screen, touch **Messaging** icon or find it: **Application menu > Messaging**.
2. Touch ▤.

3. To add recipient(s), touch ▣, then find and mark the contact name. To add more than one contact, mark the contact name for the desired recipients. You can also enter the recipient's phone number manually.
4. After you finish marking contact(s), touch **Ok**.

5. Touch **Type message** to enter your message text.

6. If you want to insert a media file, touch 📎, and select an attachment.

7. Select SIM, to send the message.

When editing message, press **Menu key**, some additional options will be available to you. For example, add subject, and insert smiley. You can touch the options to do actions.

● **Delete message threads**

1. From your Home screen, touch **Messaging** icon or find it: **Application menu > Messaging**.

2. Touch and hold the message thread.

3. Select the conversations you want to delete.

4. Touch 🗑, then touch **Delete** in the menu that pops up.

You can also press **Menu key** and touch **Delete all threads** to delete all message threads from the window.

● **Forward a message**

1. From your Home screen, touch **Messaging** icon or find it: **Application menu > Messaging**.

2. Touch the conversation containing the message you want to forward.

3. Touch and hold the message you want to forward.

4. Touch **Forward** in the menu that opens.

5. Add recipient(s), touch 🔲, then find and mark the

contact name. To add more than one contact, mark the contact name for the desired recipients. You can also enter the recipient's phone number manually.

6. Select SIM, to send the message.

● **Lock a message**

You can lock a message.

1. From your Home screen, touch **Messaging** icon or find it: **Application menu > Messaging**.

2. Touch the conversation containing the message you want to lock.

3. Touch and hold the message you want to lock.

4. Touch **Lock** in the menu that opens. A lock icon appears. Unlock a message by touching and holding the message and then touch **Unlock**.

● **Messaging settings**

1. From your Home screen, touch **Messaging** icon or find it: **Application menu > Messaging**.

2. Press **Menu key**, select **Settings** in the menu that opens.

3. You can change messages settings, such as delete old messages as limits are reached, request a delivery report for each message you send.

Contacts

Find it: Application menu > Contacts

The Contacts application offers you to store and manage all your contacts.

● **Add a contact**

1. From your Home screen, touch **Contacts** icon or find it: **Application menu > Contacts**.

2. Touch 🖼.

3. Select storage path to which you want to add this new contact.

4. Enter the information for the contact.

5. After you finish, touch **DONE**.

● **Search a contact**

1. From your Home screen, touch **Contacts** icon or find it: **Application menu > Contacts**.

2. Touch 🔍.

3. Input the first character of the name you are searching for in the cursor, and then all records meeting the conditions will be displayed. Search results will be different due to different input content.

● **Additional options**

From contacts list screen, press **Menu key**, some additional options will be available to you. For example, import/export, and share contact.

● **Contact groups**

You can assign contacts to groups to get quicker access to them from the Contacts application. It allows you to create a new group such as VIP, schoolmate, friends, family or co-worker.

To create a new group

1. From your Home screen, touch **Contacts** icon or find it: **Application menu > Contacts**.

2. Touch **Groups** tab.

3. Touch 🖼.

4. Input the information of group, then touch **DONE**.

To assign a contact to a group

1. From your Home screen, touch **Contacts** icon or find it: **Application menu > Contacts**.

2. Touch **Groups** tab.

3. Touch a group to which you want to assign contacts.

4. Edit the group.

5. Touch **Type person's name** to input the contact's name, then the corresponding contact entry will pop up, select the desired contact entry.

6. After you finish editing, touch **DONE**.

● **Favorites**

You can set contacts as favorites so that you can get access to them from the Contacts application.

To set a contact as favorite

1. From your Home screen, touch **Contacts** icon or find it: **Application menu > Contacts**.

2. From contacts list, touch a contact which you want to set as favorite.

3. Touch ☆. If you want to cancel the favorite, touch ★.

Call log
Find it: Application menu > Call log
Touch different tabs such as All, Received, Dialed, and Missed calls on upside screen of Call log interface, and then you can view different call logs.

Email
Find it: Application menu > Email
The Email application in your phone offers you to compose, send and receive emails through your regular email account.

You need create account first, and then create email to send. You can configure Email for most accounts in just a few steps.

● **Set up an email account in your phone**
1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. Enter your email address and password, then touch **Next**.
3. If the settings for the email account cannot be downloaded automatically, complete the setup manually. If necessary, contact your email service provider for detailed settings.
4. When you are prompted, enter a name for your email account, so that it is easily identifiable. The same name shows in the emails you send from this account.
5. After you finish, touch **Next**.

16

● **Create and send an email**

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. Touch ✉.
3. Enter recipients' addresses, and subject.
4. Compose email. Press **Menu key**, you can attach a file, select the type of attachment, and select the file which you want to attach from the list that appears.
5. If you want to add Cc/Bcc, press **Menu key**, then touch **Add Cc/Bcc**.
6. When you finish, touch ➤ to send the email.

● **Receive emails**

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. Touch ↻ to refresh, you can download new emails.

● **Read your emails**

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. In the email inbox, scroll up or down, and touch the email you want to read.

● **Reply to an email**

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. In the email inbox, scroll up or down, and touch the email to which you want to reply.
3. Touch ↩, or touch ⋮ to select **Reply all**.
4. Enter your reply, touch ➤ to send the email.

• Forward an email

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. In the email inbox, scroll up or down, and touch the email you want to forward.
3. Touch ⋮ to select **Forward**.
4. Enter recipients' addresses.
5. Touch ➤ to send the email.

• View all folders

1. From your Home screen, touch **Launcher** icon, then find it: **Application menu > Email**.
2. Touch ◢ at the top of the screen, then select **Show all folders**. You can also touch 🗁 at the bottom of the email inbox

Multimedia

Camera
Find it: Application menu > Camera

Take a photo or record a video with the camera in your phone. You can hold the camera horizontally or vertically. Share a photo or a video with your friends, or upload your photos and videos to a web service.

• Camera control overview
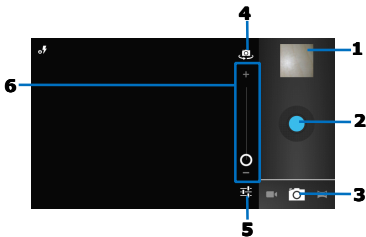
1	Preview your pictures or videos you captured
2	Take photos or record videos
3	Switch to camera mode, camcorder mode, or panorama mode
4	Switch between front camera and back camera
5	Settings
6	Zoom in or out

● **Take a photo**

- Adjust your picture size, sharpness, color effect, and other settings if you wish.

- Frame your subject on screen. You can zoom in or out by touching the Zoom icon.

- Touch the shutter icon on the screen.

The picture you just took is displayed for a moment, and then is displayed as a thumbnail.

● **Shoot a video**

- Switch to the camcorder mode

- Adjust the video quality, and other settings if you wish.

- Point the lens to the scene you want to shoot

- Touch the start icon.

- Touch the stop icon to stop shooting.

Music

Find it: Application menu > Music

The phone comes with a Music player that plays songs, listen to audio book and podcasts you have stored. It gives you a host of setting options to make your listening experience interesting.

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.

● **Music player**

Now playing — ◁ (controls)

Settings controls — ✕ / ↻

Song details
🎵 Unknown artist
🎵 Recording
🎵 recording_20130102 135906

Music controls — |◁ ▷ ▷|

Progress bar   **Total song time**

0:01   0:05
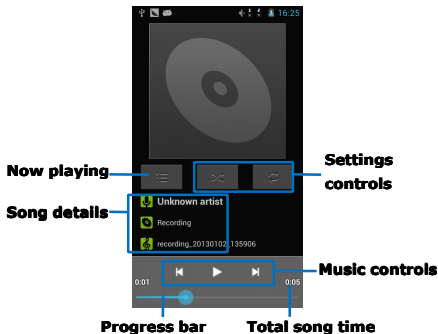
FM radio
Find it: Application menu > FM radio
The phone comes with an in-built FM Radio. You can
listen to FM radio stations, and add them to channel
list. You have to plug in an earphone, as the antenna
of the FM radio. You can listen to the radio either
through an earphone, or through the speaker in the
phone.

Gallery
Find it: Application menu > Gallery
The Gallery offers you to view photos and play videos
which are downloaded as well as those taken by the

phone camera.

From Gallery, you can also share your photos and videos with your friends, via Messaging, Bluetooth, or Email.

1. Touch an album to open it and view its contents.

2. Touch a picture or a video in an album to view it.

When viewing a picture, press **Menu key**, some additional options will be available to you, such as Slideshow, Edit, Rotate left, Rotate right, Crop, Set picture as, and Details.

Browser

Use your web browser to view and navigate web pages, add pages as bookmarks, and save pages for offline reading. You can open several windows at the same time and switch among them easily.

● **Open the web browser**

From your Home screen, touch **Browser** icon or find it: **Application menu > Browser**.

● **Manage bookmarks**

Bookmarks let you access your favorite and frequently visited web pages quickly. You can add bookmarks directly from your phone browser.

To bookmark a web page

1. When you are viewing the web page, press **Menu key**.

2. Touch **Save to bookmarks**.

3. If desired, you can edit the bookmark.

4. When you're done, touch **OK**.

Connect to networks and devices

Your phone can connect to a variety of networks and devices, including WLAN, Bluetooth; devices, such as headsets. You can also transfer files to/from your PC through the data cable.

Determine the network you are using

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.
2. Touch **More... > Mobile networks > Network settings > Access point names**. The name of the wireless service provider you are currently registered with is selected in the list.

Edit or create new access points

If you and your wireless service provider determine that you need to change the settings of your current access point name (APN) or to create a new one, you must obtain the APN and detailed settings from your provider.

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.
2. Touch **More... > Mobile networks > Network settings > Access point names**.
3. Touch an existing APN to edit it, or press **Menu key** and touch **New APN**. Enter the APN settings

that you obtained from your wireless service provider.

4. When you finished, press **Menu key** and then **Save**.

5. If you created a new APN, touch it in the APNs screen to start using it.

WLAN networks

WLAN is a wireless networking technology that can provide internet access at distance of up to 20 meters. To use WLAN on your phone, you access a wireless access point, or "hotspot". Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

TIP: Turn off WLAN when you are not using it, to extend the life of your battery.

● **Connect to WLAN network**

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.

2. Touch **WLAN**.

3. Check WLAN to turn it on. The phone scans for available WLAN networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

4. Touch a network to connect to it

If the network is secured, you are prompted to enter a password or other credentials (Ask your network

administrator for details)

● **Receive notifications**

By default, when WLAN is on, you receive notifications in the status bar when your phone detects an open WLAN network.

1. Turn on WLAN, if it's not already on.

2. In the WLAN list screen, press **Menu key** to open Advanced options, check Network notification. You can uncheck this option to stop receiving notifications.

Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

● **Turn Bluetooth on/off**

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.

2. Touch **Bluetooth**.

3. Check or uncheck Bluetooth to turn it on or off.

● **Pair with Bluetooth devices**

You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.

1. Touch **Launcher** icon, and from Application menu, touch **Settings**.

2. Touch **Bluetooth**.

3. If Bluetooth is not turned on, check Bluetooth to turn it on. Your phone scans for and displays the IDs

of all available Bluetooth devices in range.
4. If the device you want to pair with is not in the list, touch **SEARCH FOR DEVICES**.
5. Touch the ID of the desired device in the list to pair it.

Connect to a computer via USB

You can connect your phone to a computer with a USB cable to transfer music, pictures, and other files between your phone's SD card and the computer. You can not share your phone's data connection and SD card via USB cable at the same time. If you are using USB tethering, you must turn that off first. The connection to USB interfaces has to be limited to USB 2.0 version or higher. The connection to so called power USB is prohibited.

Working with secure certificates

If your organization's VPN or WLAN Network rely on secure certificates, you must obtain the certificates and store them in your phone's secure credential storage, before you can configure access to those VPN or WLAN networks on your phone.
If your network administrate instructs you to download the certificates from a website, you are prompted to set a password for the credential storage when you download the certificates.

Install secure certificate from SD card

1. Copy the certificate from your computer to the root of the SD card.
2. Touch **Launcher** icon, and from Application menu, touch **Settings**.
3. Touch **Security**.
4. Touch **Install from SD card**.
5. Touch the file name of the certificate to install. Only the names of certificates that you have not already installed on your phone are displayed.
6. If prompted, enter the certificate's password.
7. From WLAN list, search and select the certificate.

Settings

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

WLAN	Turn WLAN on or off, scan available WLAN networks, or add the WLAN network.
Bluetooth	Turn Bluetooth on or off, search for available Bluetooth devices, and make your phone visible or

	invisible to other Bluetooth devices.
Data usage	Turn the mobile data traffic on or off, and keep track of your data usage details over a specified period of time.
More...	Turn Airplane mode on or off, and configure settings for VPN and mobile networks, and enable your phone to share its mobile data connection as a portable WLAN hotspot, or through USB tethering.
Dual SIM settings	Set preferences on how you use SIMs inserted in your phone.
Call settings	Manage and configure settings for voicemail, fixed dialing numbers, and so on.
Audio profiles	Configure how your phone rings, vibrates, or alerts you in other ways when you receive communications.

Display	Let you set the screen brightness, select to switch orientation when you rotate your phone, and configure other screen settings.
Storage	Let you check out available space on your phone's internal storage, phone storage and on your SD card.
Battery	Check battery status and battery level.
Apps	Manage downloaded, SD card and running applications.
Location access	Enable or disenable GPS satellites, and so on.
Security	Protect your phone by setting up different locks and passwords.
Language & input	Let you select the language for the text on your phone and for configuring the onscreen keyboard.
Factory data reset	Manage your personal data.

Accounts	Let you add, and manage supported accounts. Enable your phone synchronize data with the synchronization accounts that you add.
Data & time	Let you choose preferences such as format and time zone.
Schedule power on & off	Schedule automatic powering on/off of the phone.
Accessibility	Enable your installed accessibility services and adjust related settings.
Developer options	Set options for application development.
About phone	View information about your phone, such as status, and legal information.

Infinix